

Service Manual

ORDER NO.
ARP3463

PLASMA DISPLAY SYSTEM

PRO-150FD

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PRO-150FD	KUCXC	AC 120 V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
PDP-6010FD	ARP3453	EXPLODED VIEWS, BLOCK DIAGRAM, ADJUSTMENT, etc

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS	2
1.1 CONTRAST TABLE	2
1.2 CONTRAST OF PCB ASSEMBLIES	9
2. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	12
2.1 OVERALL CONNECTION DIAGRAM (1/2)	12
2.2 OVERALL CONNECTION DIAGRAM (2/2)	14
2.3 HNM BLOCK DIAGRAM	16
2.4 CONNECTOR PIN DESCRIPTION	17
2.5 HN MODULE ASSY (1/6) [8620 BLOCK]	18
2.6 HN MODULE ASSY (2/6) [8620_DDR BLOCK]	22
2.7 HN MODULE ASSY (3/6) [ETHERNET BLOCK]	24
2.8 HN MODULE ASSY (4/6) [HNM_USB BLOCK]	26
2.9 HN MODULE ASSY (5/6) [HNM_IO BLOCK]	28
2.10 HN MODULE ASSY (6/6) [HNM_POWER BLOCK]	30
3. PCB CONNECTION DIAGRAM	32
3.1 HN MODULE ASSY	32
4. DIAGNOSIS	34
4.1 DIAGNOSIS FLOWCHART	34
5. SERVICE MODE	37
5.1 DETAILS OF FACTORY MENU	37
6. DISASSEMBLY	38
6.1 DISASSEMBLY AND REASSEMBLY PRECAUTIONS FOR SPEAKER SYSTEM	38

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ∇ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

● Nos. indicate the pages and Nos. in the service manual for the base model.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56 x 10¹ \rightarrow 561 RD1/4PU $\begin{matrix} 5 & 6 & 1 \\ \hline \end{matrix}$ J

47k Ω \rightarrow 47 x 10³ \rightarrow 473 RD1/4PU $\begin{matrix} 4 & 7 & 3 \\ \hline \end{matrix}$ J

0.5 Ω \rightarrow R50 RN2HR $\begin{matrix} 5 & 0 \\ \hline \end{matrix}$ K

1 Ω \rightarrow 1R0 RS1P $\begin{matrix} 1 & R & 0 \\ \hline \end{matrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 x 10¹ \rightarrow 5621 RN1/4PC $\begin{matrix} 5 & 6 & 2 & 1 \\ \hline \end{matrix}$ F

1.1 CONTRAST TABLE

PDP-6010FD/KUCXC and PRO-150FD/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-6010FD/KUCXC	PRO-150FD/KUCXC	Remarks
NSP		<PCB ASSEMBLIES>			
	P181-1	MAIN Assy (US FHD R)	AWV2457	Not Used	
	P181-1	MAIN Assy (US FHD E)	Not Used	AWV2458	
		1..FUKUGO Assy(60FR)	AWV2473	Not Used	
	P169-2	2..SIDE IO Assty(US R)	AWW1274	Not Used	
NSP	P181-2	2..TANSHI Assy(50/60FR)	AWW1334	Not Used	
		1..FUKUGO Assy(60FE)	Not Used	AWV2475	
	P169-2	2..SIDE IO Assy(US E)	Not Used	AWW1285	
	P181-2	2..TANSHI Assy(50/60FE)	Not Used	AWW1335	
		HN MODULE Assy	Not Used	AWV2497	No.1
NSP NSP		<PACKING SECTION>			
	P167-2	Remote Contorol Unit	AXD1550	AXD1549	
	P167-3	Battery Cover(Gray)	AZN2680	Not Used	
	P167-3	Battery Cover(Black)	Not Used	AZN2681	
	P167-4	Operating Instructions (English, French, Spanish)	ARE1472	Not Used	
	P167-4	Operating Instructions (English)	Not Used	ARB1576	
	P167-5	Parental Caution	ARM1371	Not Used	
	P167-6	HDMI Caution	ARM1373	Not Used	
	P167-12	Label C(U)	AAX3501	Not Used	
	P167-12	Label C(UE)	Not Used	AAX3505	
	P167-18	Warranty Card KUC	ARY1196	Not Used	
	P167-18	Warranty Card EL	Not Used	ARY1123	
	P167-23	Upper Carton(608U)	AHD3580	Not Used	
	P167-23	Upper Carton(608EL)	Not Used	AHD3581	
		P167-31	Stand Pipe L Ass'y	AXY1186	AXY1188
	P167-32	Stand Pipe R Ass'y	AXY1187	AXY1189	
	P167-33	Base Cover Ass'y	AXY1198	AXY1199	



Mark	No.	Symbol and Description	PDP-6010FD/KUCXC	PRO-150FD/KUCXC	Remarks
		Shading Bord Assy	Not Used	AMR3722	No.10
	P167-39	Speaker System	SMW1986	Not Used	
	P167-39	Speaker System	Not Used	SMW1980	
		<REAR SECTION>			
NSP	P169-4	Name Label(608REG)	AAL2931	Not Used	
NSP	P169-4	Name Label(608EL)	Not Used	AAL2932	
	P169-6	Label A(U)	AAX3478	Not Used	
	P169-6	Label A(UE)	Not Used	AAX3481	
	P169-29	Label B50(U)	AAX3540	Not Used	
	P169-29	Label B50(UE)	Not Used	AAX3544	
	P169-8	Function Button Sheet (8U)	AAK2919	Not Used	
	P169-8	Function Button Sheet (8U/E)	Not Used	AAK2920	
	P169-23	Input Cover Label 8U	AAX3509	Not Used	
	P169-23	Input Cover Label 8UE	Not Used	AAX3512	
		<FRONT SECTION>			
	P171-6	1..Front Case Assy (608U)	AMB3035	Not Used	
	P171-10	2..Power Button	AAD4157	Not Used	
	P171-6	1..Front Case Assy (608EL)	Not Used	AMB3036	
	P171-10	2..Power Button B	Not Used	AAD4151	
		<PANEL CHASSIS SECTION>			
NSP	P179-1	Panel Chassis (608F) Assy	AWU1238	Not Used	
NSP	P179-1	Panel Chassis (608FE) Assy	Not Used	AWU1258	
		<MULTI BASE SECTION>			
	P181-24	Terminal Panel A(U)	ANC2440	Not Used	
	P181-24	Terminal Panel A(UE)	Not Used	ANC2444	
	P181-25	POD Stay A	ANG2933	Not Used	
	P181-25	POD Stay B	Not Used	ANG2934	
		DLNA Stay	Not Used	ANG2932	No.2
		Wire Saddle	Not Used	AEC1751	No.3
		Card Spacer	Not Used	AEC2098	No.4
		4P Housing Wire(J128)	Not Used	ADX3547	No.5
		Flexible Cable(J216)	Not Used	ADD1474	No.6
		Screw	Not Used	BMZ30P060FTB	No.7
		Screw	Not Used	AMZ30P060FTB	No.8
		Screw	Not Used	PMB30P080FNI	No.9
		<PDP SERVICE ASSY>			
	P18	PDP Service Assy 608F	AWU1274	Not Used	
	P18	PDP Service Assy 608FE	Not Used	AWU1275	
NSP	P184-1	Panel Chassis (608F) Assy	AWU1238	Not Used	
NSP	P184-1	Panel Chassis (608FE) Assy	Not Used	AWU1258	

Note: For PCB ASSEMBLIES, Refer to "1.2 CONTRAST OF PCB ASSEMBLIES".


: The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".

EXPLODED VIEWS

<MULTI BASE SECTION>

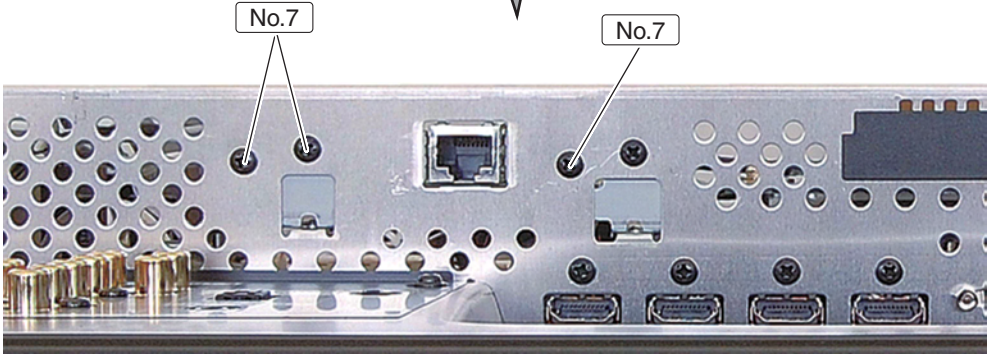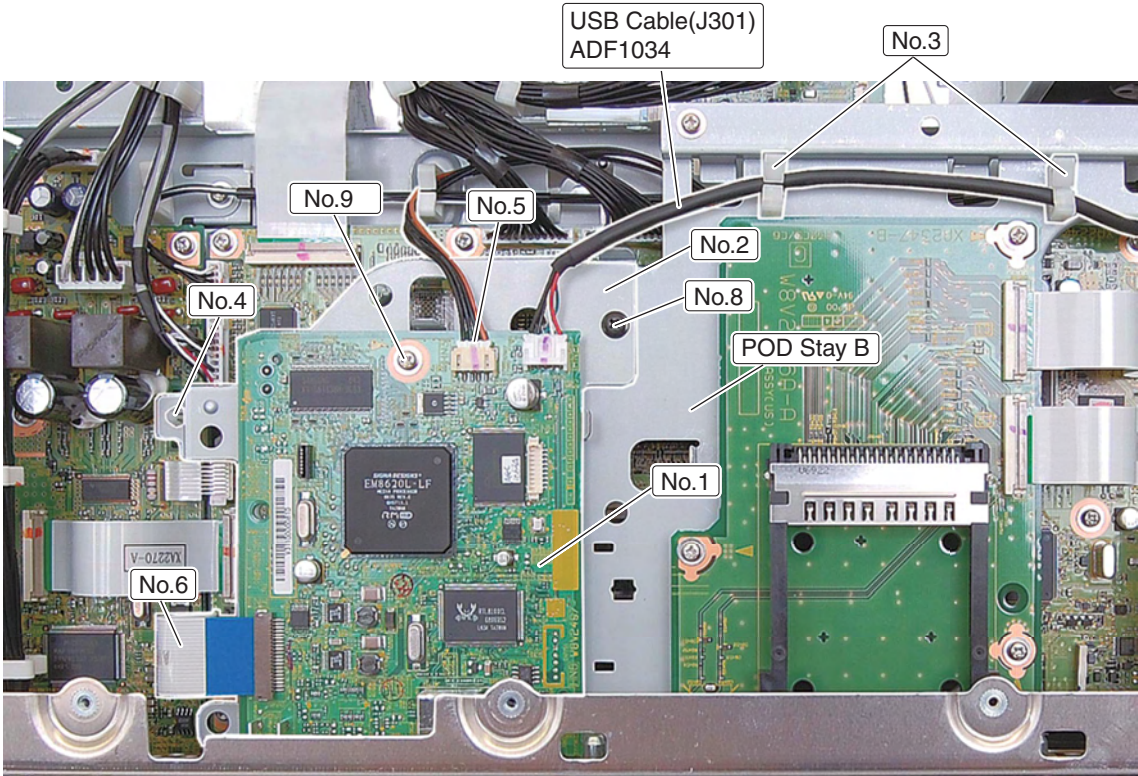


<PACKING SECTION>

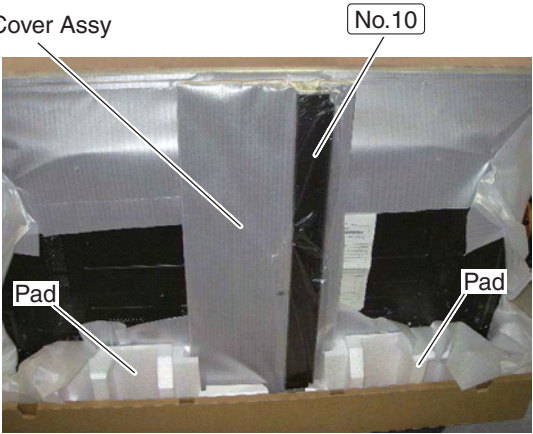

↓
Rear

SPEAKER SYSTEM (PACKING)

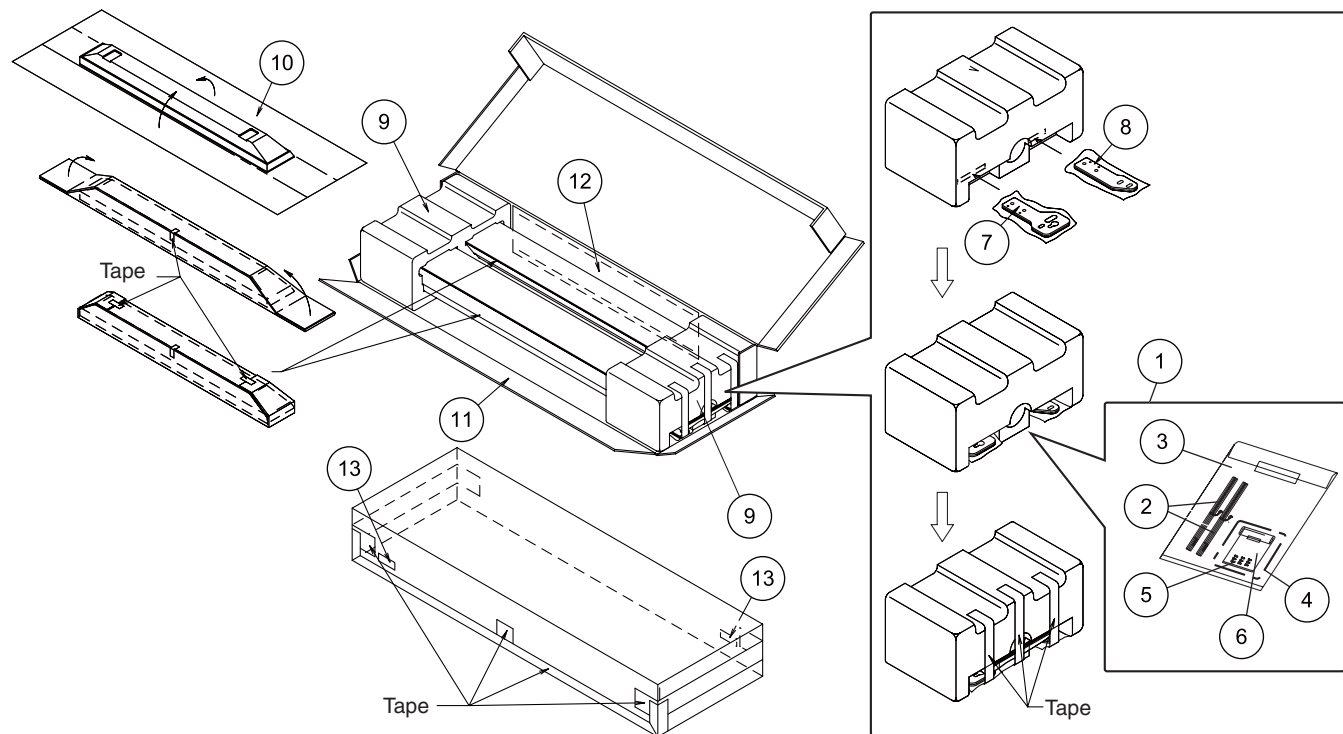



PACKING parts List

Mark No.	Description	Part No.
NSP 1	1..Accessory Set	SME3784
2	2..Speaker Wire	SDS1204
3	2..Polyethylene Bag S1	SHL1439
NSP 4	2..Screws Set	SME3687
5	3..Screw	BMZ50P100FTB
6	3..Polyethylene Bag S0	SHL1438
NSP 7	Bracket Top Set	SME3787
NSP 8	Bracket Bottom Set	SME3788
9	Protector	SHA2586
10	Protection Sheet S4	SHC1865
11	Packing Case	SHG2783
NSP 12	Inner Carton Board	SHB1178
NSP 13	Label Serial	SRW1112

SPEAKER SYSTEM (BRACKET TOP SET and BRACKET BOTTOM SET)

BRACKET TOP SET (SME3787)

BRACKET BOTTOM SET (SME3788)

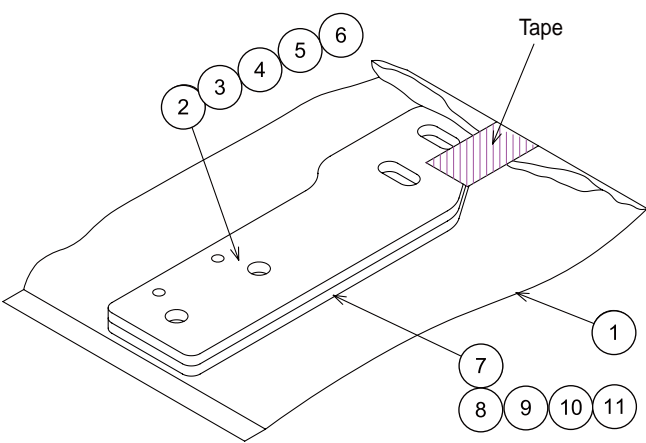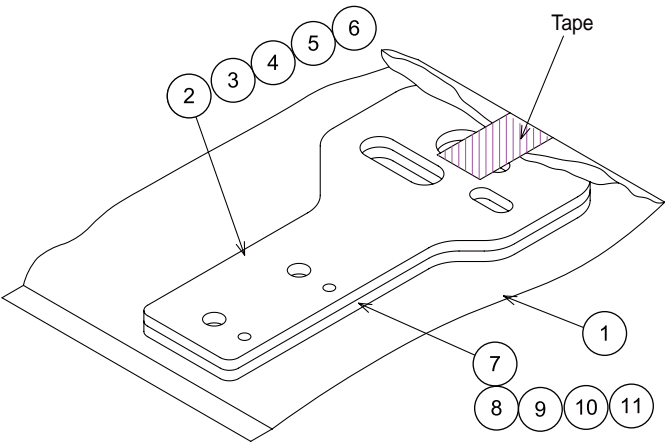

BRACKET TOP SET Parts List


BRACKET BOTTOM SET Parts List

Mark No.	Description	Part No.
1	Polyethylene Bag S0	SHL1466
2	1..Bracket Assy(L-Top)	SXG1141
NSP 3	2..Label(L-Top)	SAK6005
4	2..Gasket	SED1172
5	2..Gasket	SED1173
NSP 6	2..Bracket Top	SNA1485
7	1..Bracket Assy(R-Top)	SXG1143
NSP 8	2..Label(R-Top)	SAK6007
9	2..Gasket	SED1176
10	2..Gasket	SED1172
NSP 11	2..Bracket Top	SNA1485


Mark No.	Description	Part No.
1	Polyethylene Bag S0	SHL1466
2	1..Bracket Assy(L-Bottom)	SXG1142
NSP 3	2..Label(L-Bottom)	SAK6004
4	2..Gasket	SED1174
5	2..Gasket	SED1175
NSP 6	2..Bracket Bottom	SNA1486
7	1..Bracket Assy(R-Bottom)	SXG1144
NSP 8	2..Label(R-Bottom)	SAK6006
9	2..Gasket	SED1177
10	2..Gasket	SED1174
NSP 11	2..Bracket Bottom	SNA1486

SPEAKER SYSTEM (CS ASSY)

*This product appearance shows Rch.
Lch is symmetrical to center line.

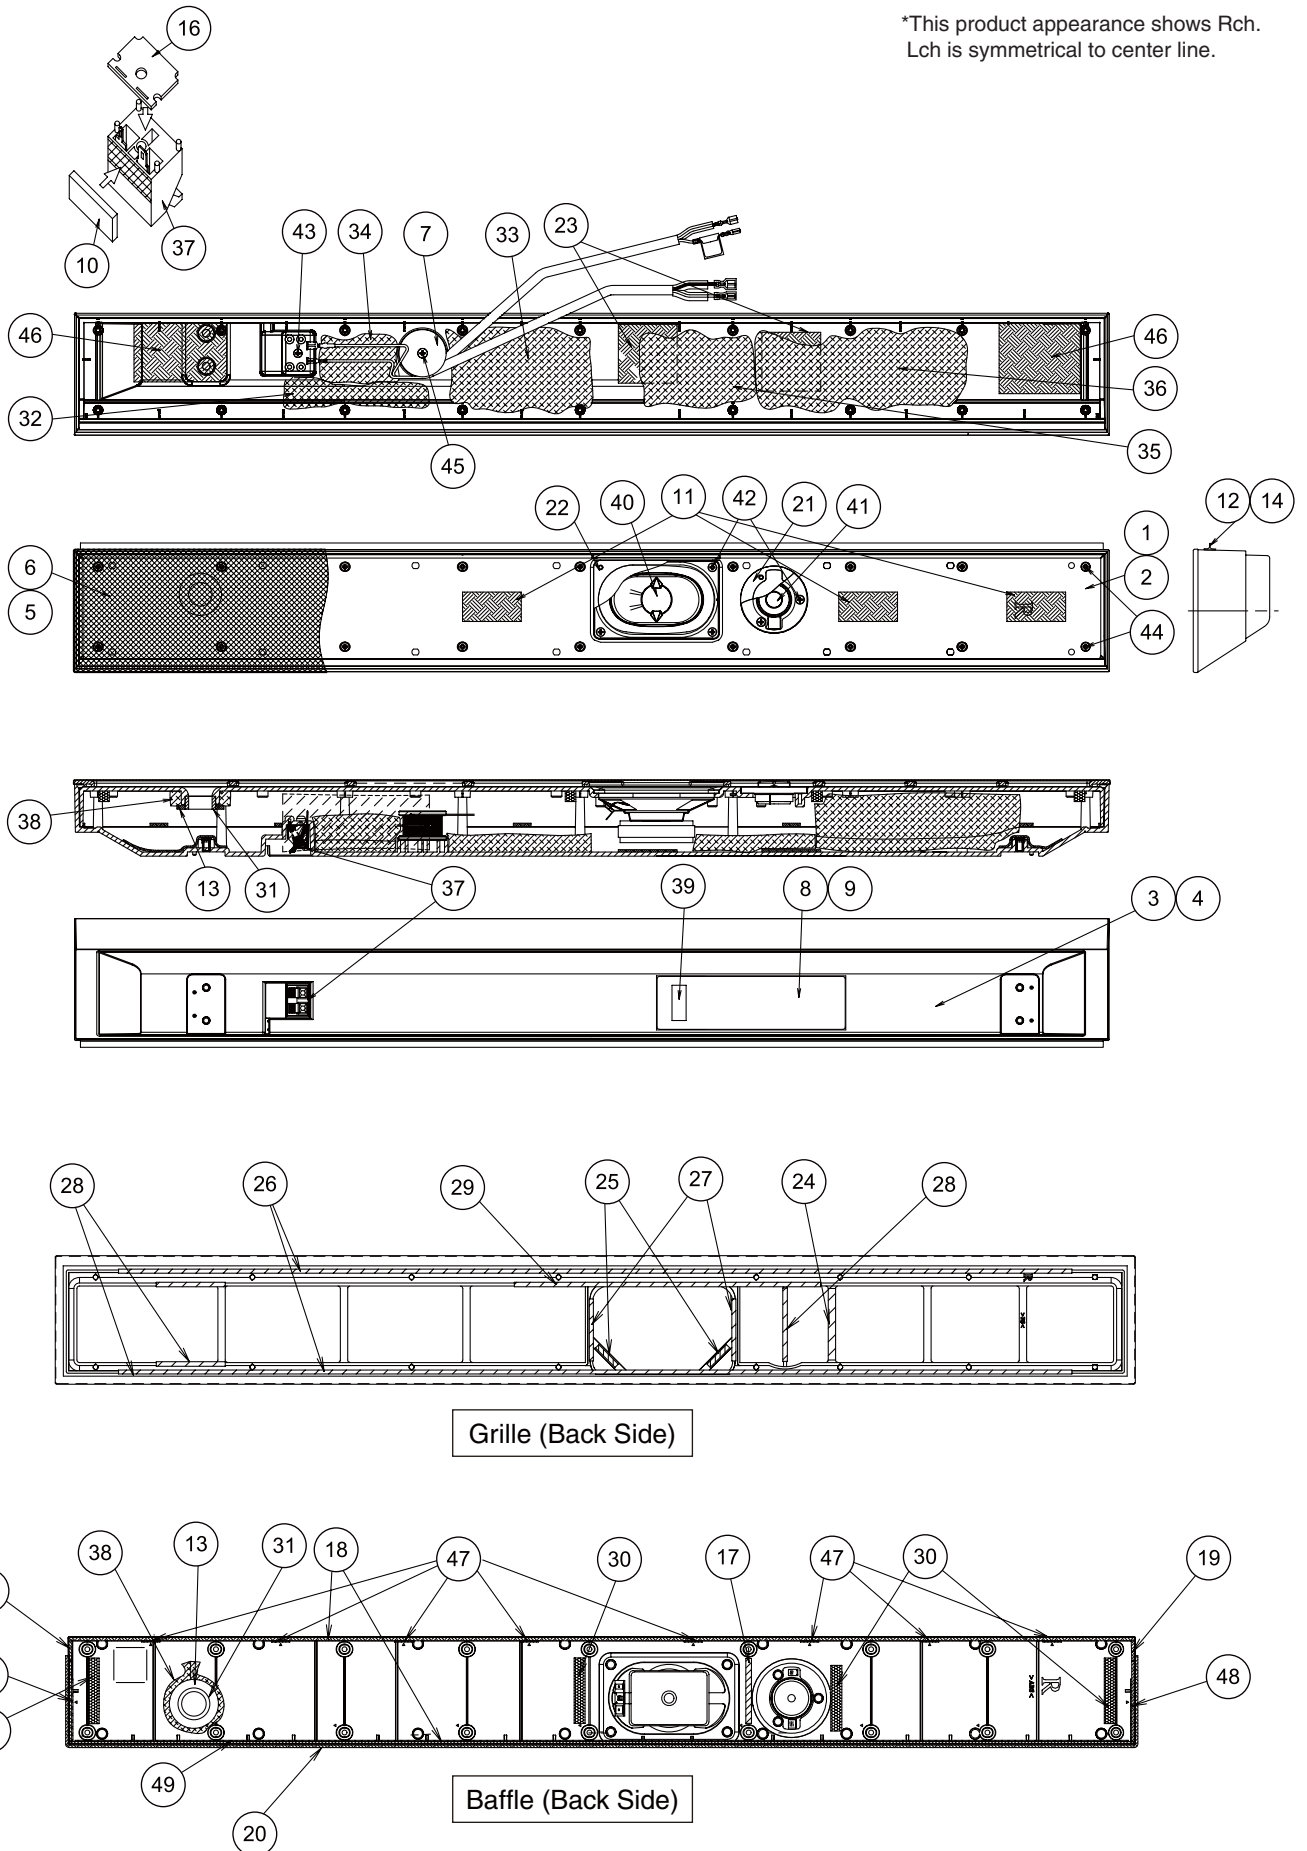

BAFFLE

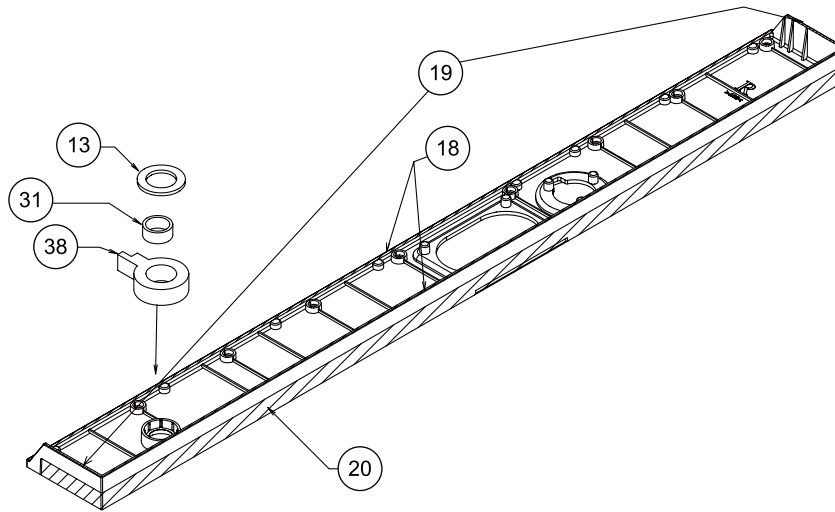

CS ASSY parts List

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	Baffle (L)	SNK2987	25	Tape	SEH1100
NSP 2	Baffle (R)	SNK2988	26	Tape	SEH1107
NSP 3	1..Cabinet Assy L	SXG1137	27	Tape	SEH1115
NSP	2..Insert Nut M5	SBN1073	28	Tape	SEH1117
NSP	2..Cabinet (L)	SNK2989	29	Tape	SEH1122
NSP 4	1..Cabinet Assy R	SXG1138	NSP 30	MDF Bar	SLX1165
NSP	2..Insert Nut M5	SBN1073	NSP 31	Paper Port Tube	SMR6013
NSP	2..Cabinet (R)	SNK2990	NSP 32	Acoustic Absorbent	SMT1363
5	1..Grille (L)	SMG1890	NSP 33	Acoustic Absorbent	SMT1370
NSP	2..Grille Cloth	SAS1622	NSP 34	Acoustic Absorbent	SMT1371
NSP	2..Grille Frame (L)	SEH1127	NSP 35	Acoustic Absorbent	SMT1364
6	1..Grille (R)	SMG1891	NSP 36	Acoustic Absorbent	SMT1374
NSP	2..Grille Cloth	SAS1622	37	1..Input Terminal	SKX1098
NSP	2..Grille Frame (R)	SMH1128	NSP	2..Spring	SBH1003
7	Network Assy	SWN1789	NSP	2..Terminal	SKF1064
NSP 8	Model Label (L)	SAN3959	NSP	2..Terminal	SKF1065
NSP 9	Model Label (R)	SAN3960	NSP	2..Case	SNK2909
NSP 10	Gasket	SEB1299	NSP	2..Lever (Black)	SNK2910
NSP 11	Gasket	SEB1300	NSP	2..Lever (Red)	SNK2911
NSP 12	Blinder (L)	SEB1306	NSP 38	Acoustic Absorbent	SMT1378
13	Packing	SEB1317	NSP 39	Label Serial	SRW1111
NSP 14	Blinder (R)	SEB1319	40	Speaker	A101EC65-51D
15	•••••		41	Speaker	FK26AP32-56H
NSP 16	Gasket	SEC2074	42	Screw	BPZ35P080FTB
NSP 17	Gasket	SEC2123	43	Screw (for input terminal)	BPZ35P120FTC
NSP 18	Gasket	SEC2126	44	Screw	BPZ35P140FTB
NSP 19	Gasket	SEC2127	45	Screw	BPZ40P350FTC
NSP 20	Gasket	SEC2145	NSP 46	Gasket	SEC2163
21	Gasket (Tweeter)	SEC6099	NSP 47	Gasket	SEC2171
22	Gasket (Woofer)	SEC6100	NSP 48	Gasket	SEC2172
NSP 23	Gasket	SEC6101	NSP 49	Gasket	SEC2174
NSP 24	Gasket	SEB1323			

1.2 CONTRAST OF PCB ASSEMBLIES

MAIN Assy

AWV2457 and AWV2458 are constructed the same except for the following:

Mark	Symbol and Description	AWV2457	AWV2458	Remarks
	R4033	Not used	RS1/10S0R0J	
	R4035	RS1/10S0R0J	Not used	
	R4345	RS1/16SS103J	Not used	
	R4382	Not used	RS1/16SS103J	
	<BOARD IF 0 BLOCK(U)>			
	CN4002 FFC CONNECTOR 20P	Not used	AKM1380	
	<BOARD IF 1 BLOCK(U)>			
	D4101	Not used	1SS352	
	Q4107, Q4108	Not used	RT1N241M	
	Q4109	Not used	2SA1602A	
	Q4111, Q4115	Not used	RT1N241M	
	R4121	Not used	RS1/16SS472J	
	R4123	Not used	RS1/16SS471J	
	R4124	Not used	RS1/16SS102J	
	R4127, R4128	Not used	RS1/10S561J	
	R4151	Not used	RS1/10S750J	
	R4152	Not used	RS1/16SS222J	
	C4144	Not used	CKSSYB104K10	
	CN4110	AKM1276	Not used	
	CN4111 PLUG(4P)	Not used	KM200NA4	
	<AV SW BLOCK(U)>			
	C4613	Not used	CKSRYB105K10	
	<RGB SW BLOCK(U)>			
	R4709, R4710, R4711	Not used	RS1/16SS220J	
	C4732, C4733, C4734	Not used	CKSRYB105K10	
	<7038 0 BLOCK(U)>			
	IC6402	R5523N001B	Not used	
	L6402, L6403	BTX1042	Not used	
	R6419	RS1/10S0R0J	Not used	
	R6433	RS1/16SS0R0J	Not used	
	C6457	ACH1421	Not used	
	C6469, C6470	CKSSYB104K10	Not used	
	<IF UCOM BLOCK(U)>			
	R8329	RS1/16SS473J	Not used	
	R8330	RS1/16SS103J	Not used	
	R8313	Not used	RS1/16SS103J	

FUKUGO Assy

AWV2473 and AWV2475 are constructed the same except for the following:

Mark	Symbol and Description	AWV2473	AWV2475	Remarks
	R8895	RS1/16S0R0J	Not used	
	R8896	Not used	RS1/16S0R0J	

SIDE IO Assy

AWW1274 and AWW1285 are constructed the same except for the following:

Mark	Symbol and Description	AWW1274	AWW1285	Remarks
	R9370	RS1/16S0R0J	Not used	

Mark	Symbol and Description	AWW1274	AWW1285	Remarks
	R9371 JA9351 JA9352	Not used AKB1303 AKB1305	RS1/16S0R0J AKB1304 AKB1306	

TANSHI Assy

AWW1334 and AWW1335 are constructed the same except for the following:

Mark	Symbol and Description	AWW1334	AWW1335	Remarks
	R9075 R9076 <IO_1 BLOCK> C8903 F8901 F8902 JA8901 JA8902	RS1/16S0R0J Not used Not used Not used Not used Not used AKB1348	Not used RS1/16S0R0J CKSSYB471K50 CTF1557 CTF1557 VKN1449 AKB1350	

HN MODULE Assy (AWV2497)

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	Block Name: 8620 BLOCK(U)		IC7754 Q7751		RTL8100CL-LF 2SB1197K

SEMICONDUCTORS

IC7601 EM8620L-LFC

MISCELLANEOUS

F7601,7602CHIP FERRITE BEAD ATX1066
X7601CRYSTAL (27MHZ) ASS1218

RESISTORS

R7646,7647 RS1/16SS1400F
R7649-7651 RAB4CQ330J
R7652-7654 RAB4CQ103J
Other Resistors RS1/16SS###J

CAPACITORS

C7601-7609 DCH1201
C7610,7611 CCSSCH7R0D50
C7612,7613,7615-7639 CKSSYF104Z16

Block Name: 8620 DDR BLOCK(U)

SEMICONDUCTORS

IC7701,7702 HY5DU561622ETPJC
IC7703 AGC1063

MISCELLANEOUS

F7701 CHIP SOLID INDUCTOR ATL7002

RESISTORS

R7709,7710 RS1/16SS1001F
R7711-7718 RAB4CQ560J
Other Resistors RS1/16SS###J

CAPACITORS

C7701-7717 CKSSYF104Z16
C7722-7726 DCH1201

Block Name: ETHERNET BLOCK(U)

SEMICONDUCTORS

IC7751 TC74LCX125FTS1
IC7753 BR93L46RFJ-W

MISCELLANEOUS

F7751-7753 CHIP SOLID INDUCTOR ATL7002
JA7752 RJ45 CONNECTOR TRNS AKP1307
X7751 CRYSTAL(25MHZ) ASS1219
7752,7753 SCREW TERMINAL VNE1949

RESISTORS

R7753 RS1/16SS5601F
R7754,7755,7757,7758 RS1/16SS49R9F
Other Resistors RS1/16SS###J

CAPACITORS

C7751 BCG1059
C7754,7755 CCSSCH7R0D50
C7756,7757 CKSSYB103K25
C7758,7759,7762 CKSSYF104Z16
C7764-7779 CKSSYF104Z16

Block Name: HNM USB BLOCK(U)

SEMICONDUCTORS

IC7801 VT6212L-G
IC7803 R5523N001B

MISCELLANEOUS

L7801 CHOKE COIL ATH1160
F7801-7804 CHIP SOLID INDUCTOR ATL7002
F7806 CHIP SOLID INDUCTOR ATL7002
X7801 CRYSTAL (24MHZ) ASS1221
CN7801 L-PLUG (5P) KM200NA5L

RESISTORS

R7803 RS1/16SS5111F
R7806 RS1/16SS1021F
R7831,7832 RS1/16S0R0J
Other Resistors RS1/16SS###J

CAPACITORS

C7801-7803 DCH1201
C7806,7807 CCSSCH200J50
C7808 CEHVKW221M10

	5		6		7		8	
Mark No.	Description	Part No.						
C7809-7823		CKSSYF104Z16						
C7824		CEHVKW100M16						
Block Name: HNM IO BLOCK(U)								
<u>SEMICONDUCTORS</u>								
IC7852,7855		TC74LCX04FTS1						
IC7857		TC74LCX125FTS1						
Q7852-7854		2SA1586						
<u>MISCELLANEOUS</u>								
F7852-7855 CHIP FERRITE BEAD		ATX1066						
F7857 CHIP FERRITE BEAD		ATX1066						
X7851 CRYSTAL (33MHZ)		ASS1216						
CN7851 FFC CONNECTOR 20P RA		AKM1383						
<u>RESISTORS</u>								
R7851		RS1/16SS37R4F						
R7859,7861,7875		RS1/16SS75R0F						
R7870		RAB4CQ330J						
R7895-7897		RS1/16SS75R0F						
Other Resistors		RS1/16SS###J						
<u>CAPACITORS</u>								
C7851,7853,7855,7863		CKSSYF104Z16						
C7852		DCH1201						
C7865		CKSSYF104Z16						
C7871,7872,7874		CCSSCH220J50						
C7875		CKSSYB103K25						
Block Name: HNM POWER BLOCK(U)								
<u>SEMICONDUCTORS</u>								
IC7902		NJM2846DL3-25						
IC7903,7904		LTC3412EFE						
D7901,7902		RB051L-40						
<u>MISCELLANEOUS</u>								
L7901 INDUCTOR		ATH1206						
L7902 INDUCTOR		ATH1207						
F7901 CHIP BEEDS FILTER		ATX1059						
CN7901 CONNECTOR		AKM1290						
<u>RESISTORS</u>								
R7903,7909		RS1/16SS3093F						
R7904		RS1/16SS6202D						
R7906		RS1/16SS2003D						
R7910		RS1/16SS1503D						
R7912		RS1/16SS7502D						
R7917,7919		RS1/10S0R0J						
Other Resistors		RS1/16SS###J						
<u>CAPACITORS</u>								
C7901		CKSRYB334K10						
C7902		CKSQYF475Z10						
C7903,7906		BCG1059						
C7904		CCSRCH471J50						
C7905,7907		CCSRCH102J50						
C7908		CCSRCH222J50						
C7909		CEHVKW101M6R3						
C7910,7920,7923		CKSSYF104Z16						
C7911,7918,7924		CCSSCH101J50						
C7912,7919		BCG1050						
C7925		CCSSCH220J50						
C7926		DCH1201						

2. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

2.1 OVERALL CONNECTION DIAGRAM (1/2)

A


B

C

D

E

F

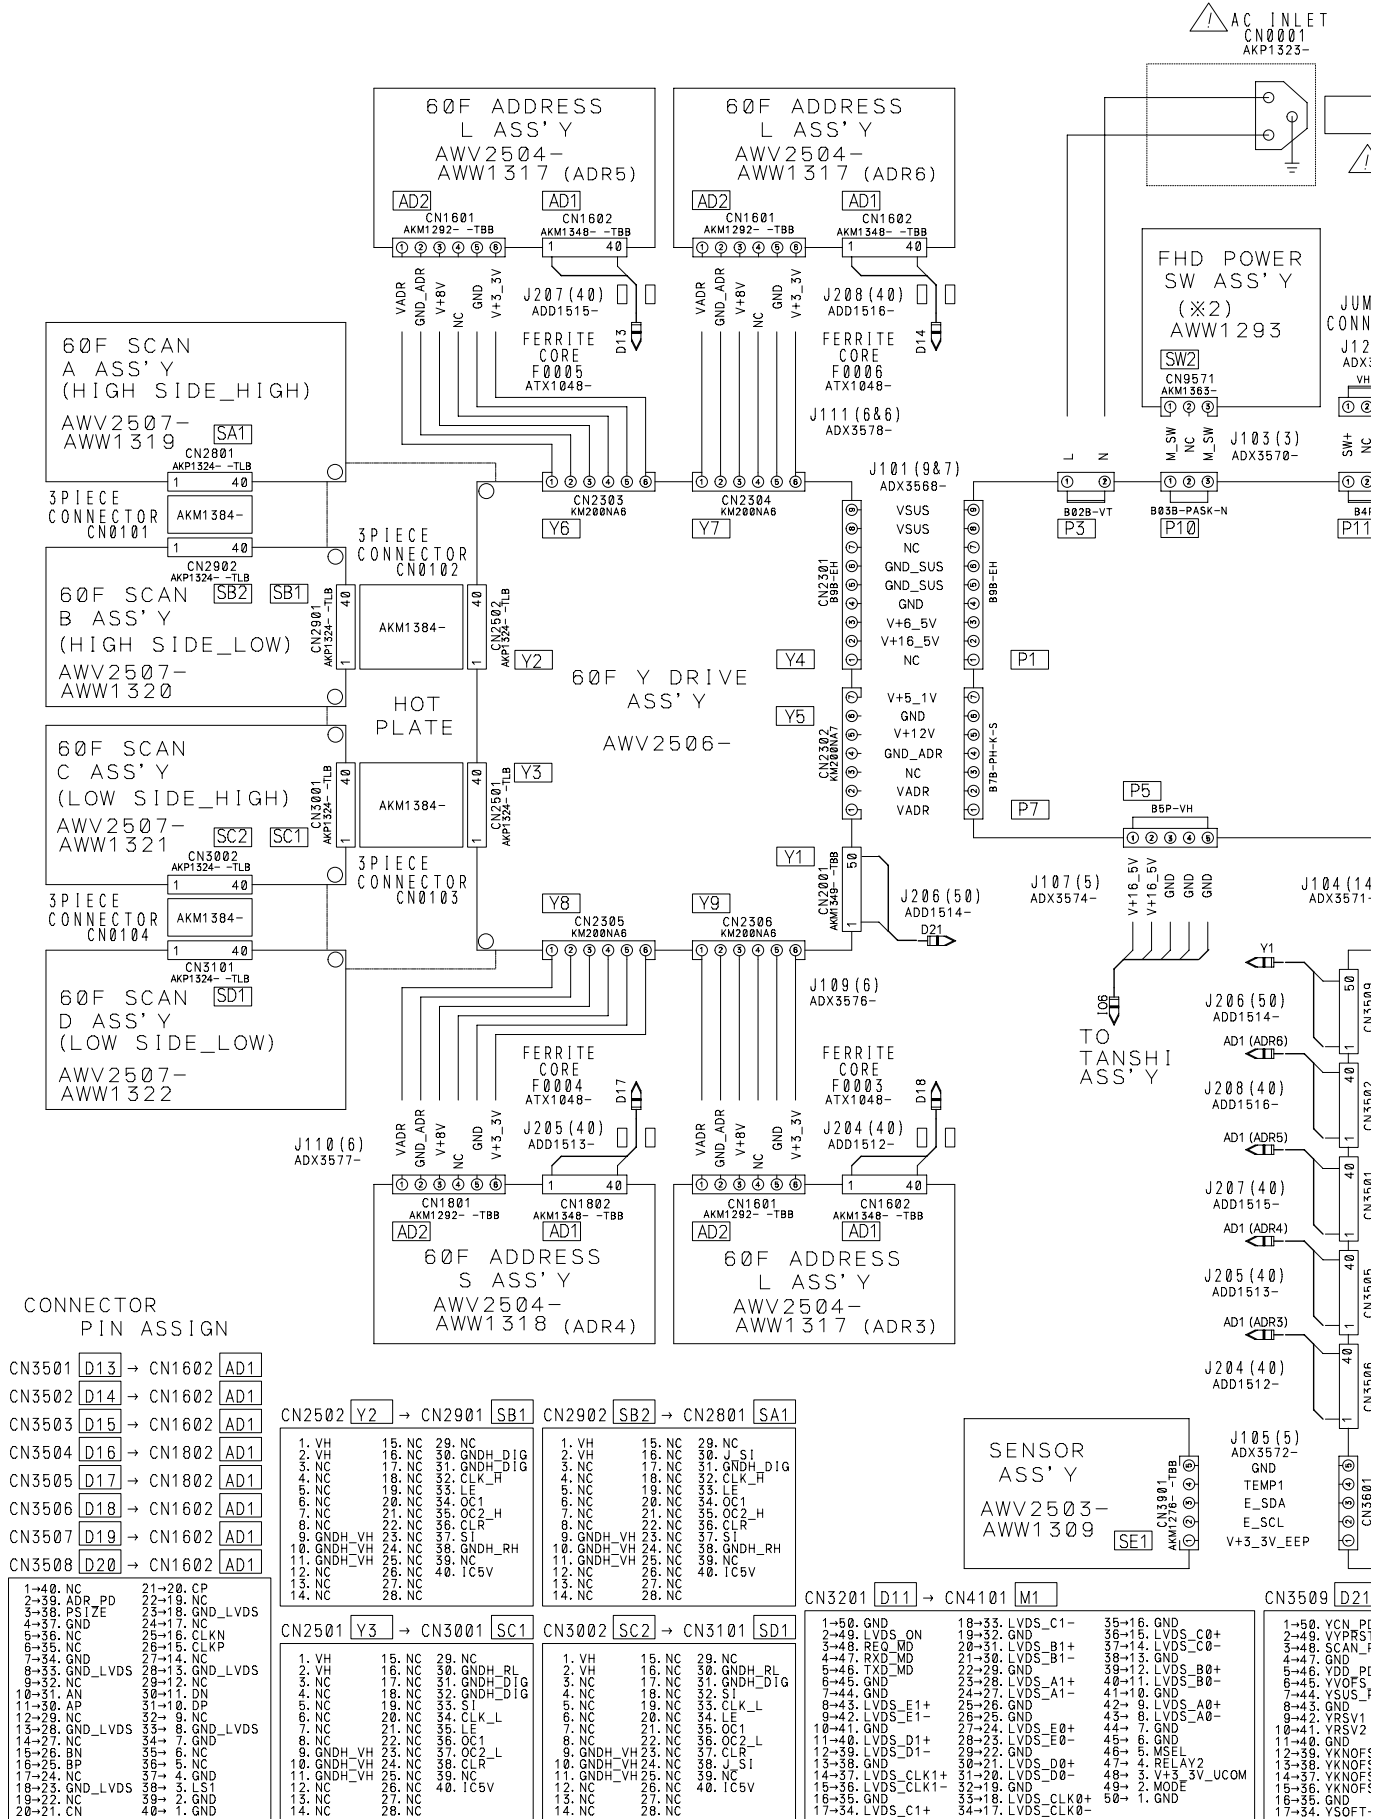

- A



 
C


□

E

1

△



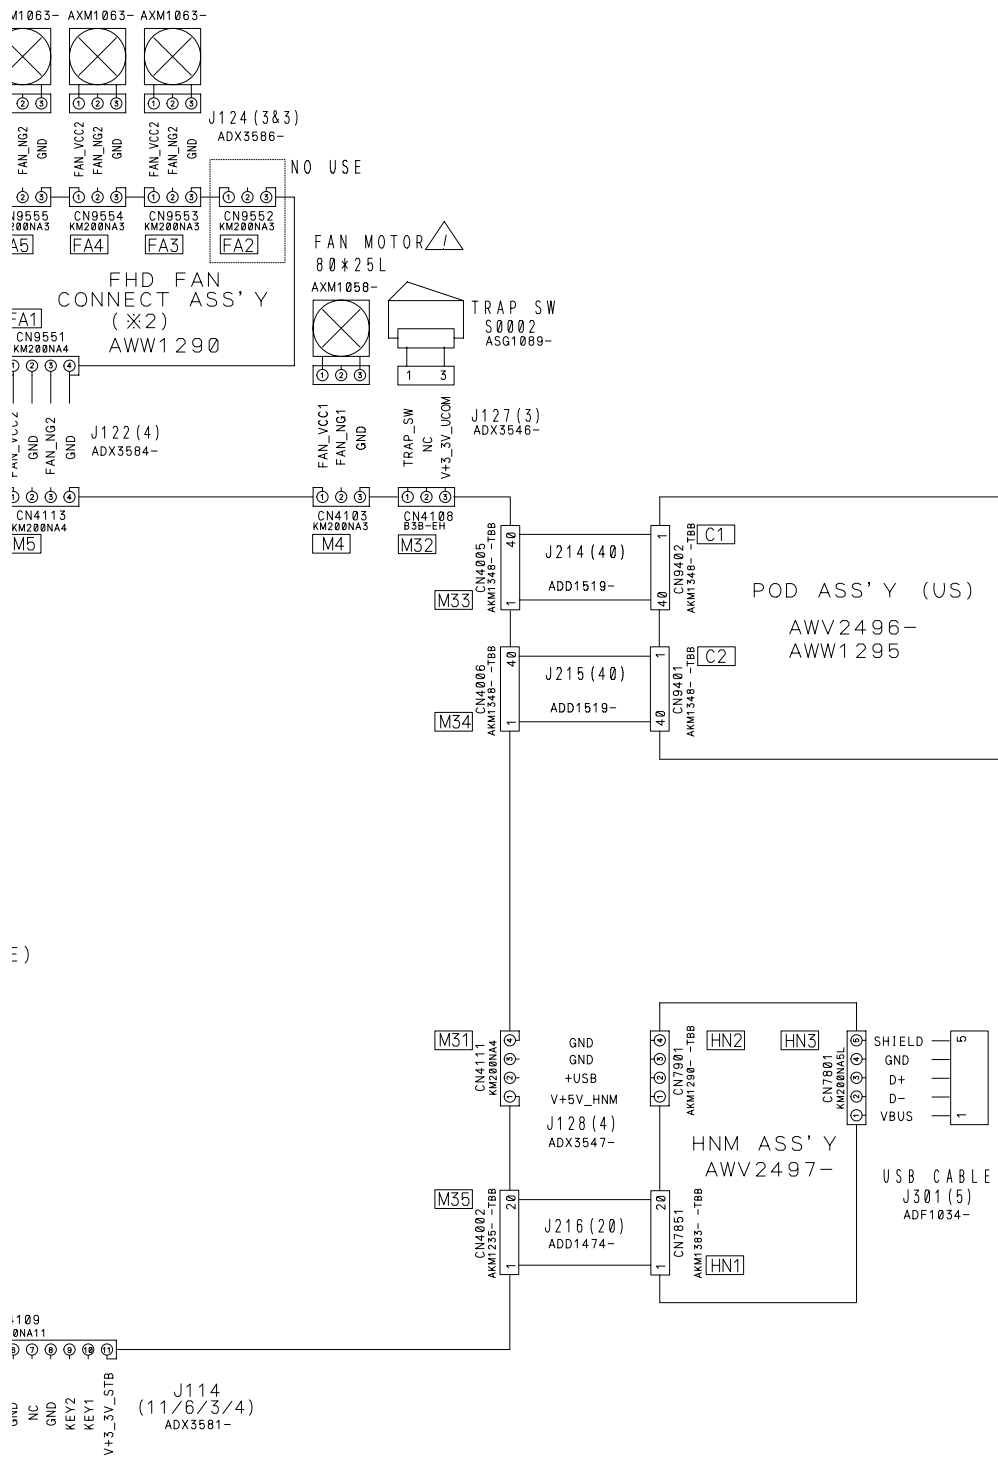

CONNECTOR PIN ASSIGN

CN4004 [M6] → CN8804 [I04]	
1-50. GND	26-25. GND
2-49. TEMP2	27-24. INPUT2_V
3-48. NC	28-23. GND
4-47. V+3_3V_UCOM	29-22. INPUT1_V
5-46. NC	30-21. GND
6-45. GND	31-20. INPUT1_SY
7-44. GND	32-19. GND
8-43. GND	33-18. INPUT1_S2
9-42. GND	34-17. GND
10-41. GND	35-16. INPUT1_SC
11-40. GND	36-15. GND
12-39. GND	37-14. INPUT1_SPLUG
13-38. INPUT3_PLUG	38-13. GND
14-37. GND	39-12. INPUT2_PLUG
15-36. INPUT3_Y	40-11. GND
16-35. GND	41-10. INPUT2_Y
17-34. INPUT3_PB	42-9. GND
18-33. GND	43-8. INPUT2_PB
19-32. INPUT3_PR	44-7. GND
20-31. GND	45-6. INPUT2_PR
21-30. AIR_R	46-5. GND
22-29. GND	47-4. GND
23-28. AIR_L	48-3. GND
24-27. GND	49-2. GND
25-26. INPUT3_V	50-1. GND

CN4001 [M8] → CN8803 [I03]	
1-40. V+5V_A	21-20. I2S_SDATA_HNM
2-39. NC	22-19. BCLK_HNM
3-38. V+3_3V_STB	23-18. I2S_LRCLK_HNM
4-37. NC	24-17. GND
5-36. GND	25-16. I2S_SDATA_HDMI
6-35. GND	26-15. BCLK_HDMI
7-34. GND	27-14. I2S_LRCLK_HDMI
8-33. GND	28-13. GND
9-32. IR_OUT	29-12. I2S_SDATA_DTV
10-31. GND	30-11. BCLK_DTV
11-30. GND	31-10. I2S_LRCLK_DTV
12-29. AC_AM_MUTE	32-9. GND
13-28. GND	33-8. SCL_AV
14-27. AC_HP_MUTE	34-7. SDA_AV
15-26. HP_PLUG	35-6. AC_A_MUTE
16-25. GND	36-5. RST_MSP
17-24. SPDIF_HNM	37-4. GND
18-23. SPDIF_HNM	38-3. A_NG_B
19-22. SPDIF_DTV	39-2. IO_DET
20-21. GND	40-1. GND

CN4005 [M33] → CN9402 [C1]	
1-40. GND	21-20. IORD
2-39. POD_VCC	22-19. MA11
3-38. POD_VCC	23-18. POD_VS1
4-37. POD_VCC	24-17. OE
5-36. MDIA3	25-16. CE2A
6-35. RDY/IRQA	26-15. MA10
7-34. MDIA2	27-14. MDOA7
8-33. WE	28-13. CE1A
9-32. MDIA1	29-12. MDOA6
10-31. GND	30-11. MD7
11-30. MOCCLKA/MA14	31-10. MDOA5
12-29. GND	32-9. MD6
13-28. MDIA0	33-8. MDOA4
14-27. MA13	34-7. MD5
15-26. M1STRTA	35-6. MDOA3
16-25. GND	36-5. MD4
17-24. POD_CLK/MA8	37-4. CD1A
18-23. GND	38-3. MD3
19-22. IOWR	39-2. GND
20-21. POD_DATA/MA9	40-1. GND

CN4006 [M34] → CN9401 [C2]	
1-40. GND	21-20. WAITA
2-39. PTXDB	22-19. OOB_EN/MA4
3-38. GND	23-18. RSTA
4-37. PRXDB	24-17. TX_A
5-36. GND	25-16. POD_VS2
6-35. CDA2	26-15. TX_EN
7-34. MDOA2	27-14. MDIA7
8-33. MD2	28-13. TX_Q
9-32. MDOA1	29-12. MDIA6
10-31. MD1	30-11. MDIA5
11-30. MDOA0	31-10. MDIA4
12-29. MD0	32-9. GND
13-28. M1STRTA	33-8. M1CLKA
14-27. MA0	34-7. GND
15-26. M0VALA	35-6. MDIA4
16-25. MA1	36-5. M1VALA
17-24. REG	37-4. POD_VPP
18-23. MA2	38-3. POD_VPP
19-22. GND	39-2. GND
20-21. MA3	40-1. GND

×2 PRO-150FD AWW2475-


The \triangle mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.

OVERALL DIAGRAM

PRO-150FD

2.3 HNM BLOCK DIAGRAM

AWV2497- (HNM Ass'y) Block Diagram

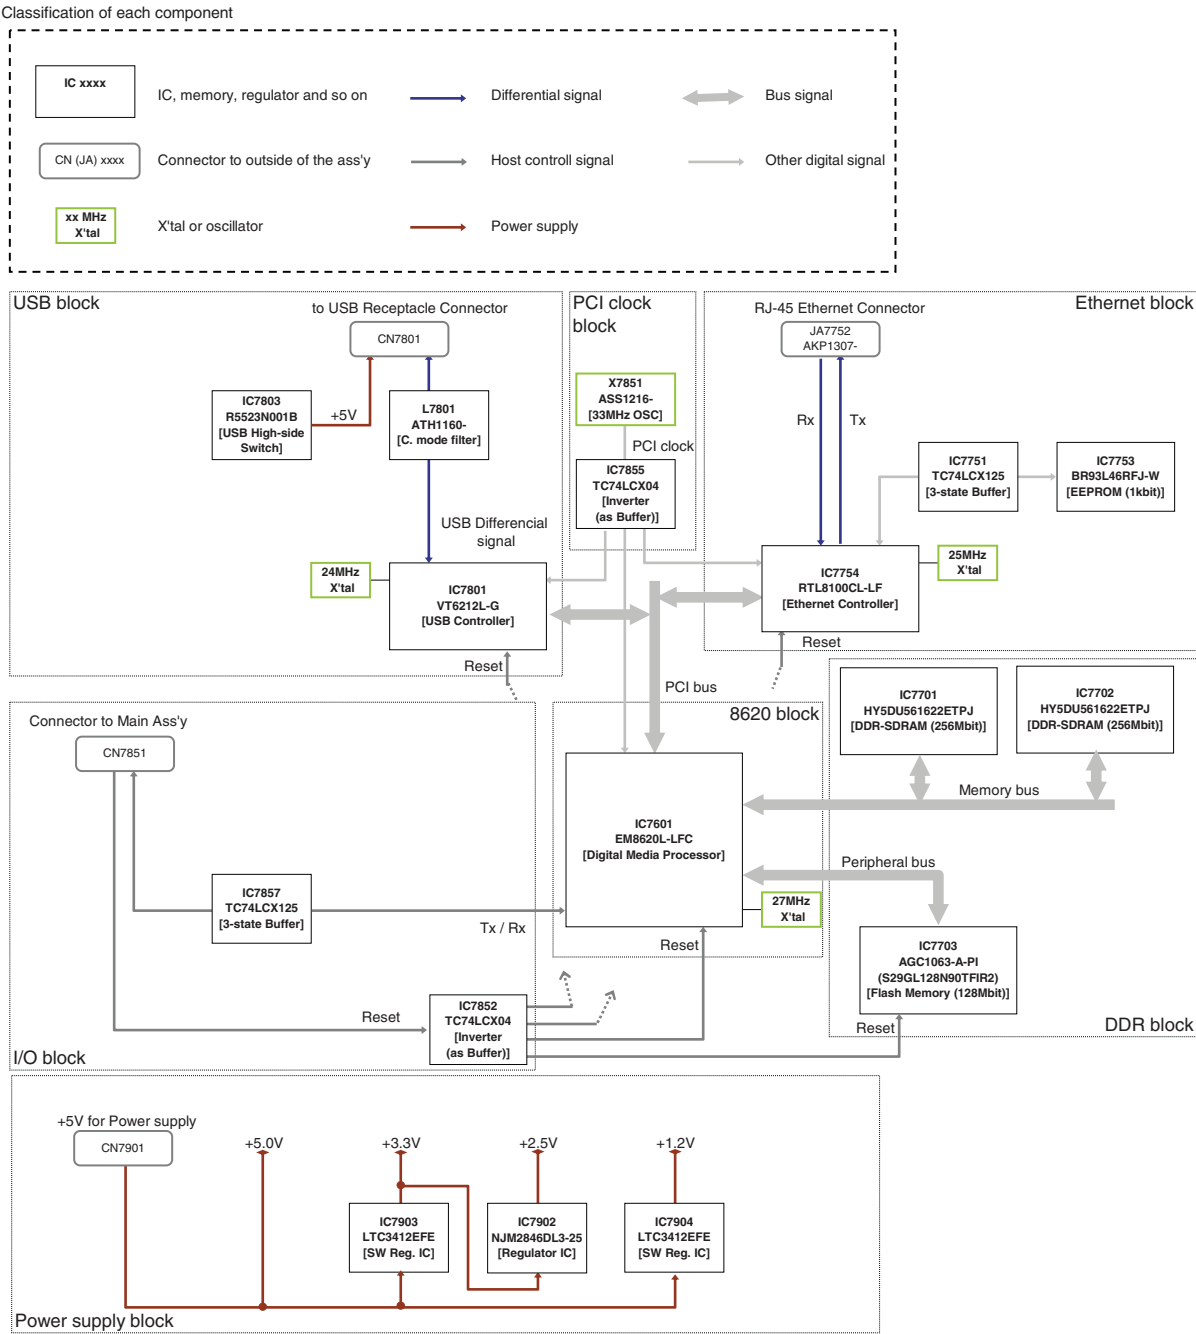

2.4 CONNECTOR PIN DESCRIPTION

AWV2497- (HNM Ass'y) Voltage at each connector.

HNM Ass'y					MTB MAIN Ass'y
[HN1] CN7851					[M35] CN4002
pin	pin name	I/O	description	voltage (V)	pin
1	TXD_HNM	I	UART signal with Main ass'y, Main => HNM	+3.3 / 0	1
2	RXD_HNM	O	UART signal with Main ass'y, HNM => Main	+3.3 / 0	2
3	RST_HNM	I	Reset signal for HNM ass'y, Active low	+3.3 / 0	3
.					.
20					20


HNM Ass'y					MTB MAIN Ass'y
[HN2] CN7901					[M31] CN4111
pin	pin name	I/O	description	voltage (V)	pin
1	V+5V_HNM	I	+5V power supply	+5.0	1
2	+USB	I	+5V power supply for USB bus-power	+5.0	2
3	GND	-		0	3
4	GND	-		0	4


HNM Ass'y					USB cable
[HN3] CN7801					
pin	pin name	I/O	description	voltage (V)	
1	+5V	O	+5V for USB bus-power	+5.0	
2	D-	I/O	USB differential signal minus	+3.3 / 0	
3	D+	I/O	USB differential signal plus	+3.3 / 0	
4	GND	-		0	
5	Sheild	-		0	

△

1/2



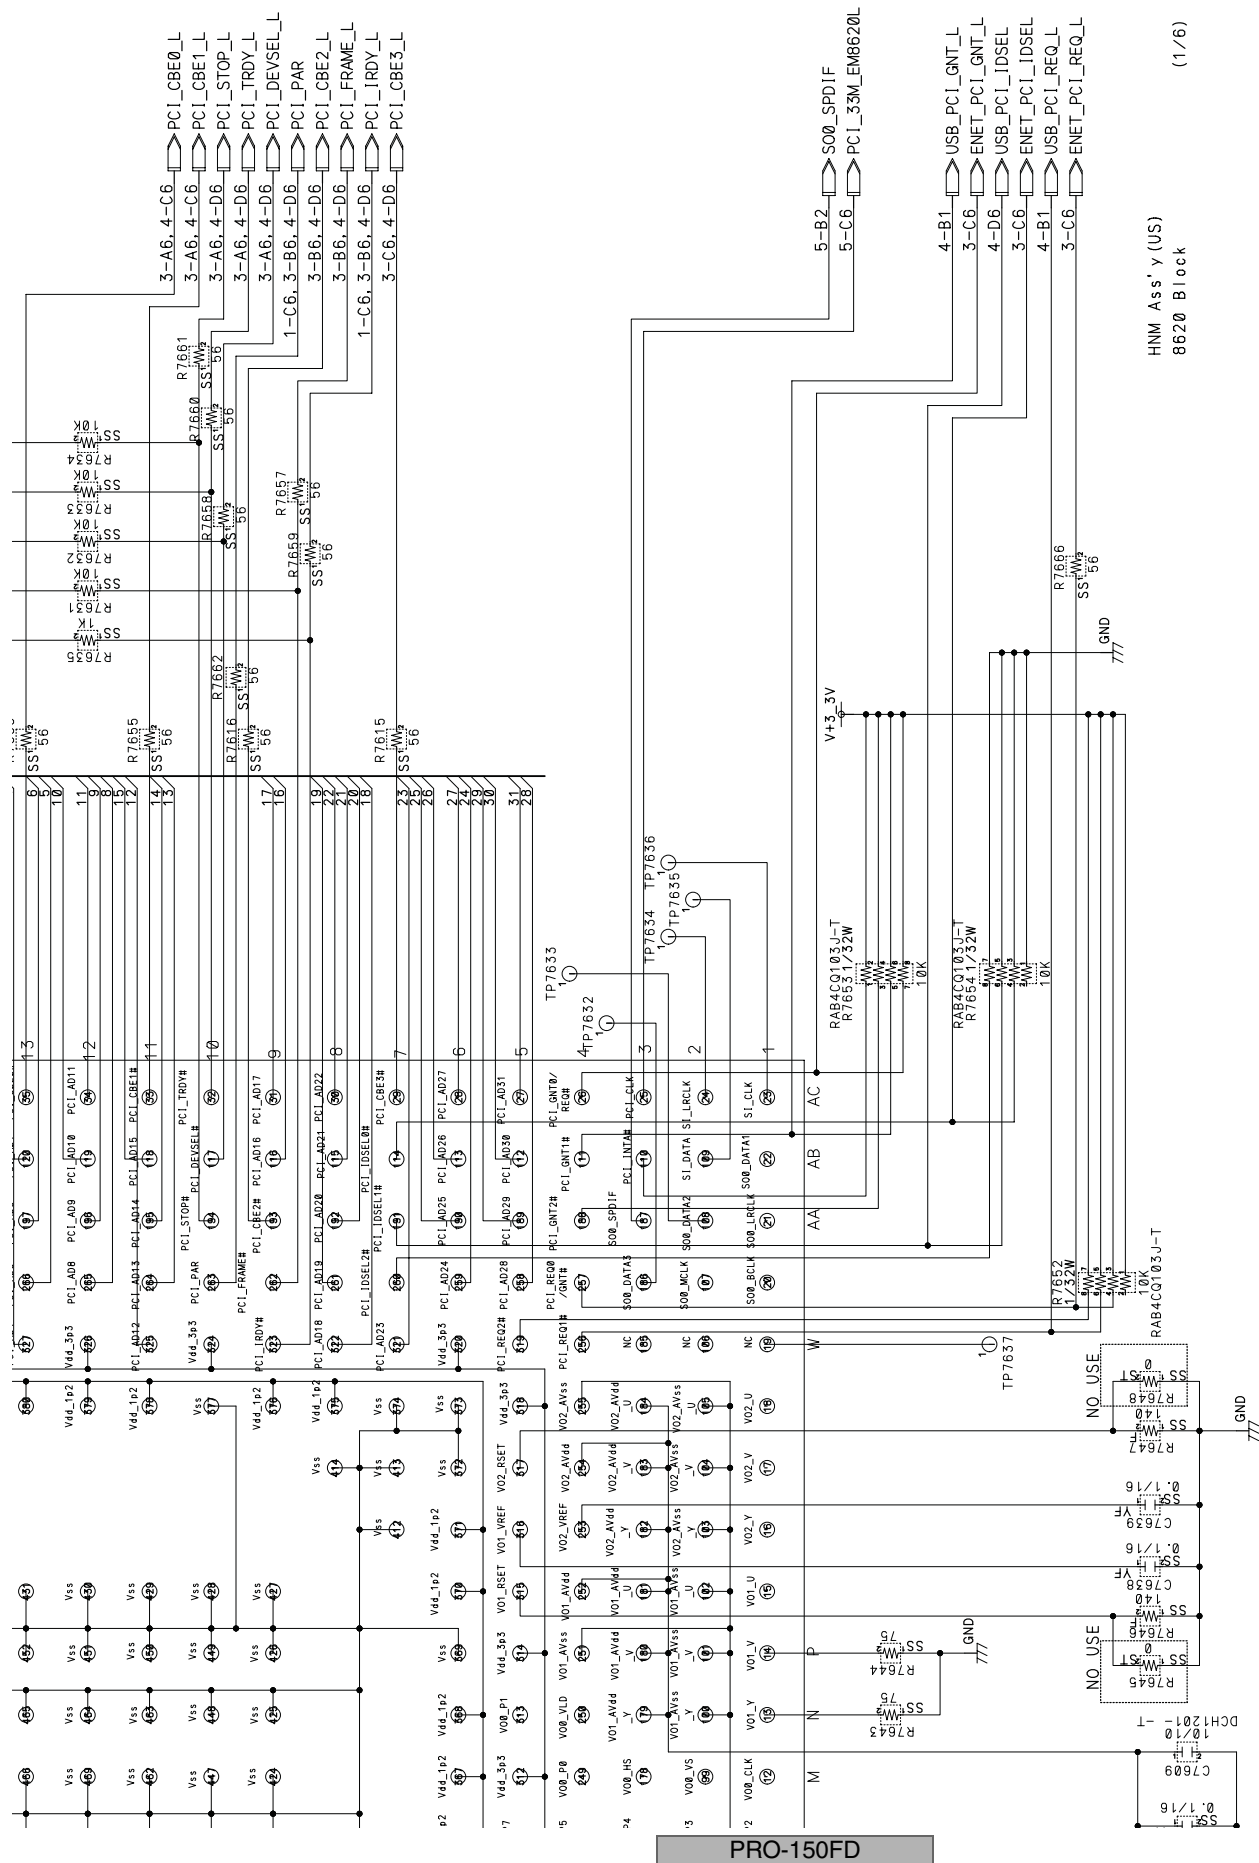

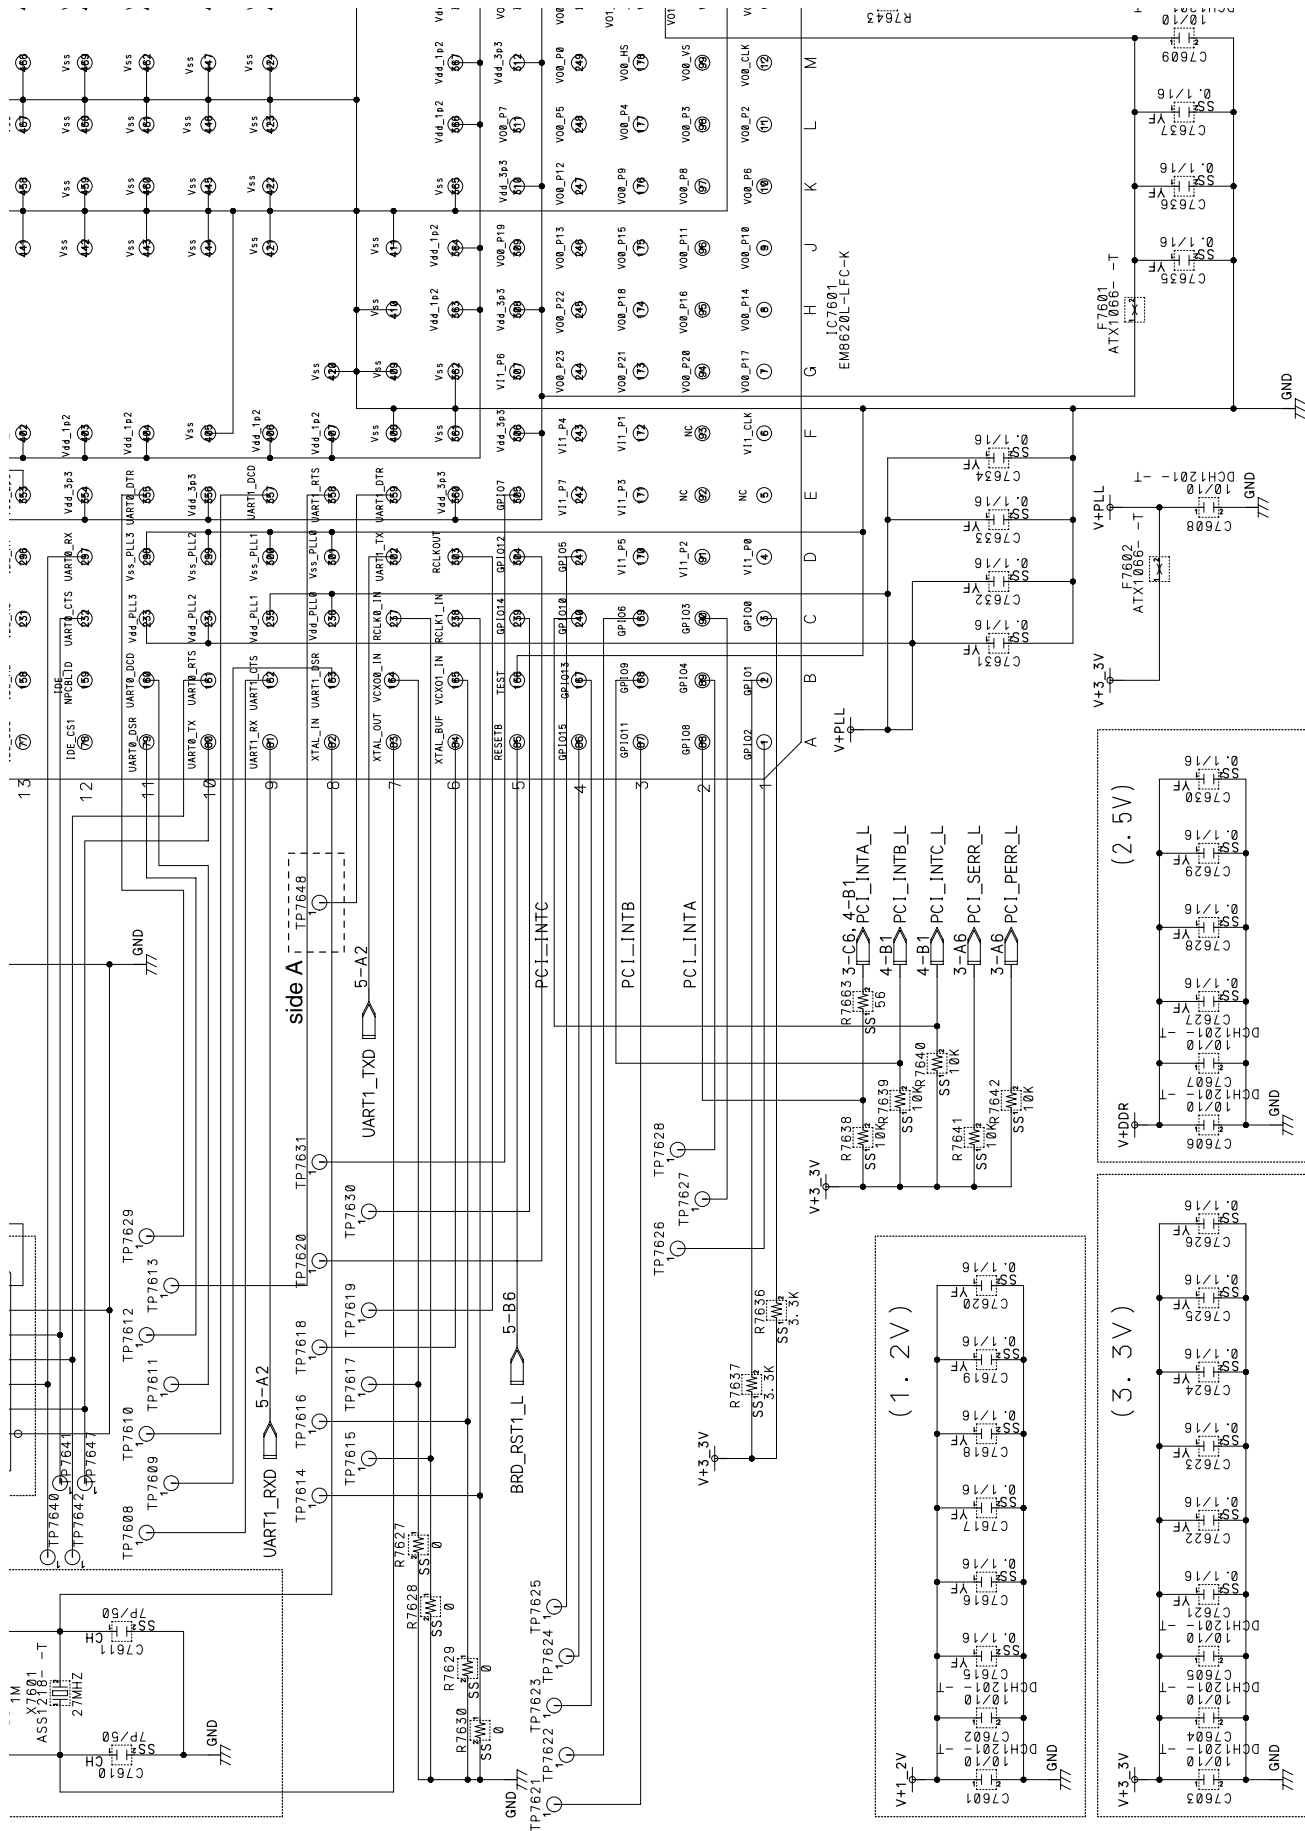

2.6 HN MODULE ASSY (2/6) [8620_DDR BLOCK]

A


B

C

D


E

F

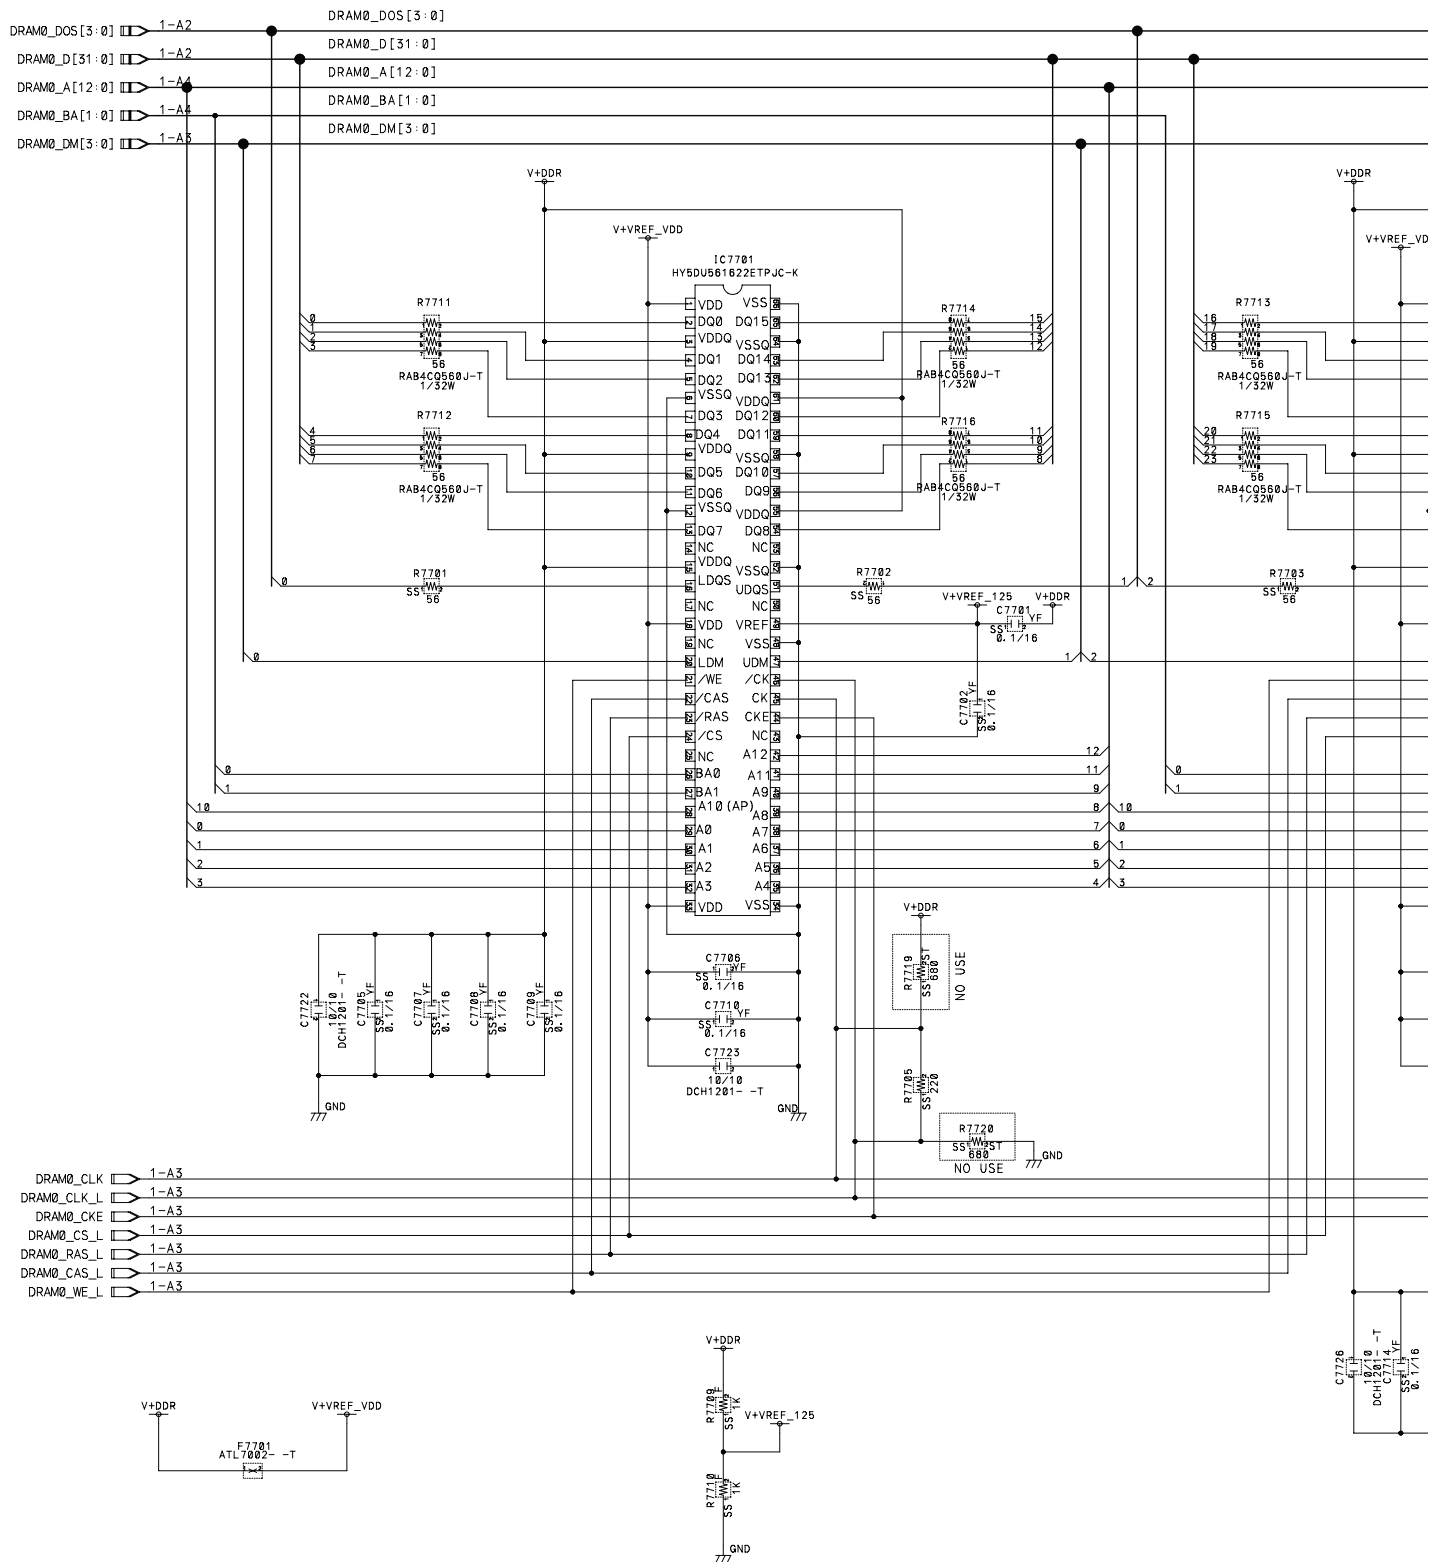

4



F

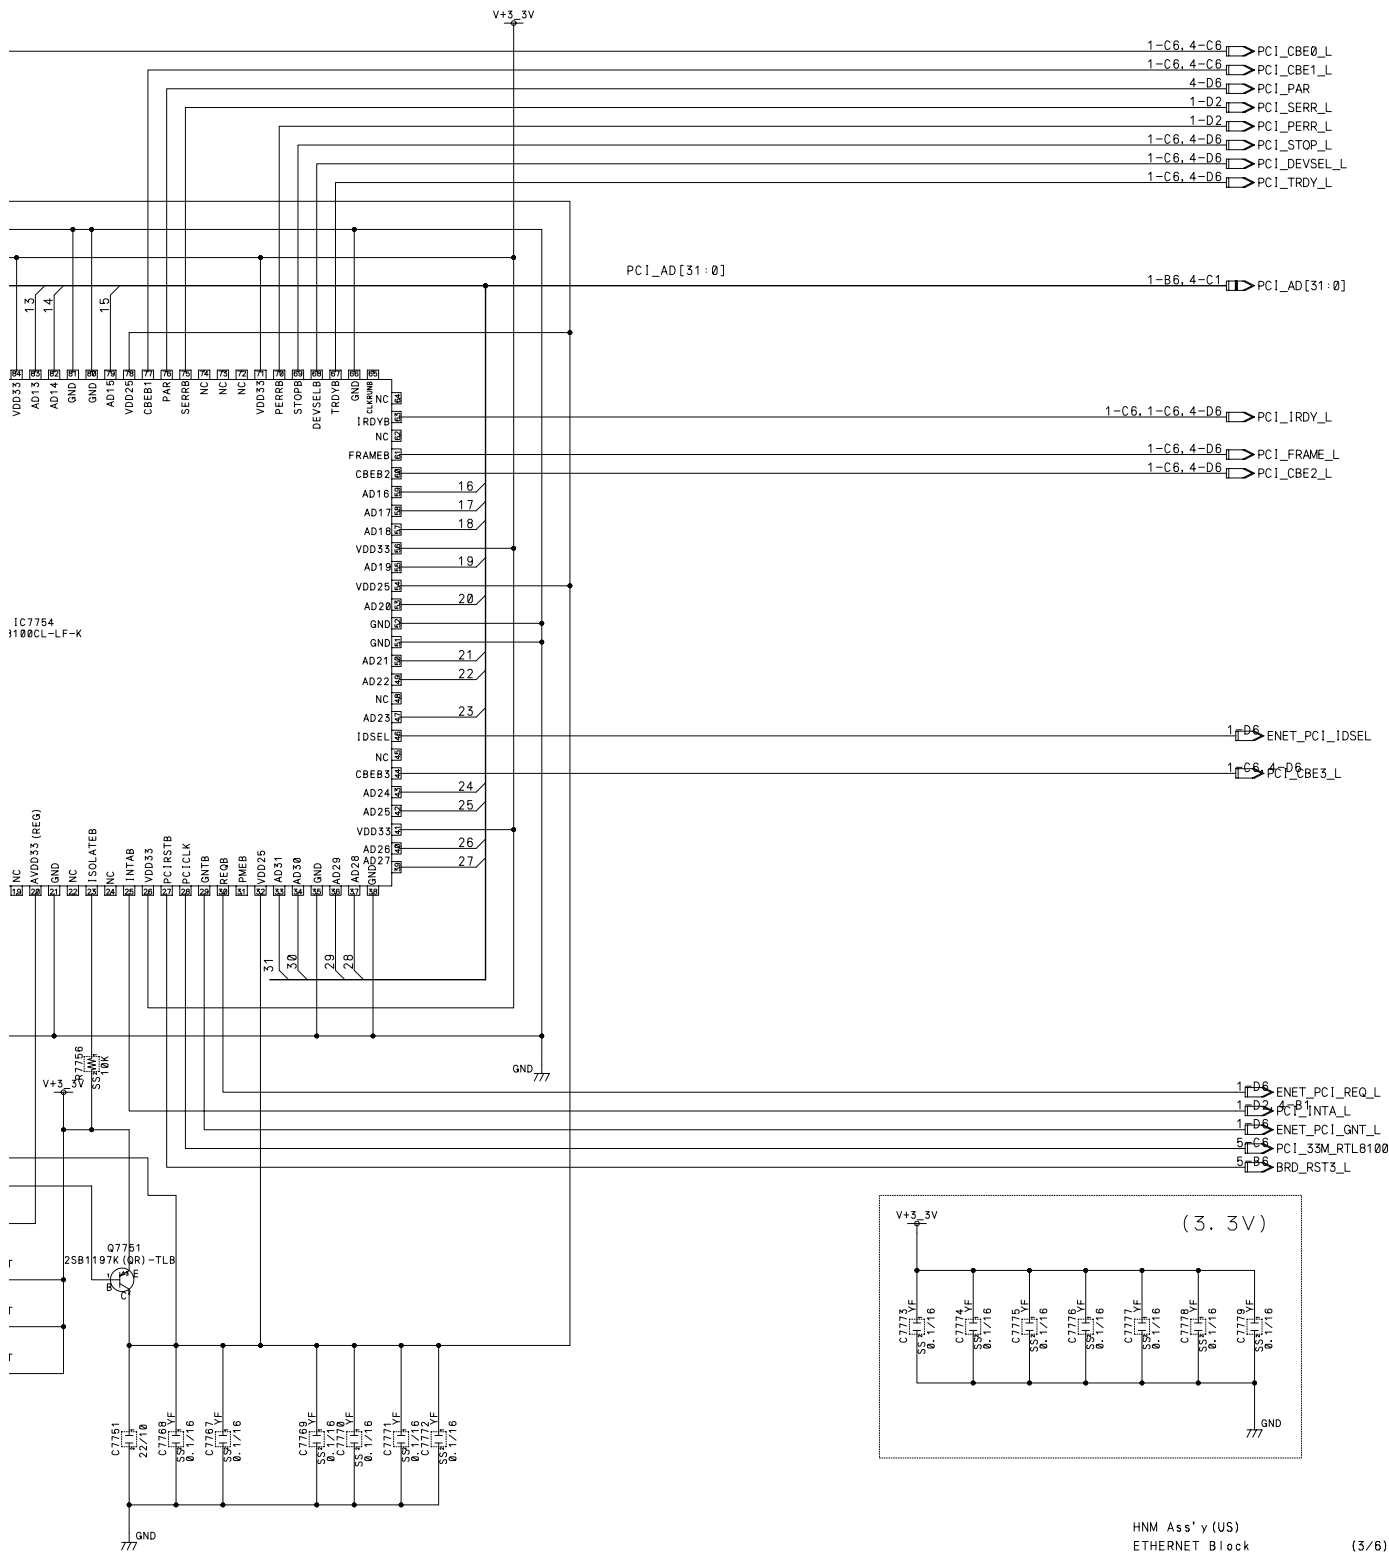

4

B


	USED	VACANT
C	7851-7869, 7871, 7872, 7874-7878 7880-7890	7856-7862, 7866, 7868, 7869, 7876-7878, 7880-7887
CN	7851	
F	7851-7858	7851, 7856, 7858
IC	7852, 7853, 7855-7857	7853, 7856
L	7851-7854	7851
Q	7851-7858	7851, 7858
R	7851-7900 7951-7966	7852-7854, 7856-7858, 7861, 7872, 7851-7855, 7859, 7863, 7866, 7862, 7865, 7867-7868
TP	7851-7859, 7861-7866	
X	7851	

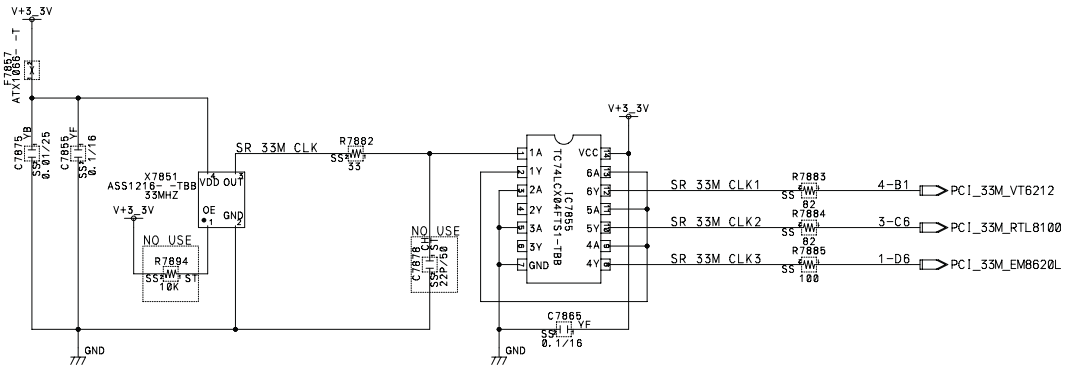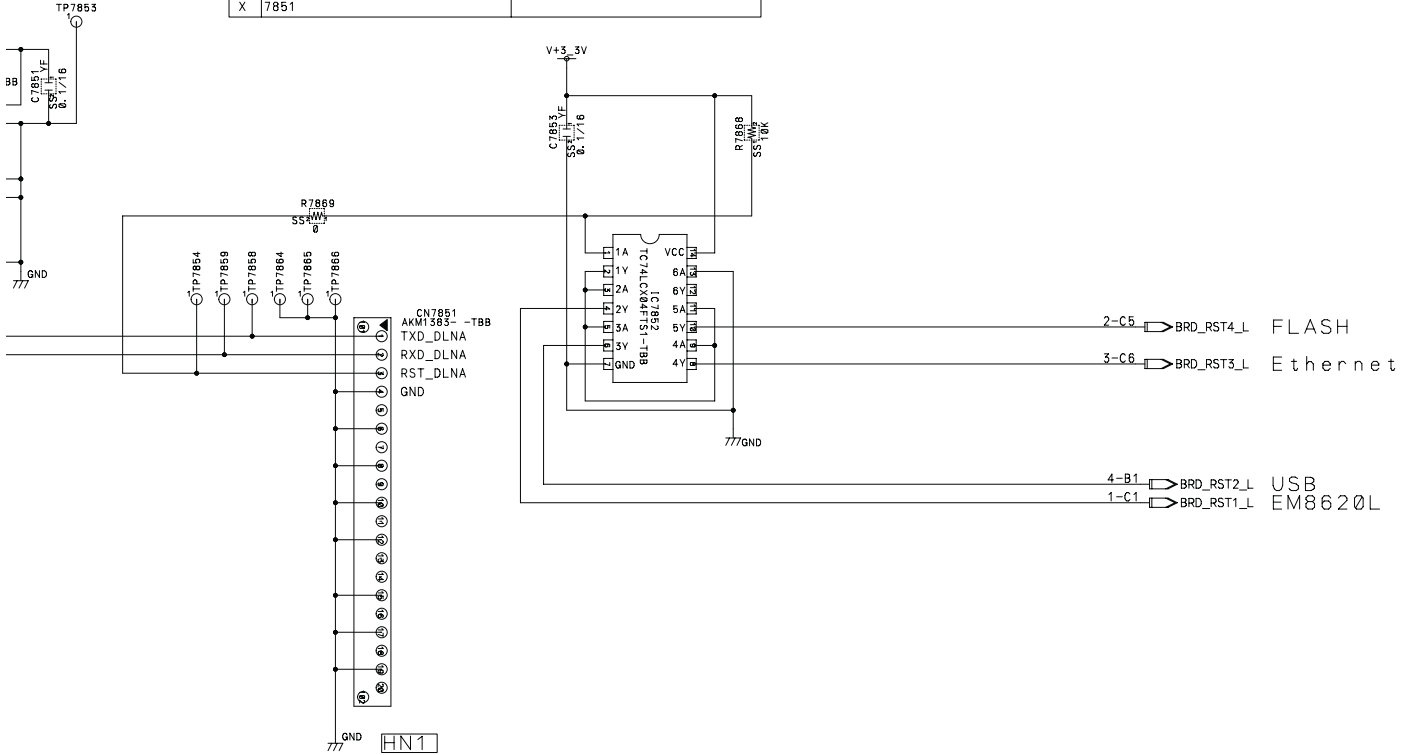


HNM Ass'y (US)
HNM_IO Block (5/6)

2.10 HN MODULE ASSY (6/6) [HNM_POWER BLOCK]


A

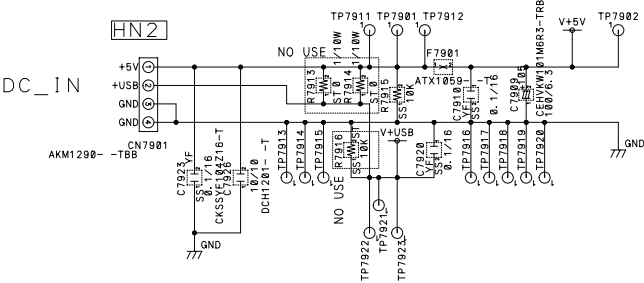


B

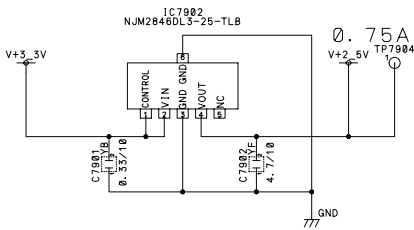


C

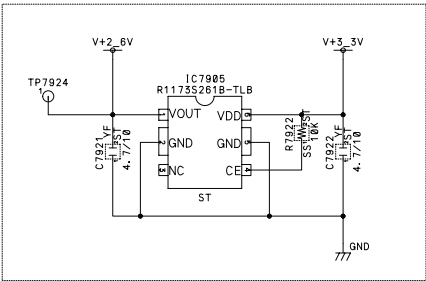


D

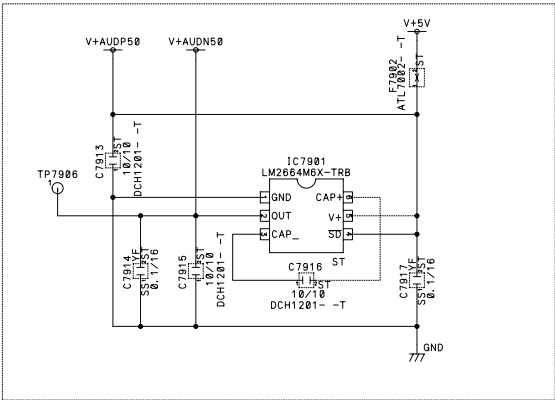



E

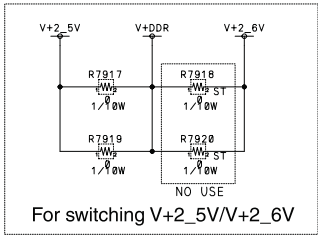




F

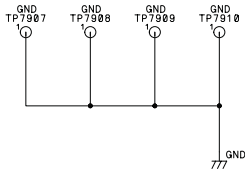

	USED	VACANT
C	7901-7922, 7924, 7925	7913-7917, 7921, 7922
CN	7901	
D	7901-7902	
F	7901-7902	7902
IC	7901-7905	7901, 7905
L	7901-7902	
R	7901-7923	7913, 7914, 7916, 7918, 7920-7923
TP	7901-7924	

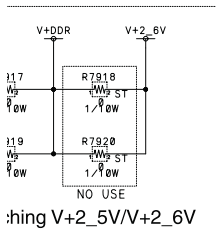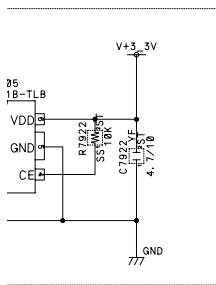

	VACANT
7924, 7925	7913-7917, 7921, 7922
	7902
	7901, 7905
	7913, 7914, 7916, 7918, 7920-7923

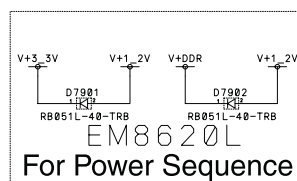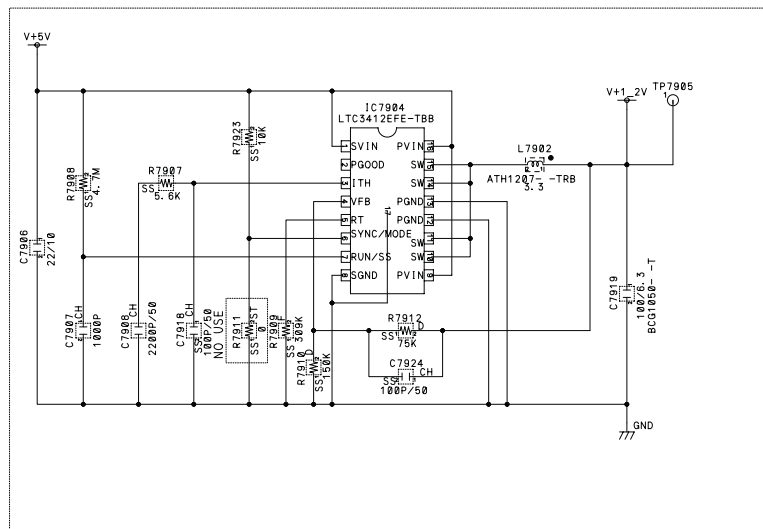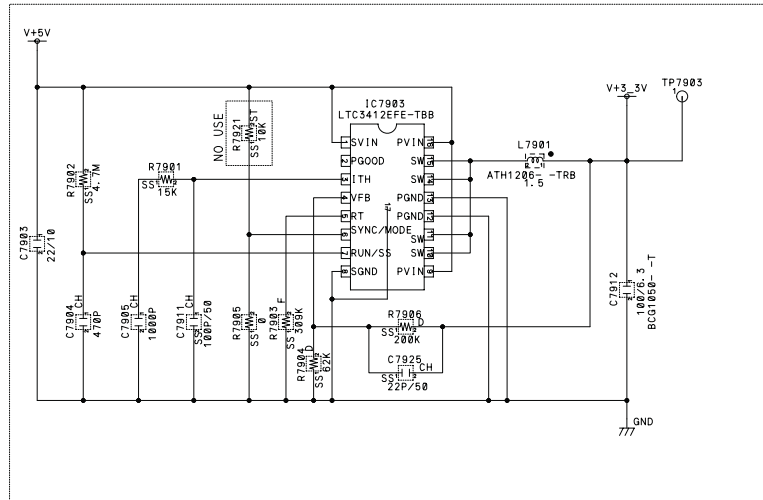


3.1 HN MODULE ASSY

F

Diagram illustrating the components and sides of a P.C. Board:

- Connector
- Capacitor
- P.C. Board
- Chip Part
- SIDE A
- SIDE B

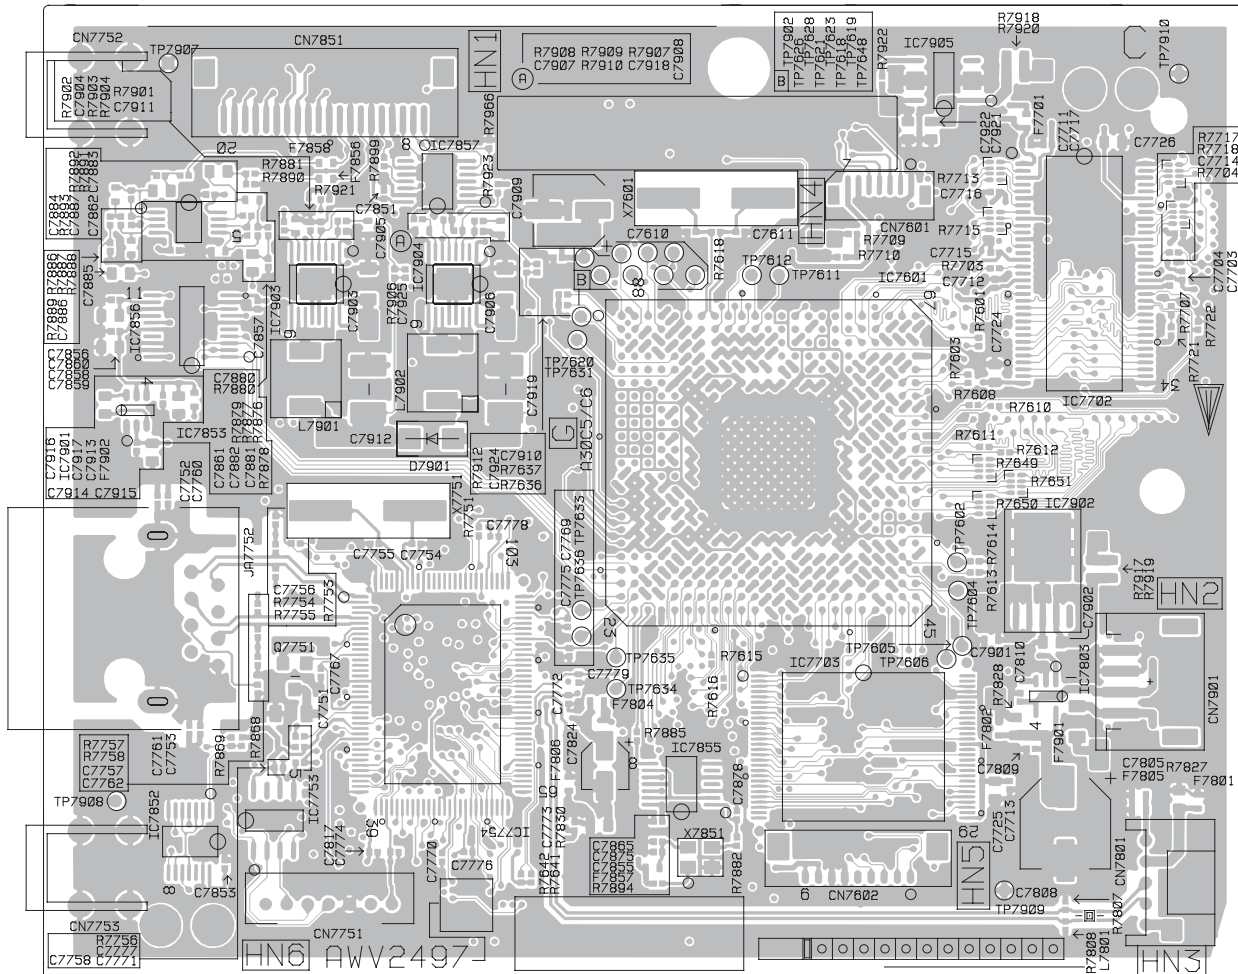SIDE A


(ANP2192-A)

4. DIAGNOSIS


4.1 DIAGNOSIS FLOWCHART

4.1.1 HN MODULE ASSY

< Network operation failure >

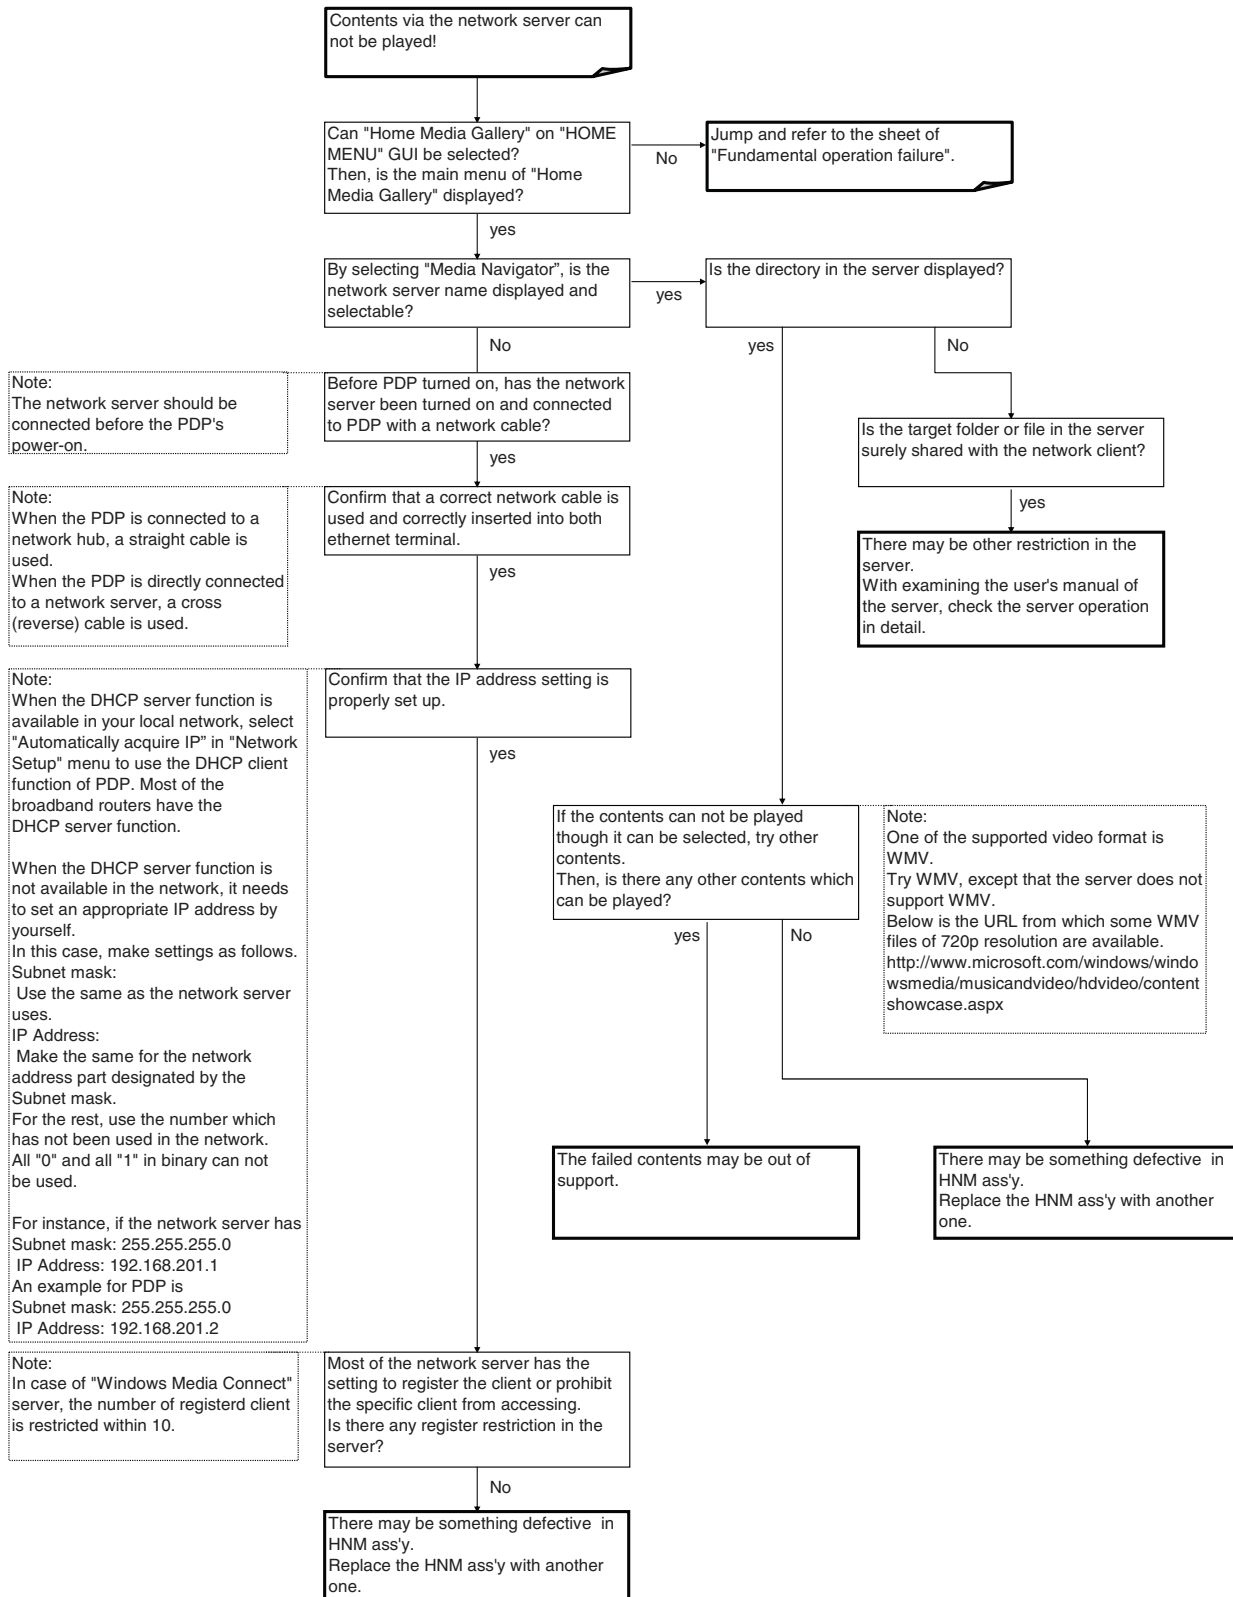

< USB operation failure >

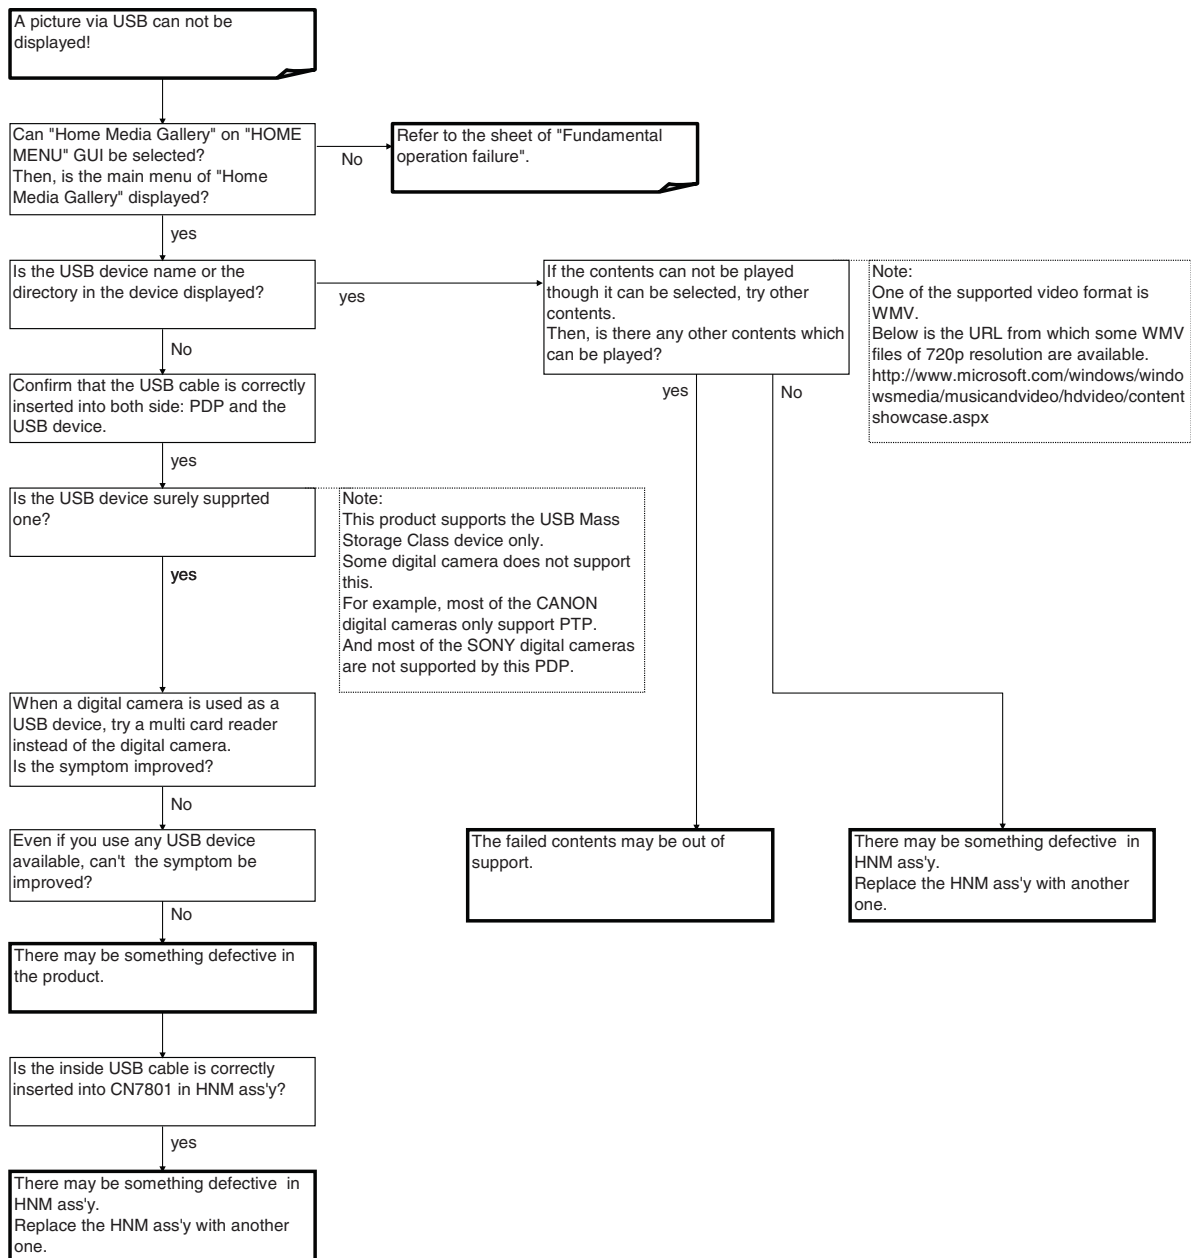

< Fundamental operation failure >

"Home Media Gallery" does not work at all!

Doesn't "Home Media Gallery" on "HOME MENU" become selectable after power-on?

Note:
It takes a short while to start "Home Media Gallery" function.
Please wait for about 40 seconds until "Home Media Gallery" turns selectable.

No

There may be something defective in the product.

Check each wire connection with the MAIN ass'y.
[HN1]CN7851<=>[M35]CN4002
[HN2]CN7901<=>[M31]CN4111
Isn't there any failure?

No

Check the power supply for HNM ass'y.
Is there +5V voltage on 1st and 2nd pin in CN7901 of HNM side and on 1st and 2nd pin in CN4111 of MAIN side?

yes

Check the UART communication between HNM ass'y and MAIN ass'y.
Almost 35 seconds after power-on, is any pulse signal observed on 2nd pin in CN7851: RXD_HNM?

Note:
After completing the self-initializing, HNM ass'y notice it to MAIN ass'y by using RXD_HNM.

No

To make analysis, remove the wire ass'y between CN7901 and CN4111. Then, check the voltage in MAIN side again.
Is +5V still not there?

yes

No

There may be something defective in MAIN ass'y.

There may be something defective in HNM ass'y.
Replace the HNM ass'y with another one.

There may be something defective in MAIN ass'y.
Check the UART path in MAIN ass'y.

Check the switching regulator circuit in MAIN ass'y for HNM power supply.
That is IC4309, Q4304 and the parts around it.

5. SERVICE MODE


5.1 DETAILS OF FACTORY MENU

5.1.1 HMG SERVICE MODE


1. Enter SERVICE FACTORY MODE and change to HMG/HG SERVICE MODE.

Refer to the service manual for Regular models (PDP-6010FD/KUCXC) about the changes method of MODE, and the operating procedure of keys.

2. If it changes to HMG/HG SERVICE MODE, the following screen will be displayed.

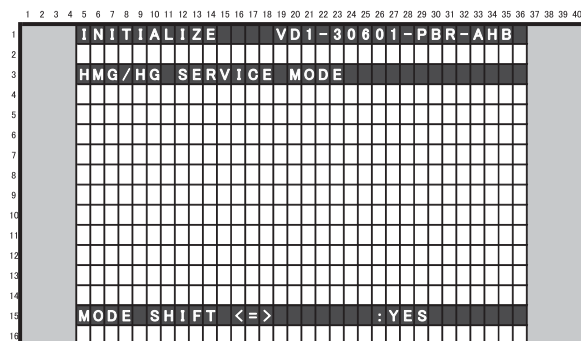

If this screen is displayed,
[ENTER] key is kept on pressing for 5 second when the status of this menu is <YES>,
Then HMG SERVICE mode will be started.
Then the following screen is displayed.

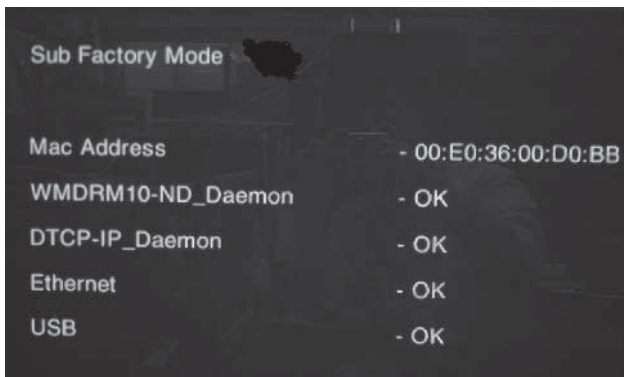

The details of each parameter displayed on the screen are as follows.

Mac Address	**.***.***.***.***	
WMDRM10-ND_Daemon	OK/NG	State of "WMDRM10-ND_Daemon"
DTCP-IP_Daemon	OK/NG	State of "DTCP-IP_Daemon"
Ethernet	OK/NG	State of "Ethernet" (Hardware connection state)
USB	OK/NG	State of "USB" (Hardware connection state)

2. End method
It is the same as the case that Home Media Gallery displays.

6. DISASSEMBLY

6.1 DISASSEMBLY AND REASSEMBLY PRECAUTIONS FOR SPEAKER SYSTEM

(1) The Grille Assy


The Grille Assy is secured to the baffle plate with two-sided tape and bosses. When removing the Grille Assy, if is necessary to wear cotton gloves.

Disassembly

1. Insert the tip of your gloved finger into the gap between the Grille Assy in front and the corner of the baffle plate so that the Grille Assy is slightly lifted.



2. Insert the gloved finger to the extent of the second joint into the gap between the cabinet and the Grille Assy.

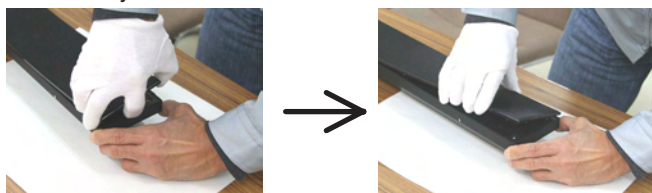

SERVICE PRECAUTIONS

Be careful in handling this product, because scratches on cabinet coating are easily noticeable. When working on this unit, be sure to place the cabinet on a piece of soft cloth for protection.

3. Alternately and gradually lift the left and right sides of the Grille Assy by about 5 cm, sliding gloved fingers along the cabinet. When lifting the Grille Assy, be sure to lift the left and right sides alternately, but not both sides simultaneously.



Note : Be careful not to bend the Grille Assy too far. Otherwise, it may be damaged.
OK : Good example **NG :** Bad example

OK



NG



Reassembly

Remove the old two-sided tape attached to the rear side of the Grille Assy and the front side of the Baffle, and adhere new two-sided tape. Press the bosses into the baffle plate and press the entire grille into position. (Press the bosses from the woofer frame.)

(2) Woofer (Disassembly)

The woofer is secured to the baffle plate with four screws from the outside. To remove the woofer, first remove the baffle plate. (Remove the baffle plate first, because the cables from the Network Assy are short.)

Remove the two packings from the side of the woofer frame.

Reassembly

When reassembling the woofer, place it so that its connector plate is facing downward. Tighten the screws to the baffle, then attach the two packings to the side of the woofer frame.

(3) Tweeter (Disassembly)

The tweeter is secured to the baffle plate with three screws from the outside. To remove the tweeter, first remove the baffle plate. (Remove the baffle plate first, because the cables from the Network Assy are short.)

Reassembly



When reassembling the tweeter, place it so that its connector and screw-hole positions align with those on the baffle plate.

Network Assy (Caution)


When removing the Network Assy, pull it out a little at a time from alternate sides, because it is seated tightly.

Baffle Assy (Caution)

When reassembling the cabinet and the baffle plate, secure the screws in the order shown in the figure below:

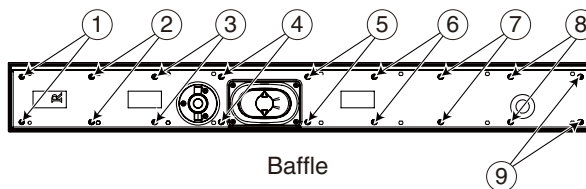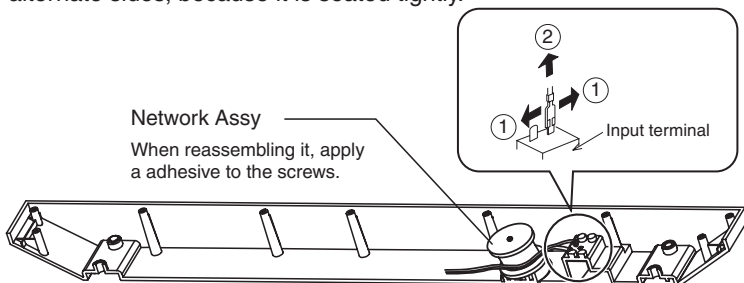

Service Manual

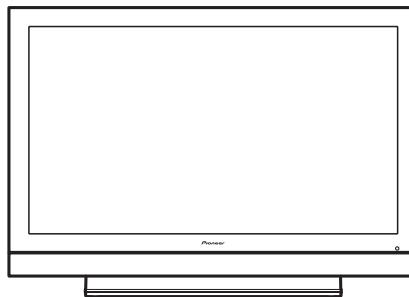

PDP-6010FD

ORDER NO.
ARP3453

PLASMA DISPLAY SYSTEM

PDP-6010FD

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-6010FD	KUCXC	AC 120 V	



For details, refer to "Important Check Points for good servicing".

SAFETY INFORMATION



This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis.

The following precautions should be observed :

1. When service is required, even though the PDP UNIT an isolation transformer should be inserted between the power line and the set in safety before any service is performed.
2. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
4. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
5. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing. Therefore, the following checks should be performed for the continued protection of the customer and servicetechnician.
6. Perform the following precautions against unwanted radiation and rise in internal temperature.
 - Always return the internal wiring to the original styling.
 - Attach parts (Gasket, Ferrite Core, Ground, Rear Cover, Shield Case etc.) surely after disassembly.
7. Perform the following precautions for the PDP panel.
 - When the front case is removed, make sure nothing hits the panel face, panel corner, and panel edge (so that the glass does not break).
 - Make sure that the panel vent does not break. (Check that the cover is attached.)
 - Handle the FPC connected to the panel carefully. Twisting or pulling the FPC when connecting it to the connector will cause it to peel off from the panel.
8. Pay attention to the following.
 - Pay extreme caution when the front case and rear panel are removed because this may cause a high risk of disturbance to TVs and radios in the surrounding.

Leakage Current Cold Check

With the AC plug removed from an AC power source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of 4 MΩ.


The below 4 MΩ resistor value indicate an abnormality which require corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into an AC power source (do not use an isolation transformer for this check).

Turn the AC power switch on.

Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 1 mA.

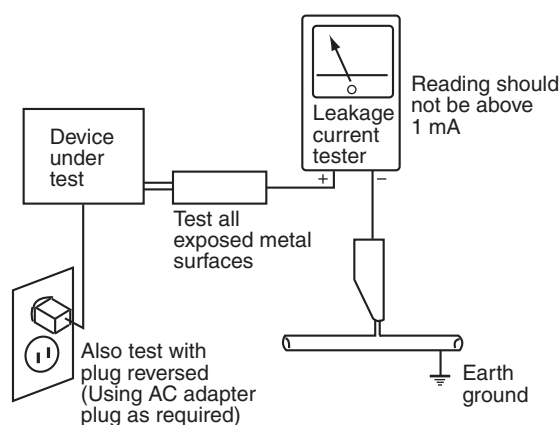

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification (addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

SAFETY INFORMATION	2
1. SERVICE PRECAUTIONS.....	7
1.1 NOTES ON SOLDERING	7
1.2 CHARGED SECTION AND HIGH VOLTAGE GENERATING POINT	8
2. SPECIFICATIONS.....	9
2.1 ACCESSORIES.....	9
2.2 SPECIFICATIONS	11
2.3 PANEL FACILITIES.....	12
3. BASIC ITEMS FOR SERVICE	15
3.1 CHECK POINTS AFTER SERVICING	15
3.2 QUICK REFERENCE	16
3.3 PCB LOCATION	18
3.4 JIGS LIST	19
3.5 CLEANING	19
4. BLOCK DIAGRAM	20
4.1 OVERALL WIRING DIAGRAM (1/2).....	20
4.2 OVERALL WIRING DIAGRAM (2/2).....	22
4.3 OVERALL BLOCK DIAGRAM (1/2)	24
4.4 OVERALL BLOCK DIAGRAM (2/2)	26
4.5 POWER SUPPLY UNIT	28
4.6 60F X DRIVE ASSY.....	29
4.7 60F Y DRIVE, 60F SCAN A, B, C and D ASSYS	30
4.8 POWER SUPPLY BLOCK of 60F X, Y DRIVE and 60F SCAN A, B, C and D ASSYS	31
4.9 60F ADDRESS L and S ASSYS.....	32
4.10 60F DIGITAL ASSY	33
4.11 MAIN ASSY (DTV BLOCK DIAGRAM).....	34
4.12 POWER SUPPLY BLOCK of MAIN ASSY	36
4.13 TANSHI ASSY	38
4.14 42/60 LED and FHD IR ASSYS.....	39
4.15 POWER SUPPLY BLOCK of FHD RLS and SIDE KEY ASSYS	40
5. DIAGNOSIS	41
5.1 POWER SUPPLY OPERATION.....	41
5.1.1 LED DISPLAY INFORMATION.....	41
5.1.2 POWER ON SEQUENCE	42
5.1.3 DETAILS OF POWER ON SEQUENCE.....	43
5.2 DIAGNOSIS FLOWCHART OF FAILURE ANALYSIS	45
5.2.1 WHOLE UNIT	45
5.2.2 POWER SUPPLY UNIT	47
5.2.3 DRIVE ASSY	48
5.2.4 DIGITAL ASSY	52
5.2.5 MAIN ASSY	53
5.2.6 VIDEO SYSTEM	54
5.2.7 AUDIO SYSTEM	60
5.3 DIAGNOSIS OF PD (POWER-DOWN)	63
5.3.1 BLOCK DIAGRAM OF THE POWER-DOWN SIGNAL	63
5.3.2 PD (POWER-DOWN) DIAGNOSIS OF FAILURE ANALYSIS	64
5.4 DIAGNOSIS OF SD (SHUTDOWN)	67
5.4.1 BLOCK DIAGRAM OF THE SHUTDOWN SIGNAL	67
5.4.2 SD (SHUTDOWN) DIAGNOSIS	68
5.5 NON-FAILURE INFORMATION.....	70
5.5.1 INFORMATION ON SYMPTOMS THAT DO NOT CONSTITUTE FAILURE	70
5.5.2 FUNCTION OF DECREASING THE BRIGHTNESS LEVEL	73
5.6 OUTLINE OF THE OPERATION	74
5.6.1 PANEL DRIVE-POWER ON / OFF FUNCTION	74
5.6.2 SPECIFICATION OF THE FAN CONTROL.....	75
5.6.3 PROCESSING IN ABNORMALITY	76
5.6.4 TRAP SWITCH.....	79

	6. SERVICE FACTORY MODE	80
	6.1 OUTLINE OF THE SERVICE FACTORY MODE	80
A	6.1.1 SERVICE FACTORY MODE TRANSITION CHART	80
	6.1.2 HOW TO ENTER/EXIT SERVICE FACTORY MODE	80
	6.1.3 FUNCTIONS WHEN ENTERING THE SERVICE FACTORY MODE	81
	6.1.4 REMOTE CONTROL CODE IN SERVICE FACTORY MODE	82
	6.1.5 PDP SERVICE REMOTE CONTROL	83
	6.1.6 FACTORY HIERARCHICAL TABLE	84
	6.1.7 INDICATIONS IN SERVICE FACTORY MODE	86
	6.2 DETAILS OF FACTORY MENU	88
	6.2.1 INFORMATION	88
	6.2.2 PANEL FACTORY (+)	98
	6.2.3 OPTION	108
	6.2.4 INITIALIZE	109
B	7. DISASSEMBLY	112
	7.1 FLOWCHART OF REMOVAL ORDER FOR THE MAIN PARTS AND BOARDS	112
	7.2 DISASSEMBLY	113
	7.3 DISASSEMBLY AND REASSEMBLY PRECAUTIONS FOR SPEAKER SYSTEM	120
	8. EACH SETTING AND ADJUSTMENT	121
	8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED	121
	8.2 BACKUP OF THE EEPROM (DIGITAL ASSY)	123
	8.3 HOW TO CLEAR HISTORY DATA	126
	8.4 ADJUSTMENT WHEN THE SERVICE PANEL ASSY IS REPLACED	127
	8.5 ADJUSTMENT WHEN THE DRIVE ASSYS ARE REPLACED	140
	8.6 PRECAUTION ON REPLACEMENT OF THE POWER SUPPLY UNIT	143
C	9. RS-232C	144
	9.1 OUTLINE OF RS-232C COMMAND	144
	9.1.1 PREPARED TOOLS	144
	9.1.2 USING RS-232C COMMANDS	144
	9.2 LIST OF RS-232C COMMANDS	145
	9.3 DETAILS OF EACH COMMANDS	154
	9.3.1 QS1 (PANEL STATUS)	154
	9.3.2 QS2 (PANEL OPERATION DATA)	155
	9.3.3 QS3 (OTHER DATA ON THE PANEL)	156
	9.3.4 QAJ (PANEL ADJUSTMENT DATA)	157
	9.3.5 QPW (VIDEO ADJUSTMENT DATA OF THE PANEL)	158
	9.3.6 QPM (PULSE METER VALUE)	158
D	9.3.7 QPD (PD LOGS)	159
	9.3.8 QSD (SD LOGS)	160
	9.3.9 QSE (DESTINATION PECULIAR INFORMATION)	161
	9.3.10 QMT (TEMPERATURE / FAN ROTATION / ROOM LIGHT SENSOR)	161
	9.3.11 QNG (SHUTDOWN INFORMATION OF MTB)	162
	9.3.12 QSI (INPUT SIGNAL DATA)	164
	9.3.13 DRV (PANEL DRIVE-POWER ON / OFF)	164
	9.3.14 FAY / FAN (ADJ. COMMANDS PERMISSION / PROHIBITION)	165
	9.3.15 FAJ / UAJ / CBU / BCP (BACKUP FUNCTION FOR ADJUSTMENT VALUE)	165
	10. EXPLODED VIEWS AND PARTS LIST	166
	10.1 PACKING SECTION	166
	10.2 REAR SECTION	168
E	10.3 FRONT SECTION	170
	10.4 CHASSIS SECTION (1/3)	172
	10.5 CHASSIS SECTION (2/3)	174
	10.6 CHASSIS SECTION (3/3)	176
	10.7 PANEL CHASSIS SECTION	178
	10.8 MULTI BASE SECTION	180
	10.9 PDP SERVICE ASSY 608F (AWU1274)	182
	10.10 SPEAKER SYSTEM (PACKING)	185
	10.11 CS ASSY	186

1. SERVICE PRECAUTIONS

1.1 NOTES ON SOLDERING

- For environmental protection, lead-free solder is used on the printed circuit boards mounted in this unit.
Be sure to use lead-free solder and a soldering iron that can meet specifications for use with lead-free solders for repairs accompanied by reworking of soldering.
- Compared with conventional eutectic solders, lead-free solders have higher melting points, by approximately 40 °C.
Therefore, for lead-free soldering, the tip temperature of a soldering iron must be set to around 373 °C in general, although the temperature depends on the heat capacity of the PC board on which reworking is required and the weight of the tip of the soldering iron.

Compared with eutectic solders, lead-free solders have higher bond strengths but slower wetting times and higher melting temperatures (hard to melt/easy to harden).

The following lead-free solders are available as service parts:

- Parts numbers of lead-free solder:
GYP1006 1.0 in dia.
GYP1007 0.6 in dia.
GYP1008 0.3 in dia.

1.2 CHARGED SECTION AND HIGH VOLTAGE GENERATING POINT

■ Charged Section

The places where the commercial AC power is used without passing through the power supply transformer.

If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

■ High Voltage Generating Point

The places where voltage is 100 V or more except for the charged places described above. If the places are touched, there is a risk of electric shock.

The VSUS voltage remains for several minutes after the power to the unit is turned off. These places must not be touched until about 10 minutes after the power is turned off, or it is confirmed with a tester that there is no residual VSUS voltage.

If the procedures described in “5.6.1 PANEL DRIVE-POWER ON/OFF FUNCTION” are performed before the power is turned off, the voltage will be discharged in about 30 seconds.

POWER SUPPLY UNIT	(210 V)
60F X DRIVE Assy	(210 V)
60F Y DRIVE Assy	(-270 V to 400 V)
60F SCAN A Assy	(-270 V to 400 V)
60F SCAN B Assy	(-270 V to 400 V)
60F SCAN C Assy	(-270 V to 400 V)
60F SCAN D Assy	(-270 V to 400 V)

- : Part is Charged Section.
 ■ : Part is the High Voltage Generating Points other than the Charged Section.

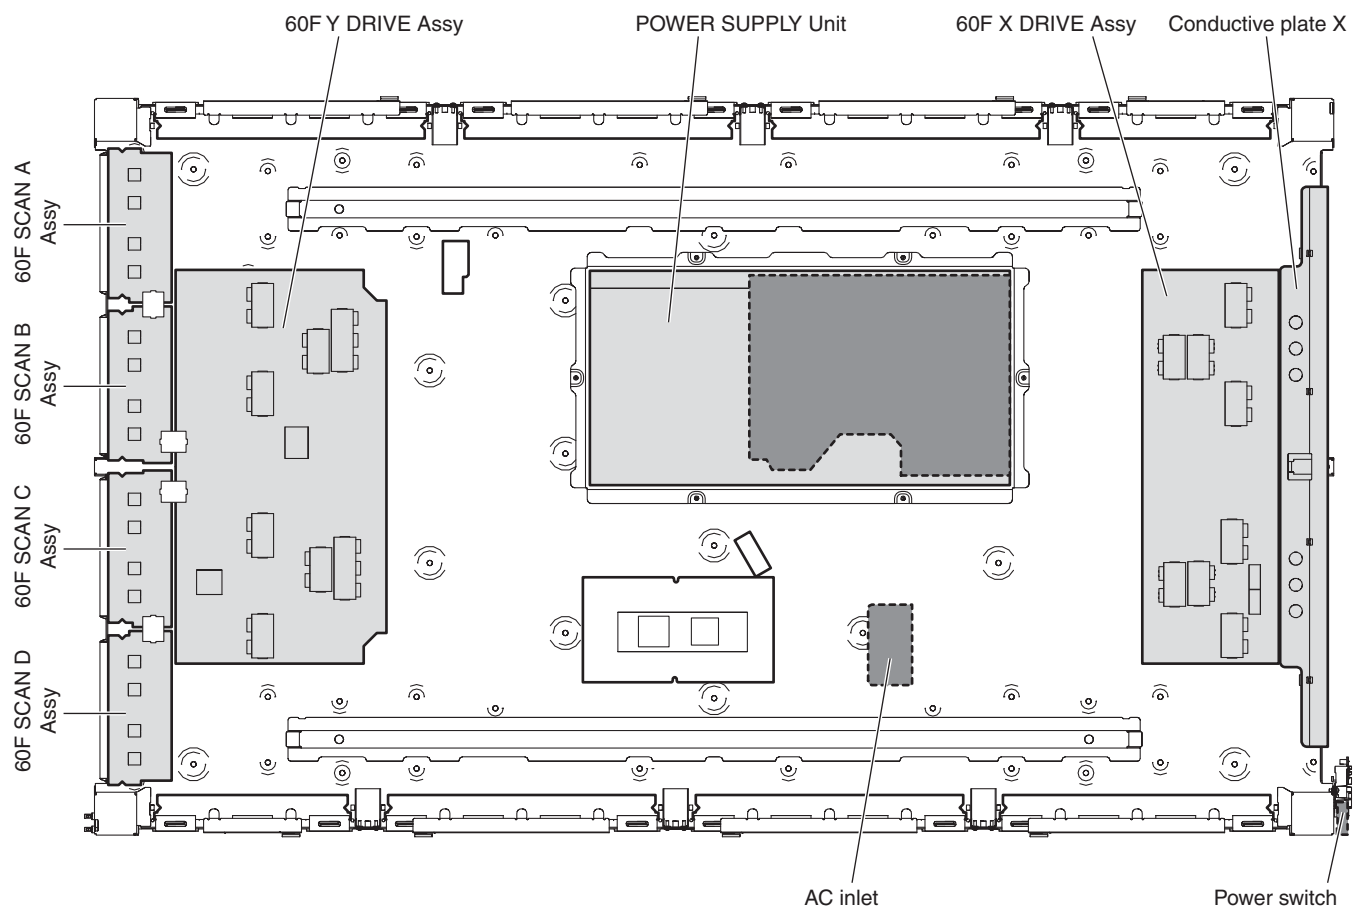



Fig. High Voltage Generating Point (Rear view)

PDP-6010FD


2. SPECIFICATIONS

2.1 ACCESSORIES

- Remote control unit (AXD1550)

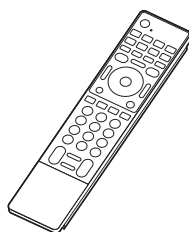


- Alkaline dry cell battery (LR6, AA)

 


- Binder Assy (AEC1908)

 
- Speed clamp: ×3



- Bead band: ×3

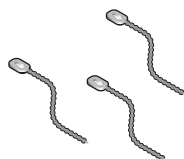


- Cleaning cloth (AED1285)

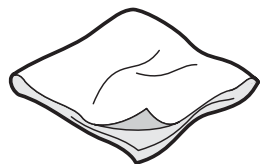


- Warranty card



- Operating instructions (ARE1472)

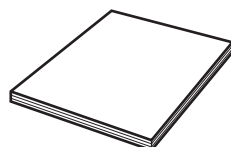

- Power cord (2 m/6.6 feet) (ADG1215)

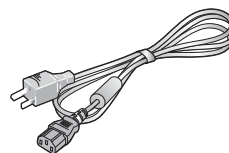

- Terminal Position Sheet (AAX3504)
(for use when mounting the plasma display on the wall)



A

B

C


D

E


F

Stand accessories

- Base cover: ×1
(AXY1198)

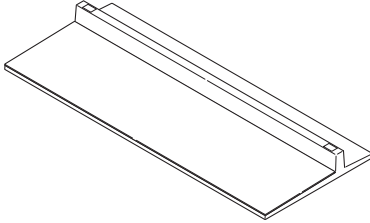


- Stand pipe (L): ×1
(AXY1186)

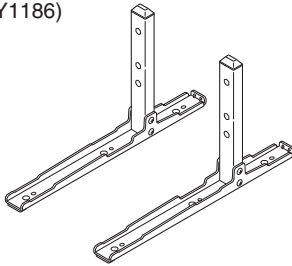

- Stand pipe (R): ×1
(AXY1187)

- Stand accessory Assy
(AXY1193)

- Plastic band: ×4

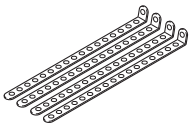

- Screw ① : ×6
(M5 × 10 mm: silver)



- Screw ② : ×4
(M6 × 20 mm: black)

 


- Screw ③ : ×4
(for plastic bands)
(M4 × 10 mm: black)



Speaker accessories

- Speaker cable: ×2
(SDS1202)




Speaker Mounting Fittings

- Bracket Assy (L)
: ×1
(SXG1130)




Bracket, for right and left sides

 - Bracket Assy (R)
: ×1
(SXG1132)



- Bracket Assy (C): ×1
(SXG1131)

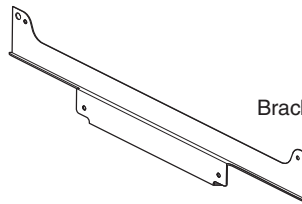

Brackets for center

- Speaker mounting screw : ×10
(M5 × 10 mm: black)
(SBA1269)



- Hexagonal wrench : ×1
(Opposite side 4 mm for M5 use)
(SEX1028)



2.2 SPECIFICATIONS

Item			60" plasma display model: PDP-6010FD
Number of pixel			1920 × 1080 pixels
Audio Amplifier			17 W + 17 W (1 kHz, 10 %, 6 Ω)
Speakers			Woofer: 4.8 cm x 13 cm cone type Tweeter: 2.5 cm semidome type
Sound Effect			SRS FOCUS/SRS/SRS TruBass
Power Requirement			120 V AC, 60 Hz, 532 W (20 W Standby)
Weight			Main unit: 55.5 kg (122.4 lbs.) Stand: 5.9 kg (13.1 lbs.) (including bolts) Speaker system: 4.8 kg (10.6 lbs.) (including cables, mounting fittings and screws) Total: 66.2 kg (145.9 lbs.)
Reception System (Digital)			ATSC Digital TV system
Circuit type			8VSB/64QAM/256QAM/QPSK demodulation
Tuner			VHF/UHF CATV
Audio format			Dolby Digital
Reception System (Analog)			American TV standard NTSC system
Circuit type			Video signal detection PLL full synchronous detection, PLL digital Synthesizer system
Tuner			VHF/UHF CATV
Audio multiplex			BTSC system
Terminals	Rear	ANT/CABLE A IN	75 Ω UNBAL, F Type for DTV/VHF/UHF/CATV in
		ANT B IN	75 Ω UNBAL, F Type for VHF/UHF/CATV in
		INPUT 1	S-VIDEO in, VIDEO in, AUDIO in
		INPUT 2	COMPONENT VIDEO in, VIDEO in, AUDIO in
		INPUT 4	HDMI in*, AUDIO in
		PC INPUT	Analog RGB in, AUDIO in
		INPUT 5	HDMI in*, AUDIO in
		INPUT 6	HDMI in*
		INPUT 7	HDMI in*
		AUDIO OUT	AUDIO out (Fixed)
		DIGITAL OUT	Optical
		CONTROL OUT	1
		SPEAKERS	6 Ω to 16 Ω
	SUB WOOFER	Variable	
	CableCARD	Point of Deployment	
	Side	INPUT 3	COMPONENT VIDEO in, VIDEO in, AUDIO in
		PHONES	16 Ω to 32 Ω recommended
		USB	USB in**
On-screen display languages			English/French/Spanish


* This conforms to HDMI1.3 and HDCP1.1.

HDMI (High Definition Multimedia Interface) is a digital interface that handles both video and audio using a single cable.
HDCP (High-bandwidth Digital Content Protection) is a technology used to protect copyrighted digital contents that use the Digital Visual Interface (DVI).

** This conforms to USB 1.1 and 2.0 .

• Design and specifications are subject to change without notice.


Dimensions

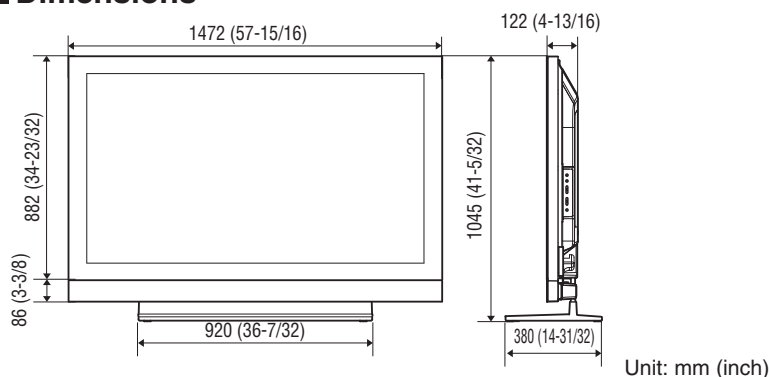

PDP-6010FD

2.3 PANEL FACILITIES

■ Front Section

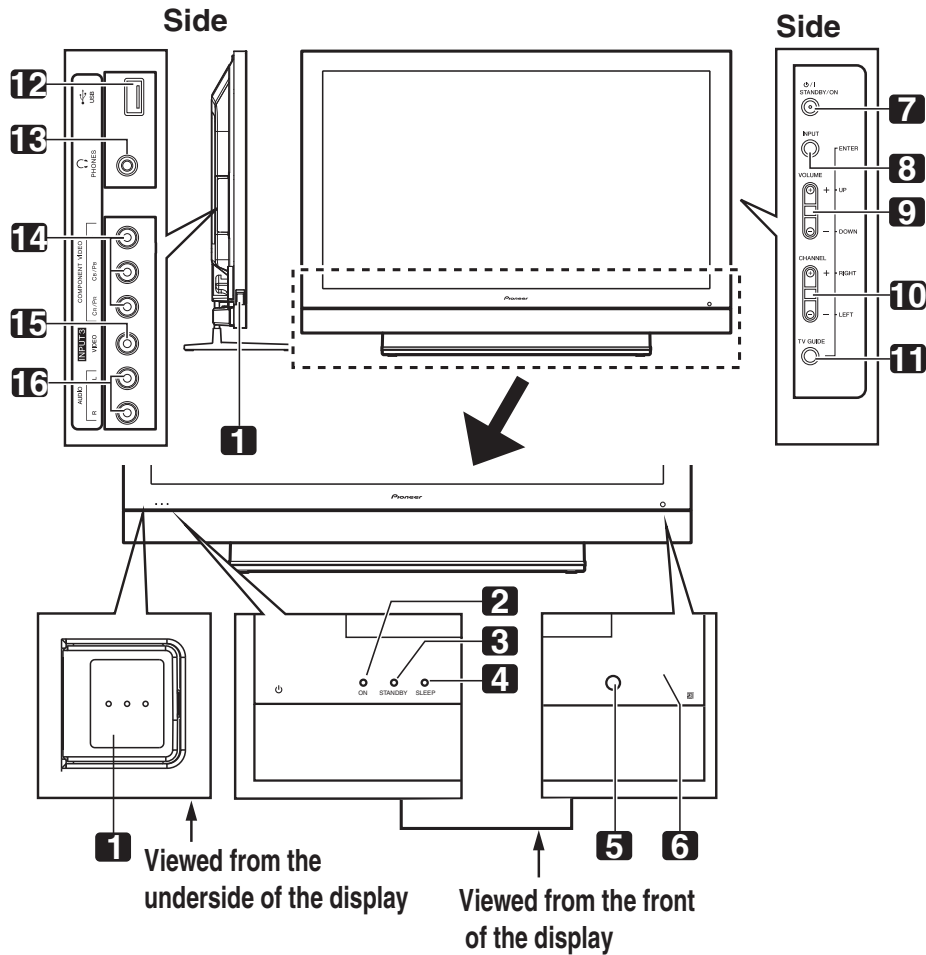

1 button (This button is located on the bottom of the side panel of the plasma display. If the button is off, the power will not turn on even when **TV** on the remote control unit or **STANDBY/ON** on the plasma display is pressed. To turn on the power, slide up.)

2 POWER ON indicator

3 STANDBY indicator

4 SLEEP indicator

5 Room Light Sensor

6 Remote control sensor

7 **STANDBY/ON** button

8 **INPUT** button (**ENTER** button*)

9 **VOLUME UP/DOWN** buttons (**UP/DOWN** buttons*)

10 **CHANNEL UP/DOWN** buttons (**LEFT/RIGHT** buttons*)

11 **TV GUIDE** button*

12 USB port

13 PHONES output terminal


14 INPUT 3 terminals (COMPONENT VIDEO: Y, P_B, P_R)

15 INPUT 3 terminal (VIDEO)

16 INPUT 3 terminals (AUDIO)

The buttons with asterisks (*) can operate the TV Guide On Screen™ system.


■ Rear Section

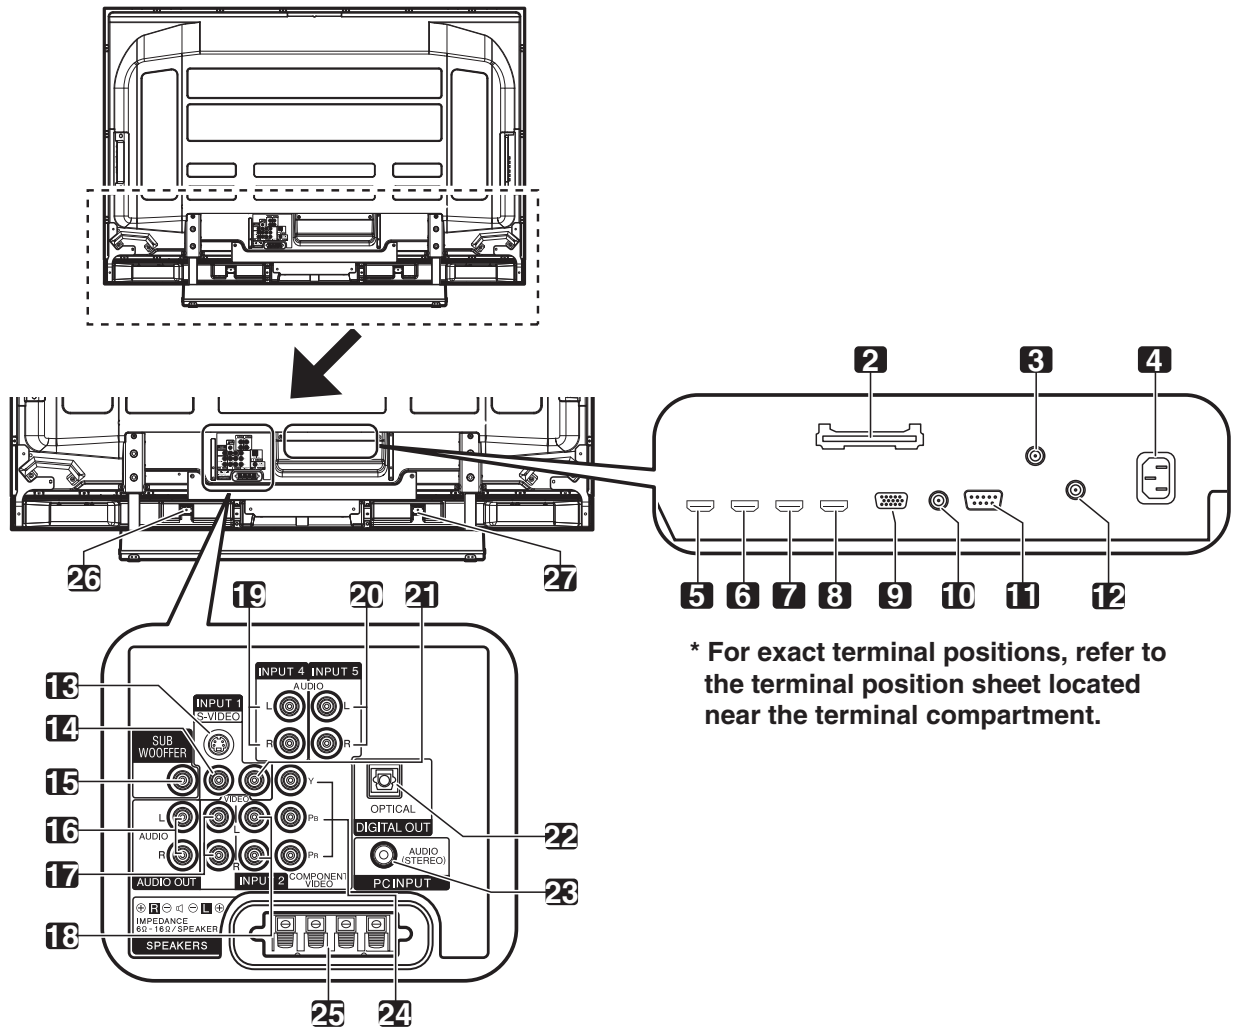

- | | | | |
|----|---|----|--|
| 2 | CableCARD™ slot | 17 | INPUT 1 terminals (AUDIO) |
| 3 | ANT/CABLE A IN terminal | 18 | INPUT 2 terminals (AUDIO) |
| 4 | AC IN terminal | 19 | INPUT 4 terminals (AUDIO) |
| 5 | INPUT 4 terminal (HDMI) | 20 | INPUT 5 terminals (AUDIO) |
| 6 | INPUT 5 terminal (HDMI) | 21 | INPUT 2 terminal (VIDEO) |
| 7 | INPUT 6 terminal (HDMI) | 22 | DIGITAL OUT terminal (OPTICAL) |
| 8 | INPUT 7 terminal (HDMI) | 23 | PC INPUT terminal (AUDIO) |
| 9 | PC INPUT terminal (ANALOG RGB) | 24 | INPUT 2 terminals (COMPONENT VIDEO: Y, Pb, Pr) |
| 10 | CONTROL OUT terminal | 25 | SPEAKERS (R/L) terminals |
| 11 | RS-232C terminal (used for factory setup) | 26 | SPEAKERS (R) terminal (Speaker side) |
| 12 | ANT B IN terminal | 27 | SPEAKERS (L) terminal (Speaker side) |
| 13 | INPUT 1 terminal (S-VIDEO) | | |
| 14 | INPUT 1 terminal (VIDEO) | | |
| 15 | SUB WOOFER terminal | | |
| 16 | AUDIO OUT terminals (AUDIO) | | |

Remote Control Unit

This section describes the functions of the buttons available when the mode switch has been set to TV.

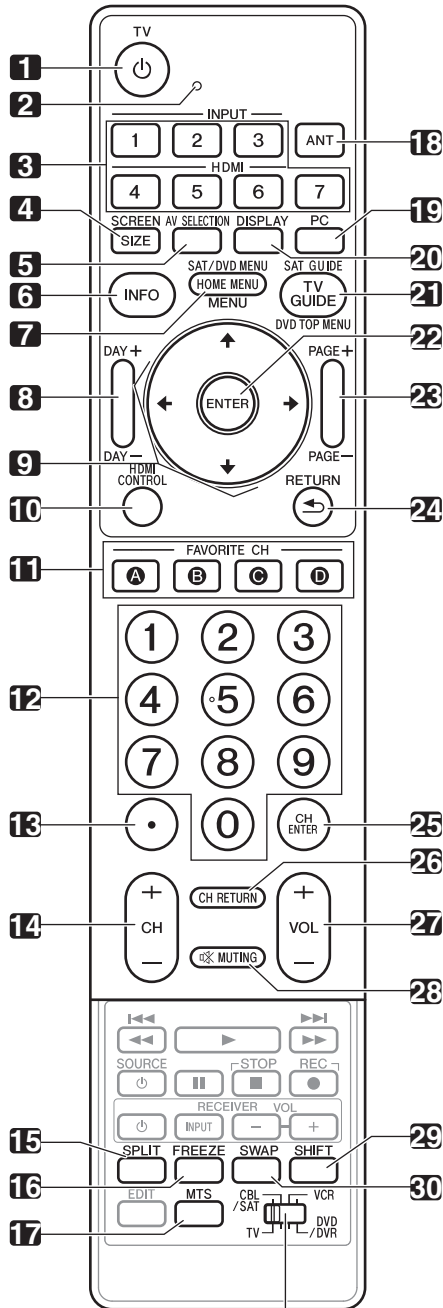

Mode switch
(with "TV" selected)

- 1 **TV** : Turns on the power to the plasma display or places it into standby mode.
- 2 **Transmission confirmation LED**
- 3 **INPUT**: Selects an input source of the plasma display. ("INPUT1", "INPUT 2", "INPUT3", "INPUT4", "INPUT5", "INPUT6" and "INPUT 7")
- 4 **SCREEN SIZE**: Selects the screen size.
- 5 **AV SELECTION**: Selects audio and video settings. (AV source: OPTIMUM, STANDARD, DYNAMIC, MOVIE, GAME, USER. PC source: STANDARD, USER.)
- 6 **INFO**: Displays a channel banner when a TV program is being watched.
When the TV Guide On Screen™ system is in operation, displays information about the currently highlighted channel (if available).
- 7 **HOME MENU**: Displays the HOME MENU screen.
MENU: Displays a panel menu when the TV Guide On Screen™ system is in operation.
- 8 **DAY +/-**: Jumps to the next or previous day of program listings in the TV Guide On Screen™ Listing service.
- 9 **↑/↓/←/→**: Selects a desired item on the menu screen.
- 10 **HDMI CONTROL**: Displays the HDMI Control menu.
- 11 **FAVORITE CH (A, B, C, D)**:
Selects any of the four preset channels.
While watching, you can toggle the set channels by pressing A, B, C and D.
- 12 **0 to 9**: Selects the channel.
- 13 **• (dot)**: Enters a dot.
- 14 **CH +/-**: Selects the channel.
- 15 **SPLIT**: Switches the screen mode among 2-screen, picture-in-picture, and single-screen.
- 16 **FREEZE**: Freezes a frame from a moving image. Press again to cancel the function.
- 17 **MTS**: Selects MTS/SAP or language depending on the program being watched.
- 18 **ANT**: Selects the antenna (A, B).
- 19 **PC**: Selects the PC terminal as an input source.
- 20 **DISPLAY**: Displays the channel information.
- 21 **TV GUIDE**: Displays the TV Guide On Screen™ system.
- 22 **ENTER**: Executes a command.
- 23 **PAGE +/-** (for the TV Guide On Screen™ system): Scrolls the program listing screen vertically.
- 24 **RETURN**: Returns to the previous menu screen.
- 25 **CH ENTER**: Executes a channel number.
- 26 **CH RETURN**: Returns to the previous channel. This button is disabled while the TV Guide On Screen™ system is displayed.
- 27 **VOL +/-**: Sets the volume.
- 28 **MUTING**: Mutes the sound.
- 29 **SHIFT**: Moves the location of the small screen when in the picture-in-picture mode.
- 30 **SWAP**: Switches between the two screens when in the 2-screen or picture-in-picture mode.

Luminous remote control buttons

All buttons on the remote control unit are luminous and gather and store light. This enables quick access to the desired function when performing operations in dark places.

Note

- When using the remote control unit, point it at the plasma display.

3. BASIC ITEMS FOR SERVICE

3.1 CHECK POINTS AFTER SERVICING

Items to be checked after repair (PDP)

To ensure the quality of the product after repair, check the recommended items shown below:

No.	Procedures	Item to be checked
1	Check if all the symptoms pointed out by the customer have been addressed.	The symptoms in question must not be reproduced.
2	Connect the peripheral equipment.	Connect all external peripheral equipment as originally connected and check if the connections are correct.
3	Check the video and audio.	Tune in to the stations that the customer would normally receive and check if video and audio are normal.
4	Check the buttons and controls.	Use the buttons and controls on the remote control unit and main unit and check if they operate properly.
5	Check the cabinet.	Check for any scratches or dirt that have been made or attached on the cabinet after receiving the product for repair.

See the table below for the items to be checked regarding video and audio:

Item to be checked regarding video	Item to be checked regarding audio
Block noise	Distortion
Horizontal noise	Noise
Dot noise	Volume too low
Disturbed image (video jumpiness)	Volume too high
Too dark	Volume fluctuating
Too bright	Sound interrupted
Mottled color	

3.2 QUICK REFERENCE

Quick Reference upon Service Visit ①
Notes, PD/SD diagnosis, and methods for various settings

Notes when visiting for service

1. Notes when disassembling/reassembling

- ① **Rear case**
When reassembling the rear case, the screws must be tightened in a specific order. Be careful not to tighten them in the wrong order forcibly. For details, see "Rear Case" in "7. DISASSEMBLY".
- ② **Attaching screws for the HDMI connector**
When attaching the HDMI connector after replacing the Main Assy, secure the HDMI connector manually with a screwdriver, but not with an electric screwdriver. If you tighten the screws too tightly with an electric screwdriver, the screw heads may be damaged, in which case the screws cannot be untightened/tightened any more.

2. On parts replacement

- ① **How to discharge before replacing the Assys**
A charge of significant voltage remains in the Plasma Panel even after the power is turned off. Safely discharge the panel before replacement of parts, in either manner indicated below:
A: Let the panel sit at least for 3 minutes after the power is turned off.
B: Turn the Large Signal System off before the power is turned off then, after 1 minute, turn the power off.
For details, see "5.6.1 PANEL DRIVE-POWER ON/OFF FUNCTION".
- ② **On the settings after replacement of the Assys**
Some boards need settings made after replacement of the Assys. For details, see "8. EACH SETTING AND ADJUSTMENT".

3. On various settings

- ① **Setting in Factory mode**
After a Mask indication into the panel is performed, be sure to set the Mask setting to "OFF" then exit Factory mode.

PD/SD			
Item		No. of LEDs flashing	
		Red	Blue
Panel section	SQ_LSI		Blue 1
	Communication with the module IIC		Blue 2
	DIGITAL-RST2		Blue 3
	Panel high temperature		Blue 4
MTB section	Audio/ Short-circuit SP terminal		Blue 5
	Communication with the Module UCOM		Blue 6
	Main 3-wire serial communication		Blue 7
	Main IIC communication		Blue 8
	Communication with the Main UCOM		Blue 9
	FAN		Blue 10
	Unit high temperature		Blue 11
	Digital Tuner communication		Blue 12
	MTB-RST2/RST4		Blue 13
	Home Media Gallery		Blue 14
	Main EEPROM		Blue 15
POWER		Red 2	
SCAN		Red 3	
SCN-5V		Red 4	
Y-DRIVE		Red 5	
Y-DCDC		Red 6	
Y-SUS		Red 7	
ADRS		Red 8	
X-DRIVE		Red 9	
X-DCDC		Red 10	
X-SUS		Red 11	
DIG-DCDC		Red 12	
UNKNOWN		Red 15	

LED Display Information	
① TRAP SW	
② Rewriting software	
③ PD (2-15)	
④ SD (1-15)	
⑤ No backup	
This indication does not display all LED patterns. For details, please refer to 5.1.1 LED DISPLAY INFORMATION.	

How to locate several items on the Factory menu

- { } : Item on the Factory menu
- [] : Key on the remote control unit
- " " : Screen indication

1. Confirmation of accumulated power-on time and power-on count

Select {INFORMATION} then {HOUR METER}.
(After entering Factory mode, press [↓] five times.)

2. Confirmation of the Power-down and Shutdown histories

- ① **Panel system**
PD: Select {PANEL FACTORY} then {POWER DOWN}.
(After entering Factory mode, press [MUTING] once, press [ENTER/SET], then press [↓] three times.)
SD: Select {PANEL FACTORY} then {SHUT DOWN}.
(After entering Factory mode, press [MUTING] once, press [ENTER/SET], then press [↓] four times.)
- ② **MTB section**
Select {INFORMATION} then {MAIN NG}.
(After entering Factory mode, press [↓] three times.)

3. How to display the Mask indication

- ① **Mask indication in the panel side**
1. Select {PANEL FACTORY} then {RASTER MASK SETUP}.
(After entering Factory mode, press [MUTING] once, press [ENTER/SET], then press [↓] 8 times.)
2. Press [ENTER/SET], then select a Mask indication, using [↑] or [↓].

Adjustments and Settings after replacement of the Assys (Procedures in Factory mode)

1. Digital Video Assy: Transfer of backup data

- ① Select {PANEL FACTORY}, {ETC}, then {BACKUP DATA}. (After entering Factory mode, press [MUTING] once, press [ENTER/SET], press [↓] seven times, then press [ENTER/SET].)
- ② Select {TRANSFER}, using [→], then hold [ENTER/SET] pressed for at least 5 seconds.
- ③ After transfer of backup data is completed, {ETC} is automatically selected, and the LED on the front panel returns to normal lighting.

2. MAIN Assy: Execution of FINAL SETUP.

- ① Select {INITIALIZE} then {FINAL SETUP}, then press [ENTER/SET]. (After entering Factory mode, press [MUTING] three times, then press [↓] four times.)
- ② Select "YES", using [→]. Then hold [ENTER/SET] pressed for at least 5 seconds.
- ③ After "FINAL SETUP IS COMPLETE" is displayed on the screen, turn the POWER switch of the main unit off.

3. POWER SUPPLY Unit: Clearance of the accumulated power-on count and maximum temperature value




- ① Select {PANEL FACTORY}, {ETC}, then {P COUNT INFO}. (After entering Factory mode, press [MUTING] once, press [ENTER/SET], press [↓] seven times, press [ENTER/SET], then press [↓] six times.)
- ② Press [→] to select "CLEAR". Hold [ENTER/SET] pressed for at least 5 seconds. After clearance is completed, "ETC" is automatically selected. Clear the maximum temperature value (MAX TEMP) in the same manner.

4. Other Assys: Clearance of the maximum temperature value

- ① Select {PANEL FACTORY}, {ETC}, then {MAX TEMP}. (After entering Factory mode, press [MUTING] once, press [ENTER], press [↓] seven times, press [ENTER/SET], then press [↓] seven times.)
- ② Press [→] to select "CLEAR". Hold [ENTER/SET] pressed for at least 5 seconds. After clearance is completed, "ETC" is automatically selected.

Quick Reference upon Service Visit ②


Mode transition and structure of layers in Service Factory mode

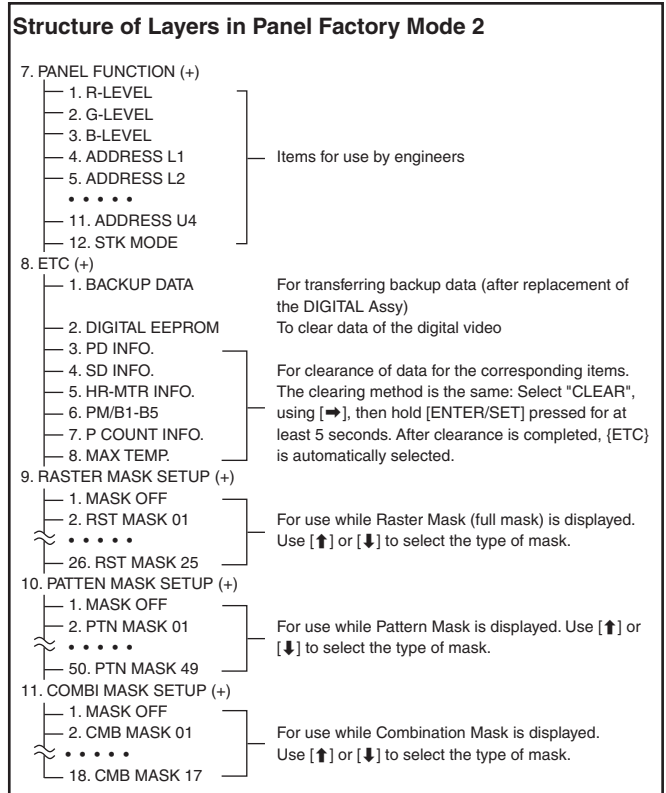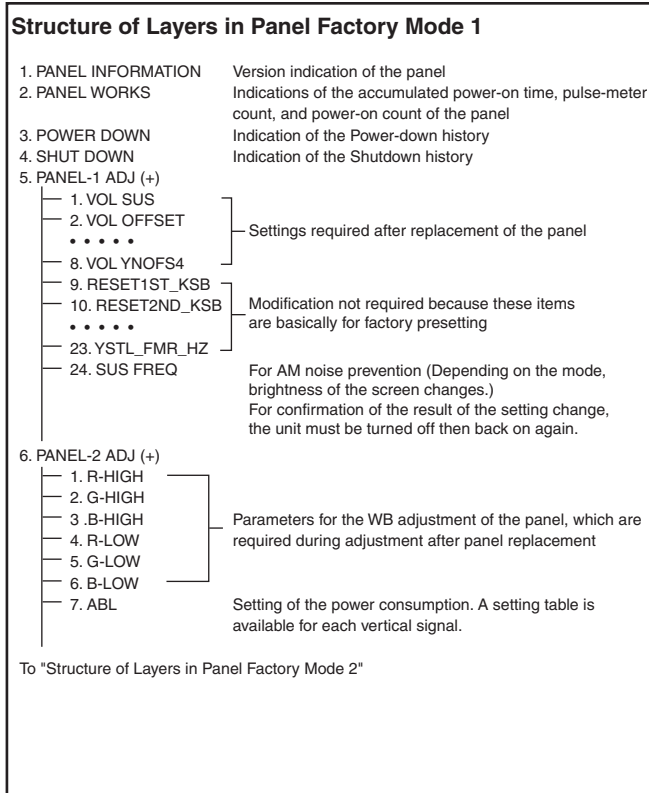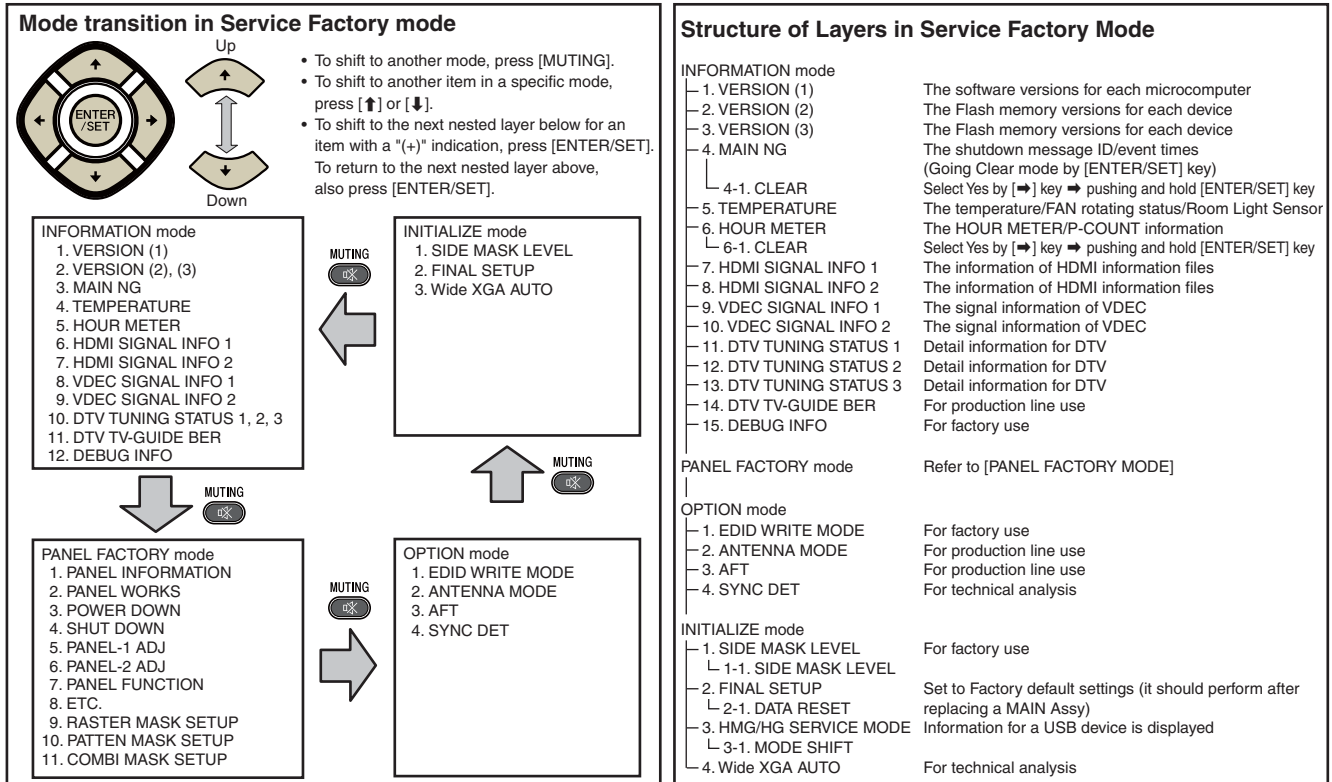

3.3 PCB LOCATION

Note:

The wiring shown in the photo is different from the actual wiring, because the product in the photo is a prototype. Upon servicing, be sure to restore the original wiring of the unit after repair work.

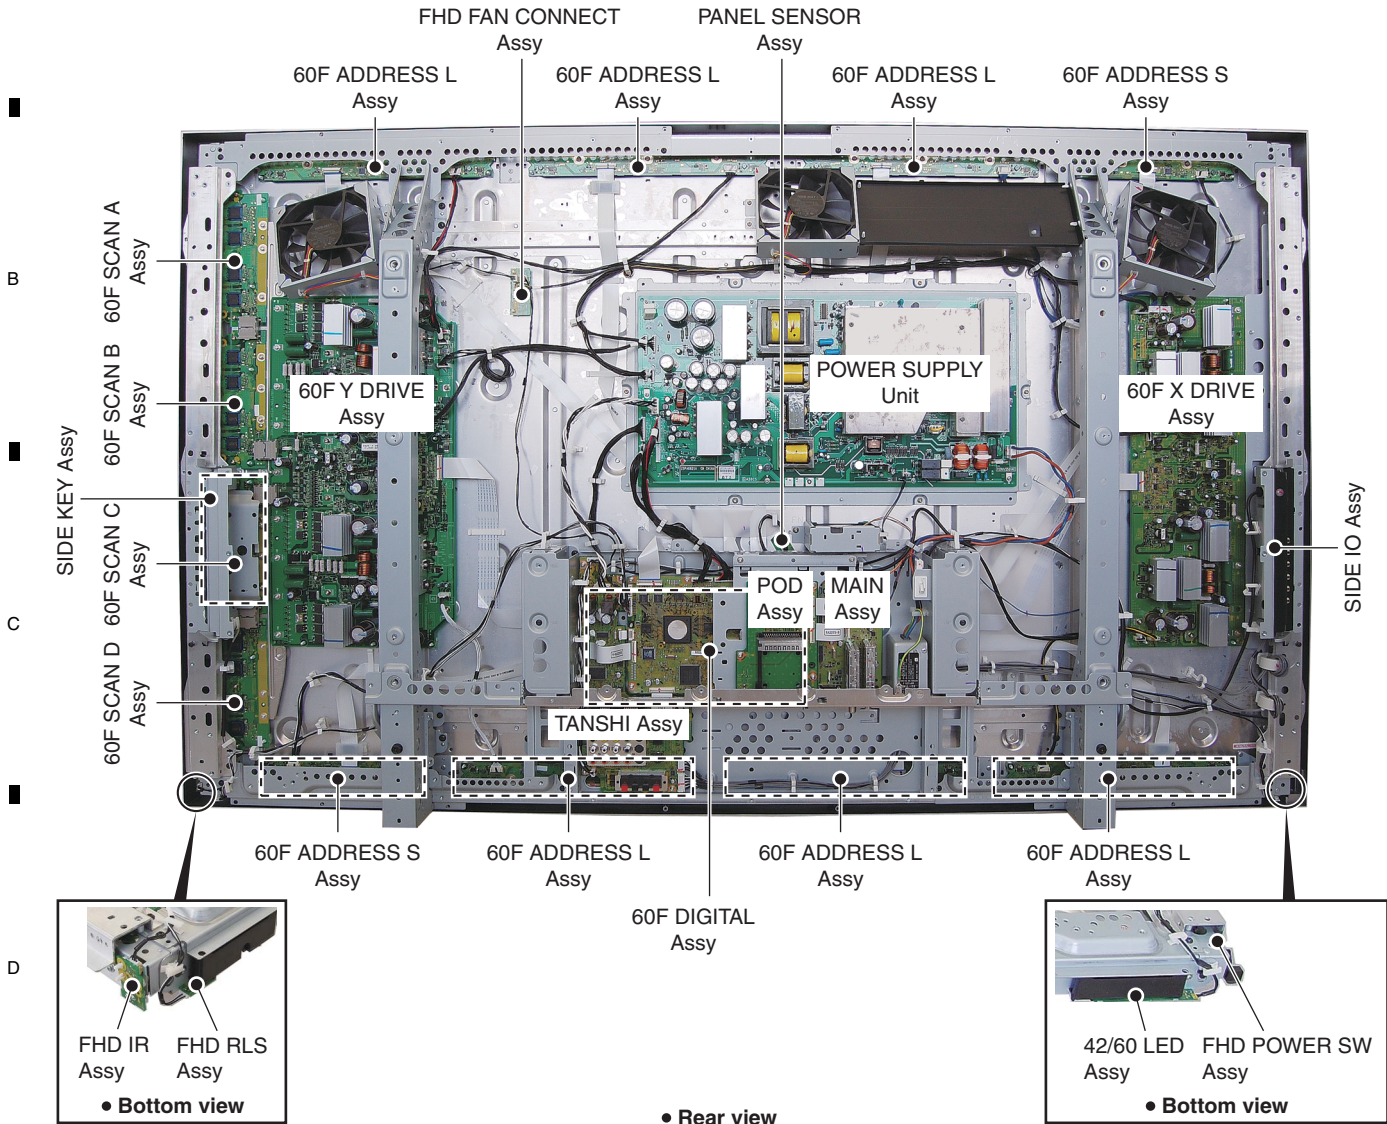

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST OF ASSEMBLIES							
NSP	60F ADDRESS L ASSY	AWW1317	⚠	MAIN ASSY			AWV2457
NSP	60F ADDRESS S ASSY	AWW1318					
NSP	60F SCAN A ASSY	AWW1319			SIDE IO ASSY		AWW1274
	└ IC2801 - IC2804	SN755871PZT-P					
NSP	60F SCAN B ASSY	AWW1320			TANSHI ASSY		AWW1334
	└ IC2901 - IC2904	SN755871PZT-P					
NSP	60F SCAN C ASSY	AWW1321			FHD FAN CONNECT ASSY		AWW1290
	└ IC3001 - IC3004	SN755871PZT-P					
NSP	60F SCAN D ASSY	AWW1322			42/60LED ASSY		AWW1276
	└ IC3101 - IC3104	SN755871PZT-P					
					FHD POWER SW ASSY		AWW1293
	60F X DRIVE ASSY	AWV2505			POD ASSY		AWW1295
	60F Y DRIVE ASSY	AWV2506	⚠	POWER SUPPLY UNIT			AXY1169
	PANEL SENSOR ASSY	AWW1309					
	60F DIGITAL ASSY	AWW1308					
					PDP SERVICE ASSY 608F		AWU1274

3.4 JIGS LIST

Name	Jig No.	Remarks
Service Cotton Cloth Glove	GYX1002	7.3 DISASSEMBLY AND REASSEMBLY PRECAUTIONS FOR SPEAKER SYSTEM


3.5 CLEANING




Name	Part No.	Remarks
Cleaning liquid	GEM1004	Used to fan cleaning. Refer to "10.5 CHASSIS SECTION (2/3)".
Cleaning paper	GED-008	

4.1 OVERALL WIRING DIAGRAM (1/2)


4.1 OVERALL WIRING DIAGRAM (1/2)

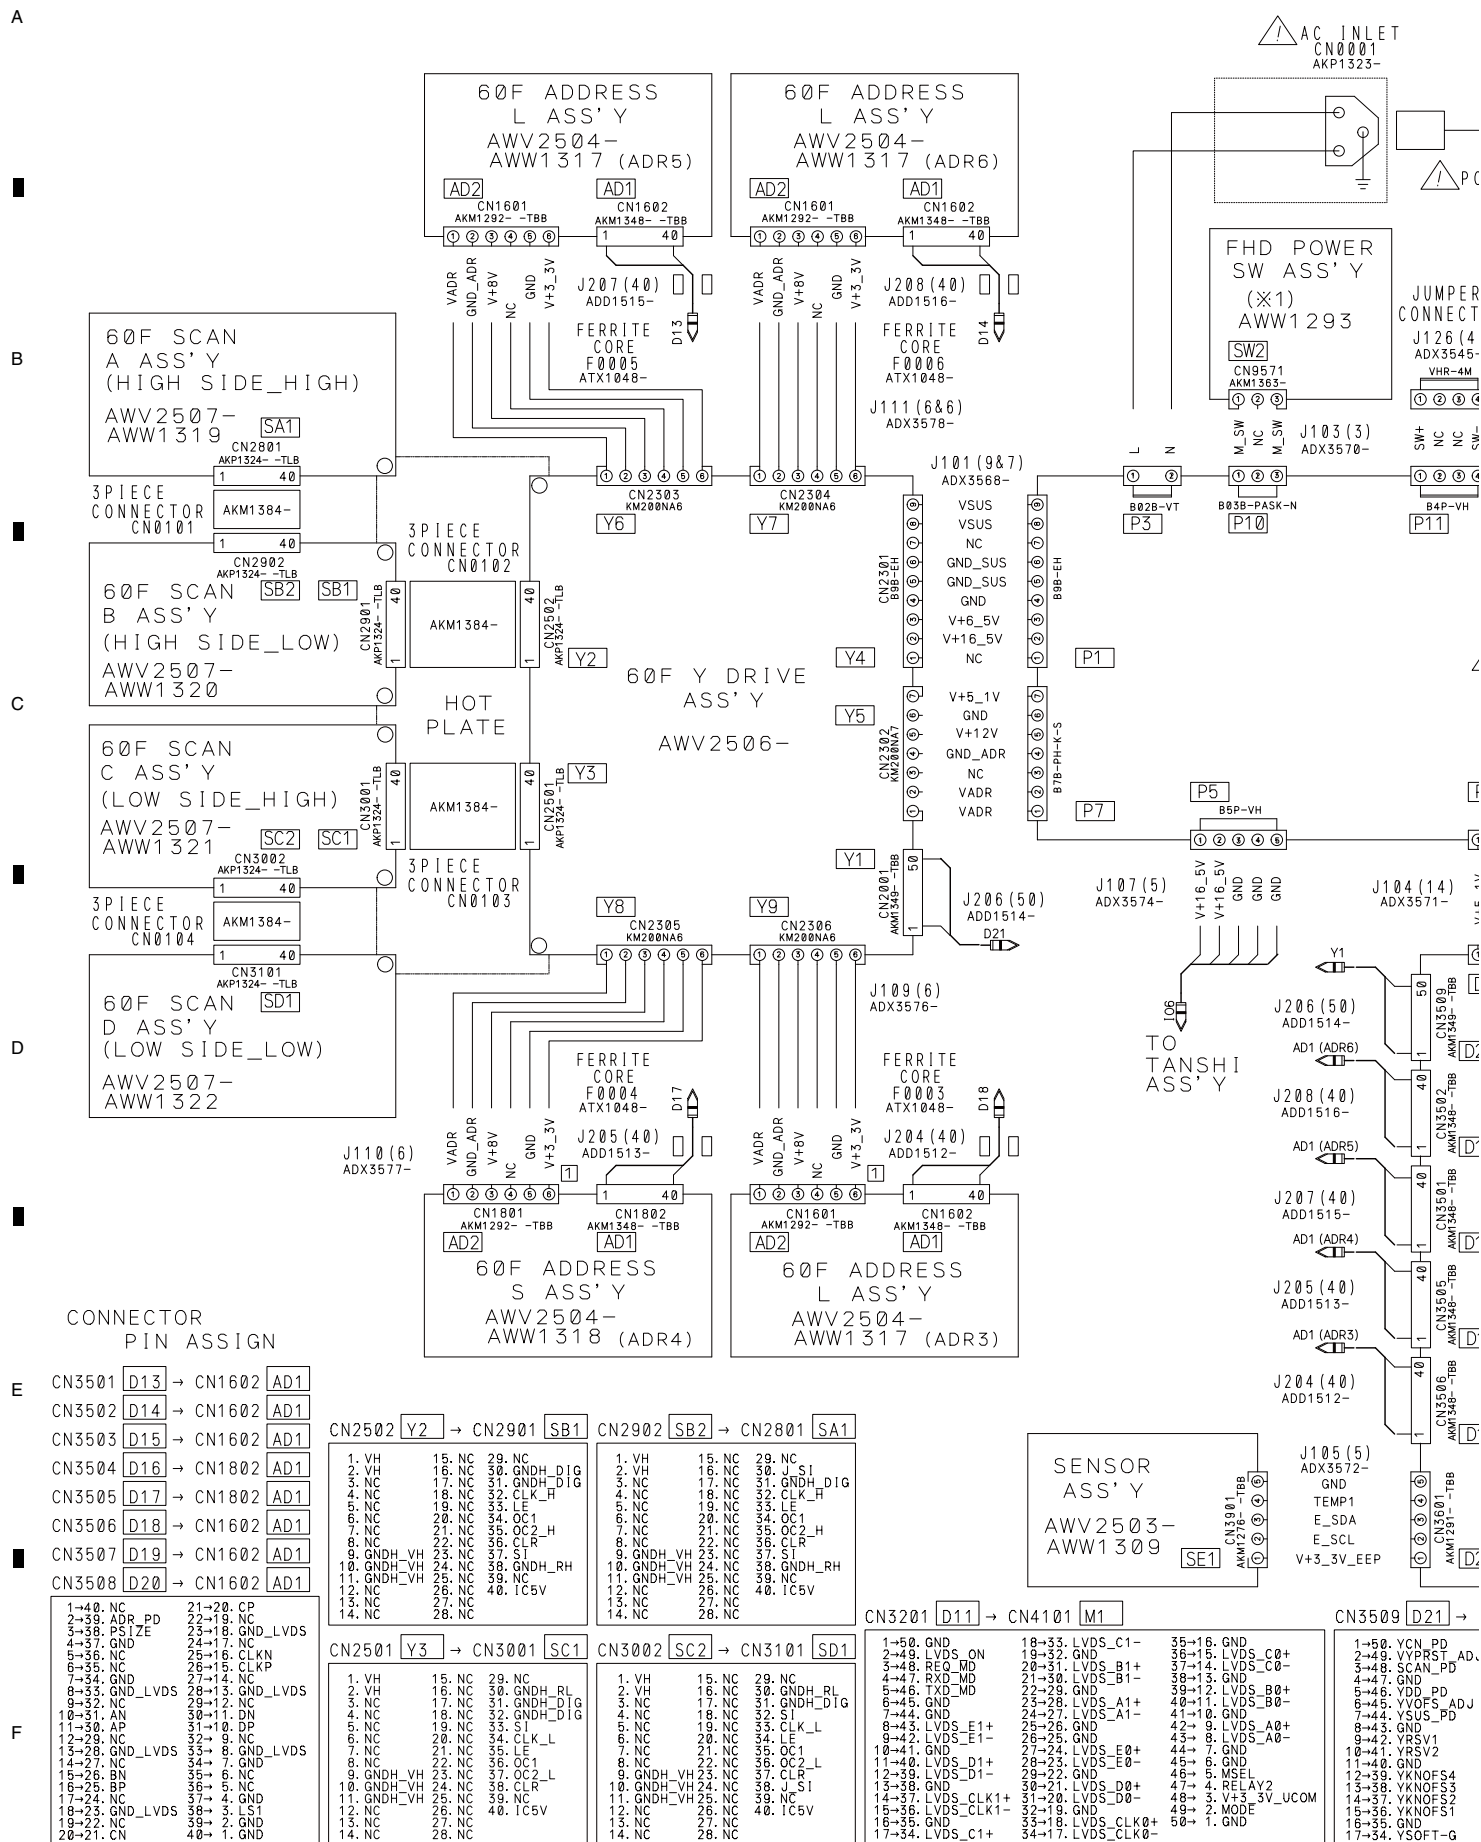

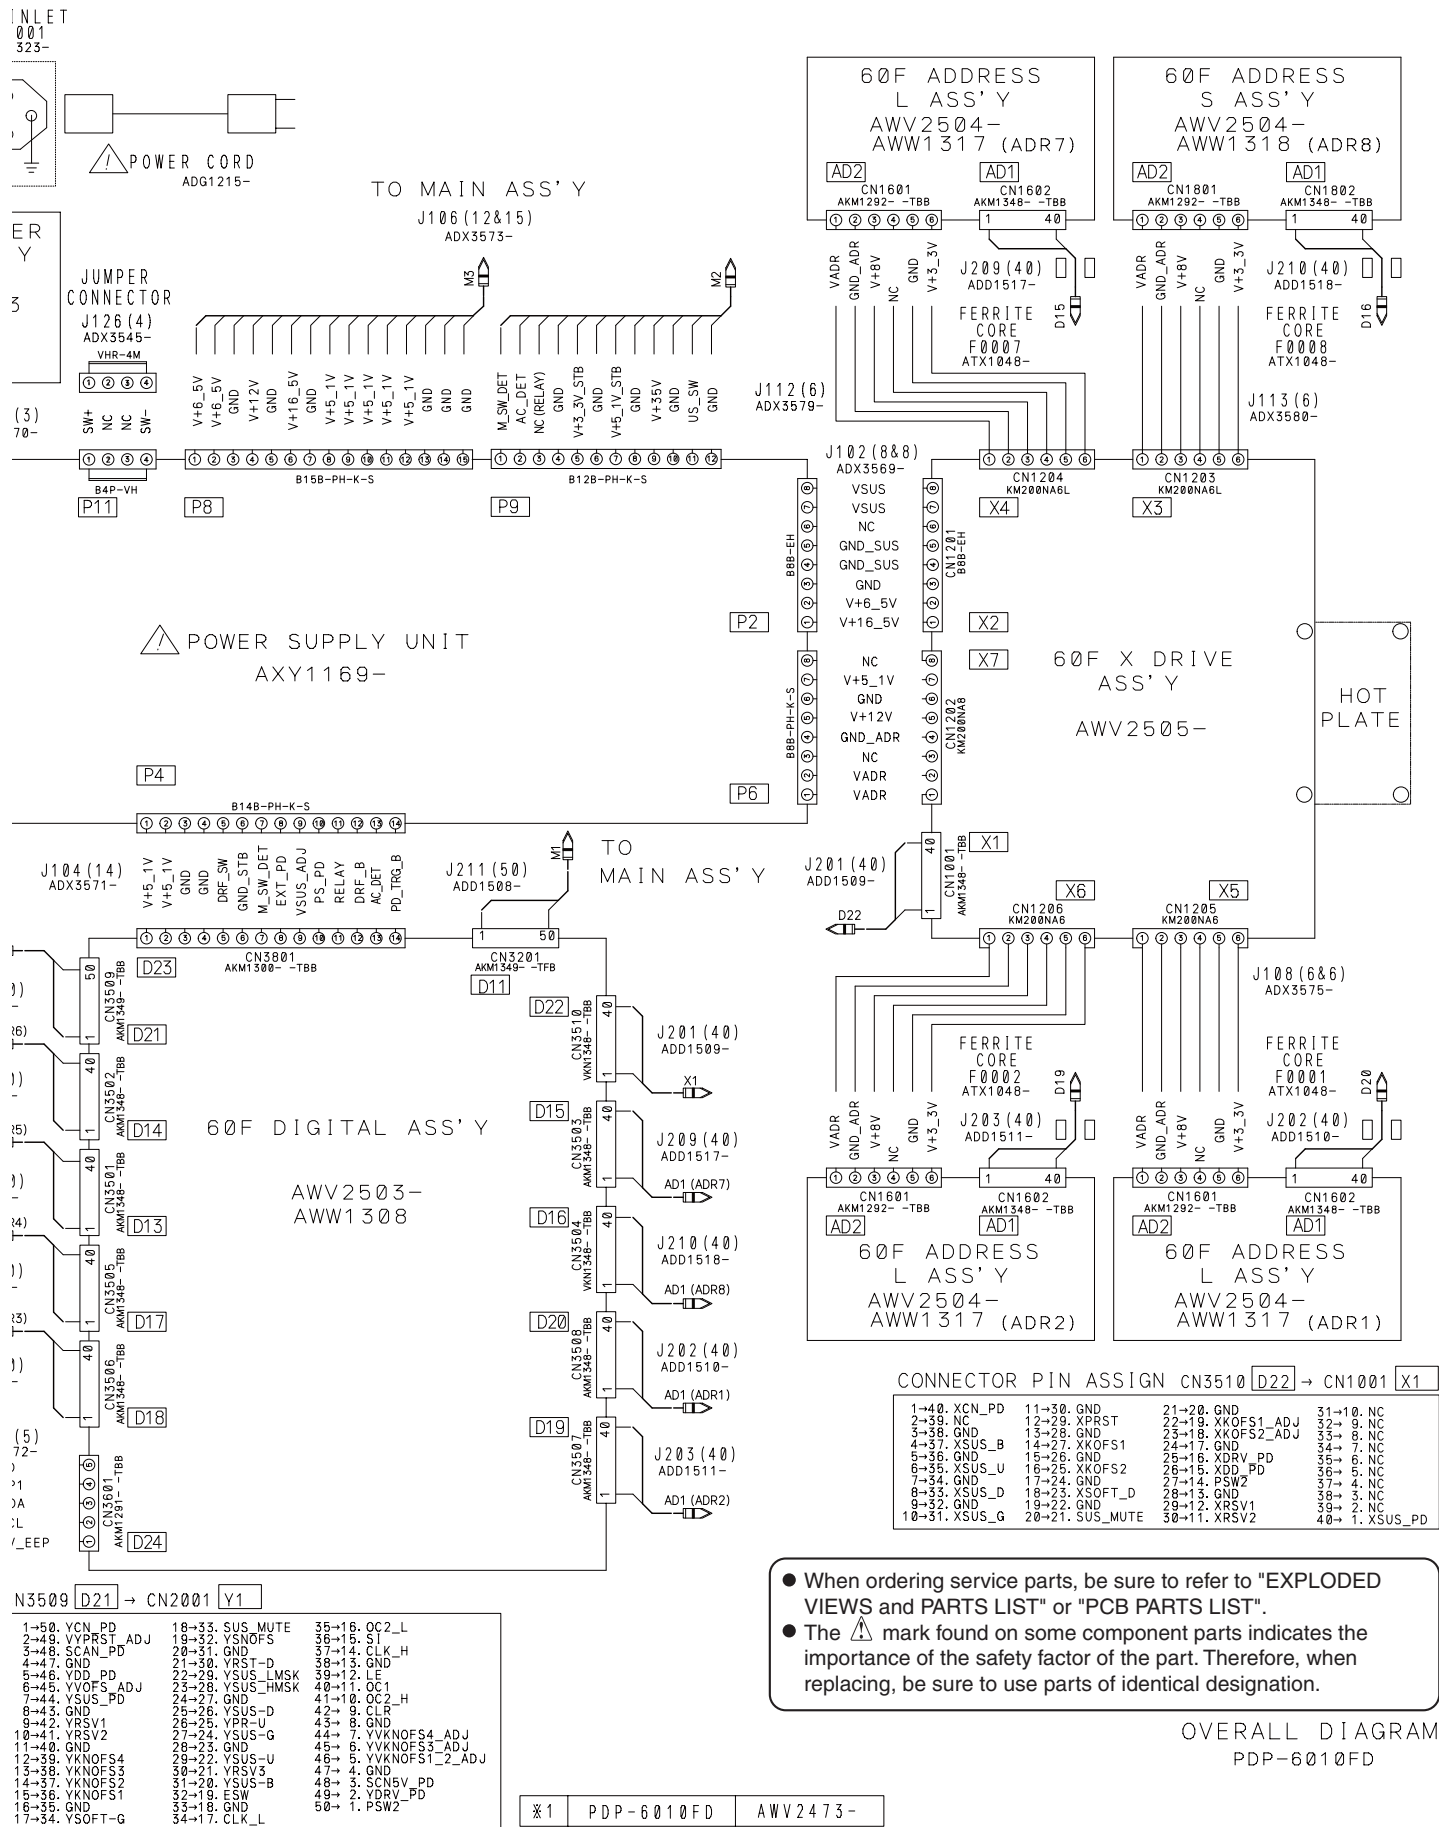

△



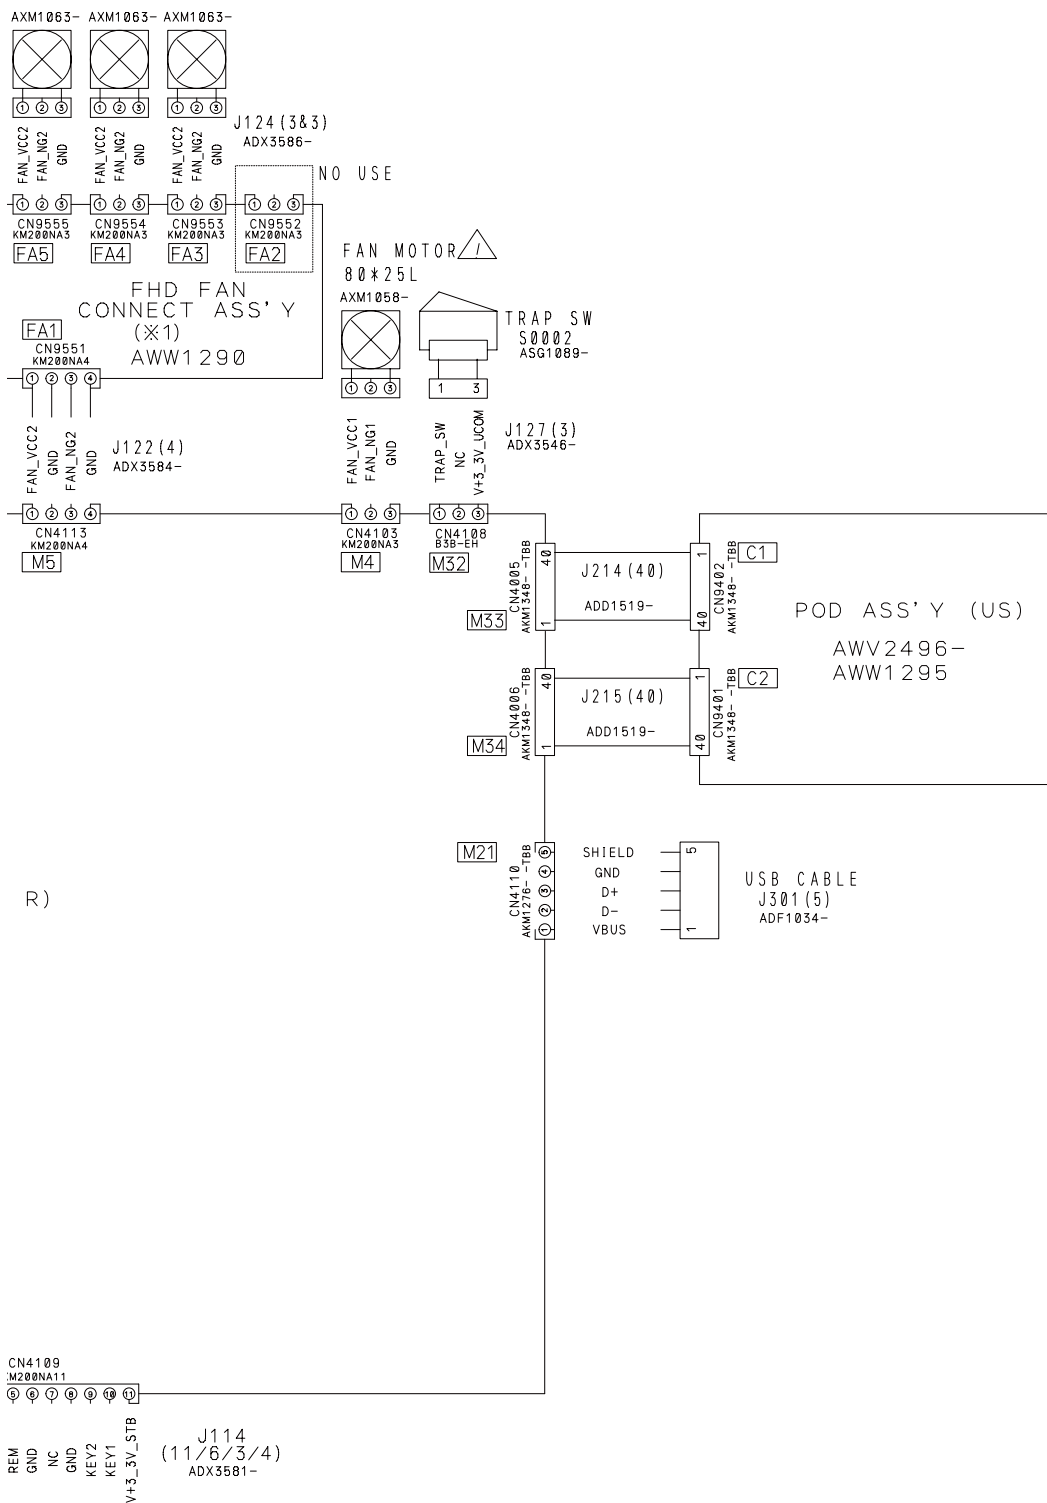

CONNECTOR PIN ASSIGN

CN4004 M6 → CN8804 I04

1-50. GND	26-25. GND
2-48. TEMP2	27-24. INPUT2_V
3-48. NC	28-23. GND
4-47. V+3.3V_UCOM	29-22. INPUT1_V
5-46. NC	30-21. GND
6-45. GND	31-20. INPUT1_SY
7-44. GND	32-19. GND
8-43. GND	33-18. INPUT1_S2
9-42. GND	34-17. GND
10-41. GND	35-16. INPUT1_SC
11-40. GND	36-15. GND
12-39. GND	37-14. INPUT1_SPLUG
13-38. INPUT3_PLUG	38-13. GND
14-37. GND	39-12. INPUT2_PLUG
15-36. INPUT3_Y	40-11. GND
16-35. GND	41-10. INPUT2_Y
17-34. INPUT3_PB	42-9. GND
18-33. GND	43-8. INPUT2_PB
19-32. INPUT3_PR	44-7. GND
20-31. GND	45-6. INPUT2_PR
21-30. AIR_R	46-5. GND
22-29. GND	47-4. GND
23-28. AIR_L	48-3. GND
24-27. GND	49-2. GND
25-26. INPUT3_V	50-1. GND

CN4001 M8 → CN8803 I03

1-40. V+5V_A	21-20. I2S_SDATA_HNM
2-39. NC	22-19. MA11
3-38. V+3.3V_STB	23-18. I2S_LRCLK_HNM
4-37. NC	24-17. GND
5-36. GND	25-16. I2S_SDATA_HDMI
6-35. GND	26-15. I2S_SDATA_HDMI
7-34. GND	27-14. I2S_LRCLK_HDMI
8-33. GND	28-13. GND
9-32. IR_OUT	29-12. I2S_SDATA_DTV
10-31. GND	30-11. I2S_SDATA_DTV
11-30. GND	31-10. I2S_LRCLK_DTV
12-29. AC_AM_MUTE	32-9. GND
13-28. GND	33-8. SCL_AV
14-27. AC_HP_MUTE	34-7. SDA_AV
15-26. I2S_PLUG	35-6. AC_A_MUTE
16-25. GND	36-5. RST_MSP
17-24. SPDIF_HNM	37-4. OTW
18-23. GND	38-3. A_NO_B
19-22. SPDIF_DTV	39-2. I0 DET
20-21. GND	40-1. GND


CN4005 M33 → CN9402 C1

1-40. GND	21-20. IORD
2-39. POD_VCC	22-19. MA11
3-38. POD_VCC	23-18. POD_VS1
4-37. POD_VCC	24-17. OE
5-36. MDIA3	25-16. CE2A
6-35. RDY/IRQA	26-15. MA10
7-34. MDIA2	27-14. MDOA7
8-33. WE	28-13. CE1A
9-32. MDIA1	29-12. MDOA6
10-31. GND	30-11. MD7
11-30. MCLKA/MA14	31-10. MDOA5
12-29. GND	32-9. MD6
13-28. MDIA0	33-8. MDOA4
14-27. MA13	34-7. MD5
15-26. MISTRTA	35-6. MDOA3
16-25. GND	36-5. MD4
17-24. POD_CLK/MA8	37-4. CD1A
18-23. GND	38-3. MD3
19-22. IOWR	39-2. GND
20-21. POD_DATA/MA9	40-1. GND

CN4006 M34 → CN9401 C2


1-40. GND	21-20. WAITA
2-39. PTXDB	22-19. OOB_EN/MA4
3-38. GND	23-18. RSTA
4-37. PRXDB	24-17. TX_1
5-36. GND	25-16. POD_VS2
6-35. CDA2	26-15. TX_EN
7-34. MDOA2	27-14. MDTA7
8-33. MD2	28-13. TX_0
9-32. MDOA1	29-12. MDTA6
10-31. MD1	30-11. MA12
11-30. MDOA0	31-10. MDIA5
12-29. MD0	32-9. GND
13-28. MOSTRTA	33-8. MCLKA
14-27. MA0	34-7. GND
15-26. MOVALA	35-6. MDIA4
16-25. MA1	36-5. MIVALA
17-24. REG	37-4. POD_VPP
18-23. MA2	38-3. POD_VPP
19-22. GND	39-2. GND
20-21. MA3	40-1. GND

X1 PDP-6010FD AWW2473-


The  mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.

OVERALL DIAGRAM
PDP-6010FD

4.3 OVERALL BLOCK DIAGRAM (1/2)

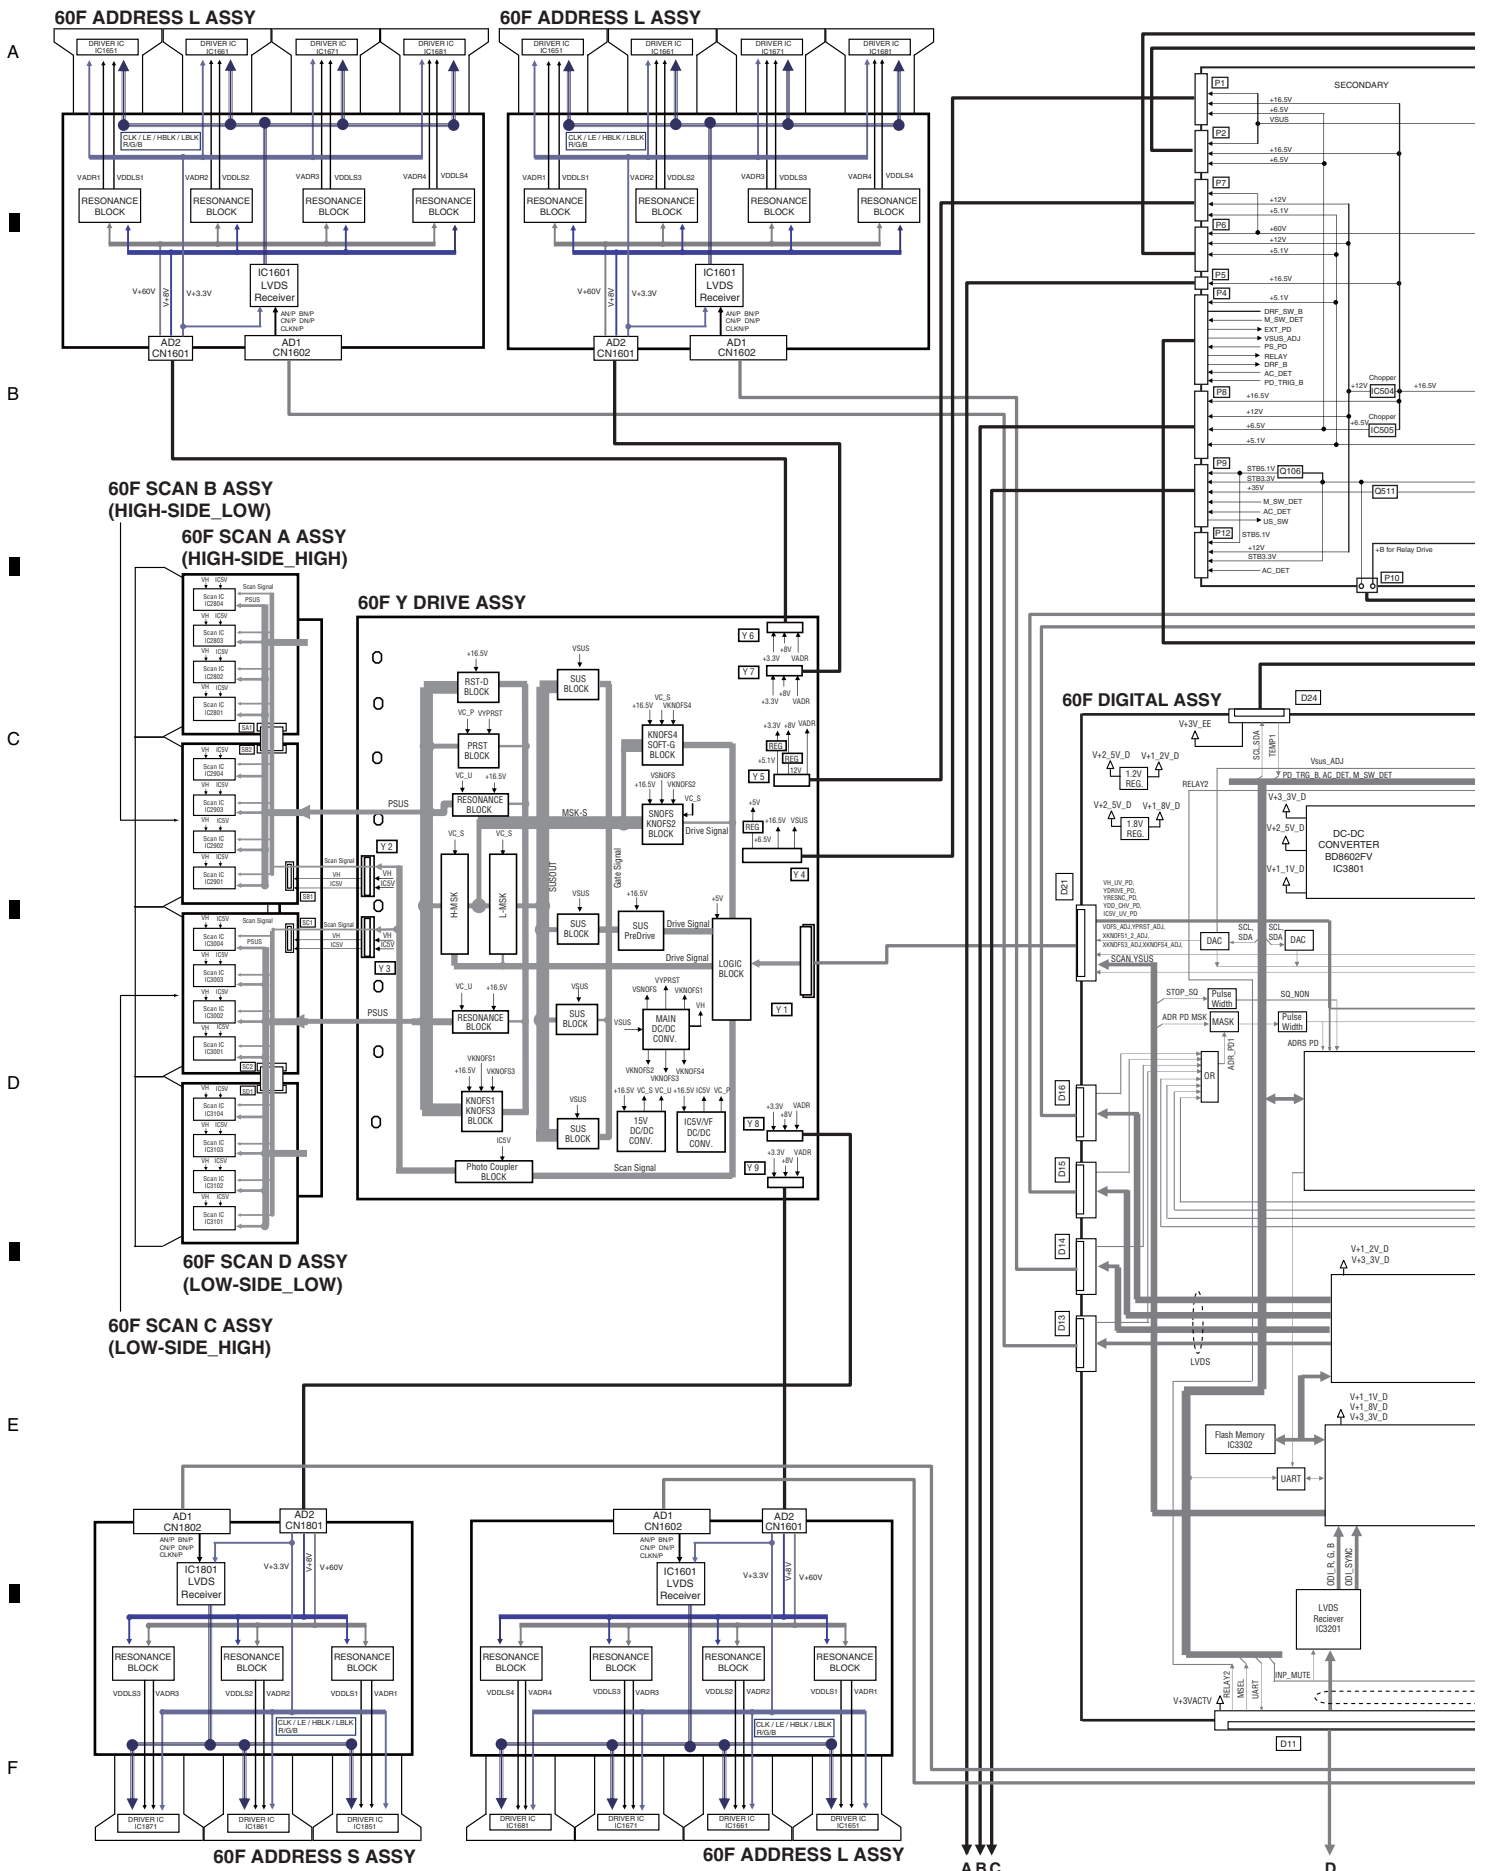


4.4 OVERALL BLOCK DIAGRAM (2/2)

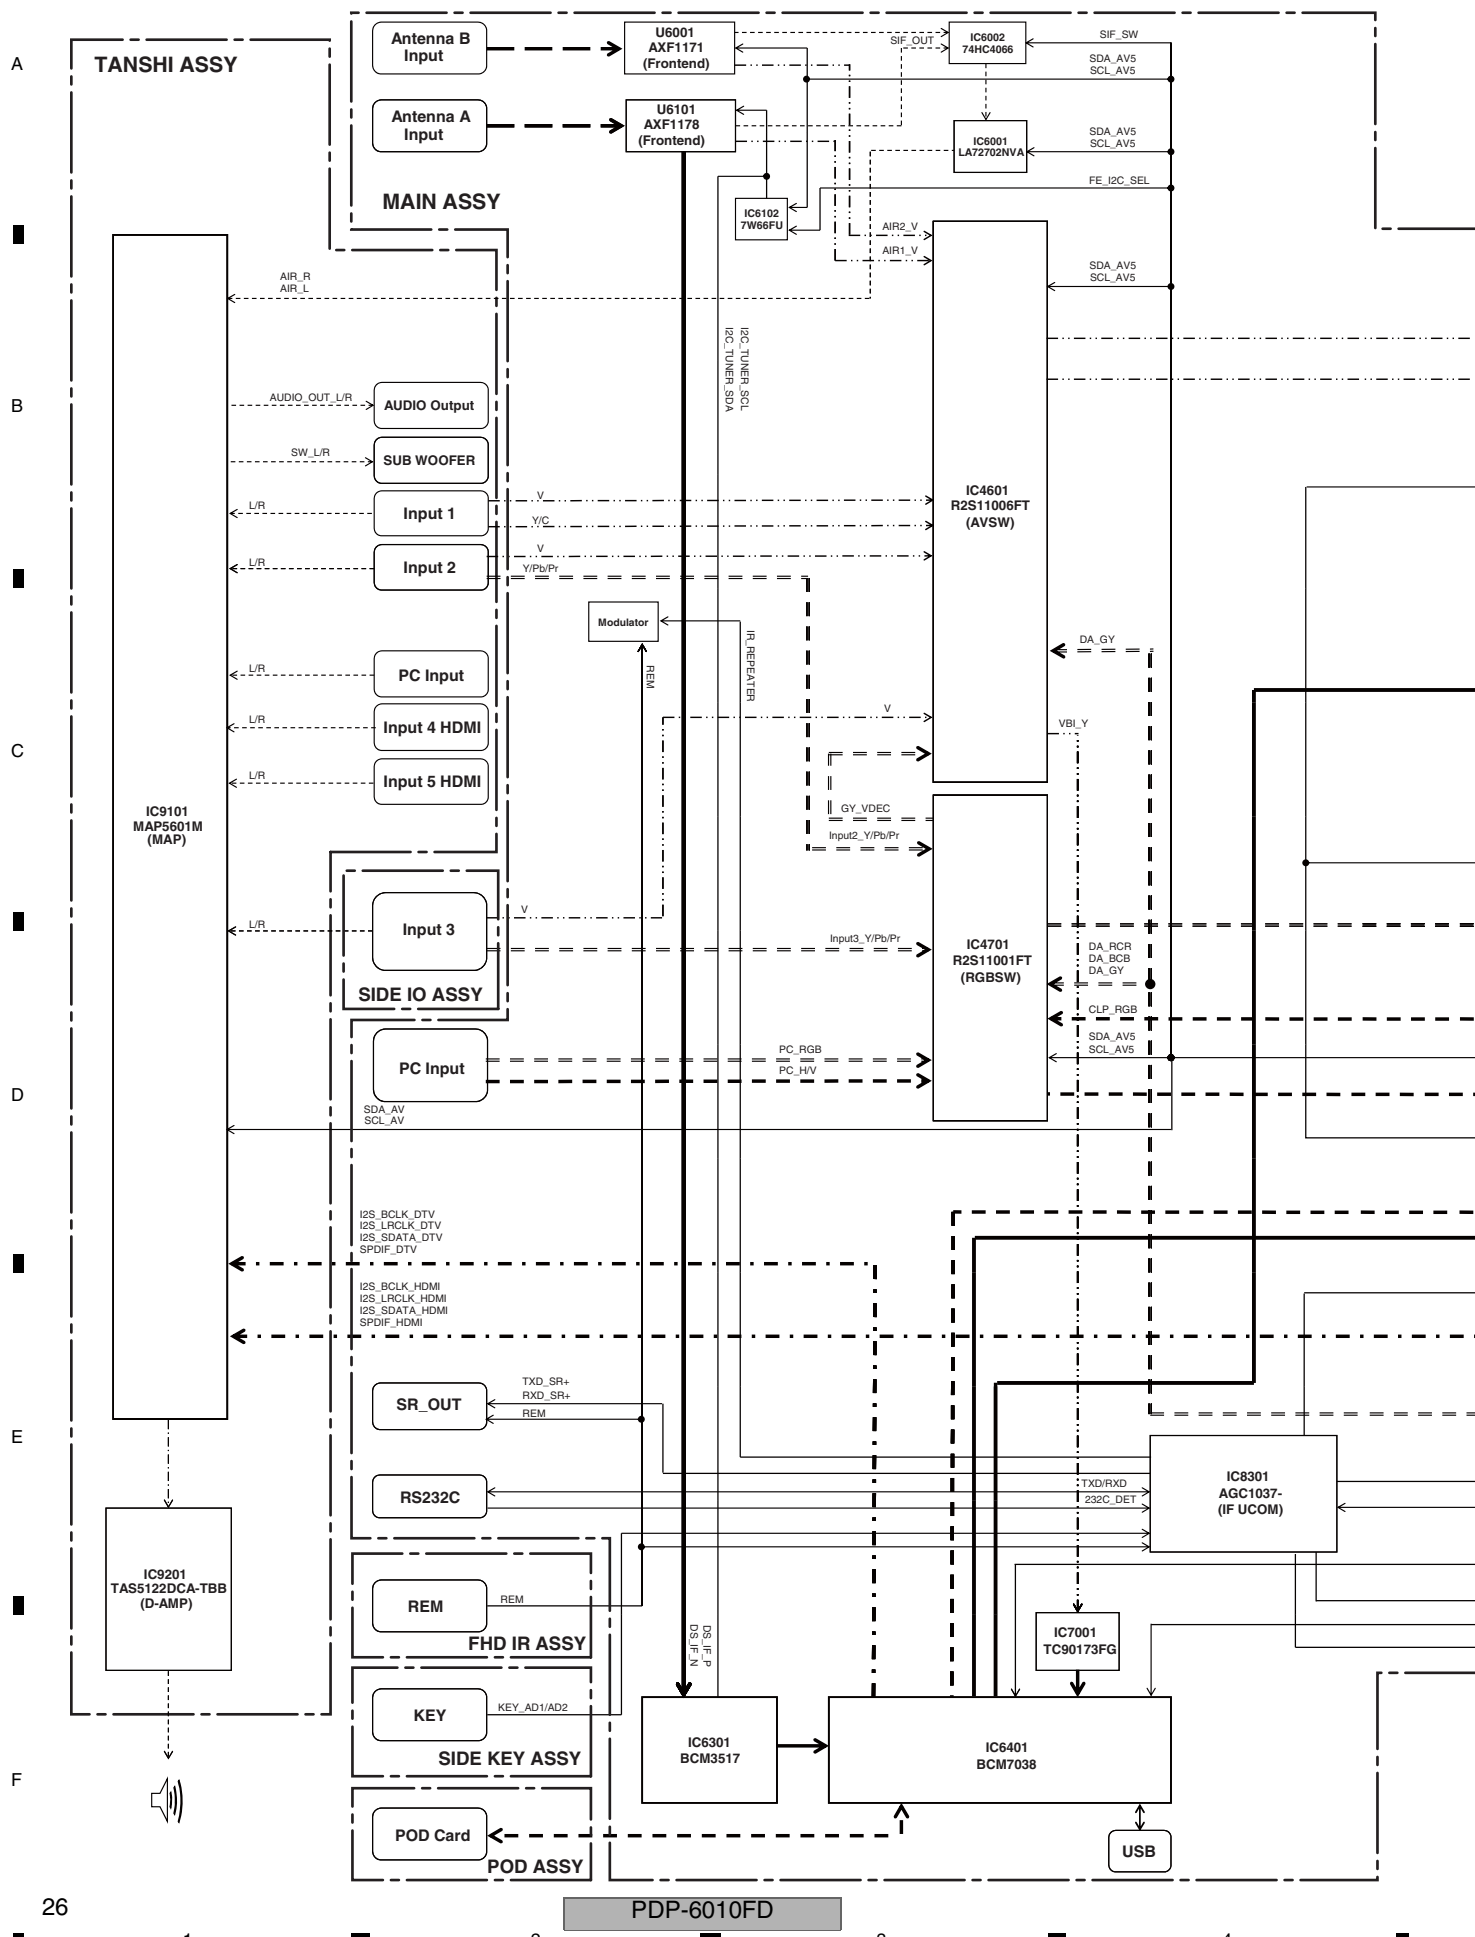

- : Analog Audio signal
- : Analog Video signal
- ===== : Component signal
- : Digital Video signal
- : Digital Audio signal
- : Synchronized signal
- ===== : Data signal
- : Control signal
- : RF signal

POWER SUPPLY UNIT

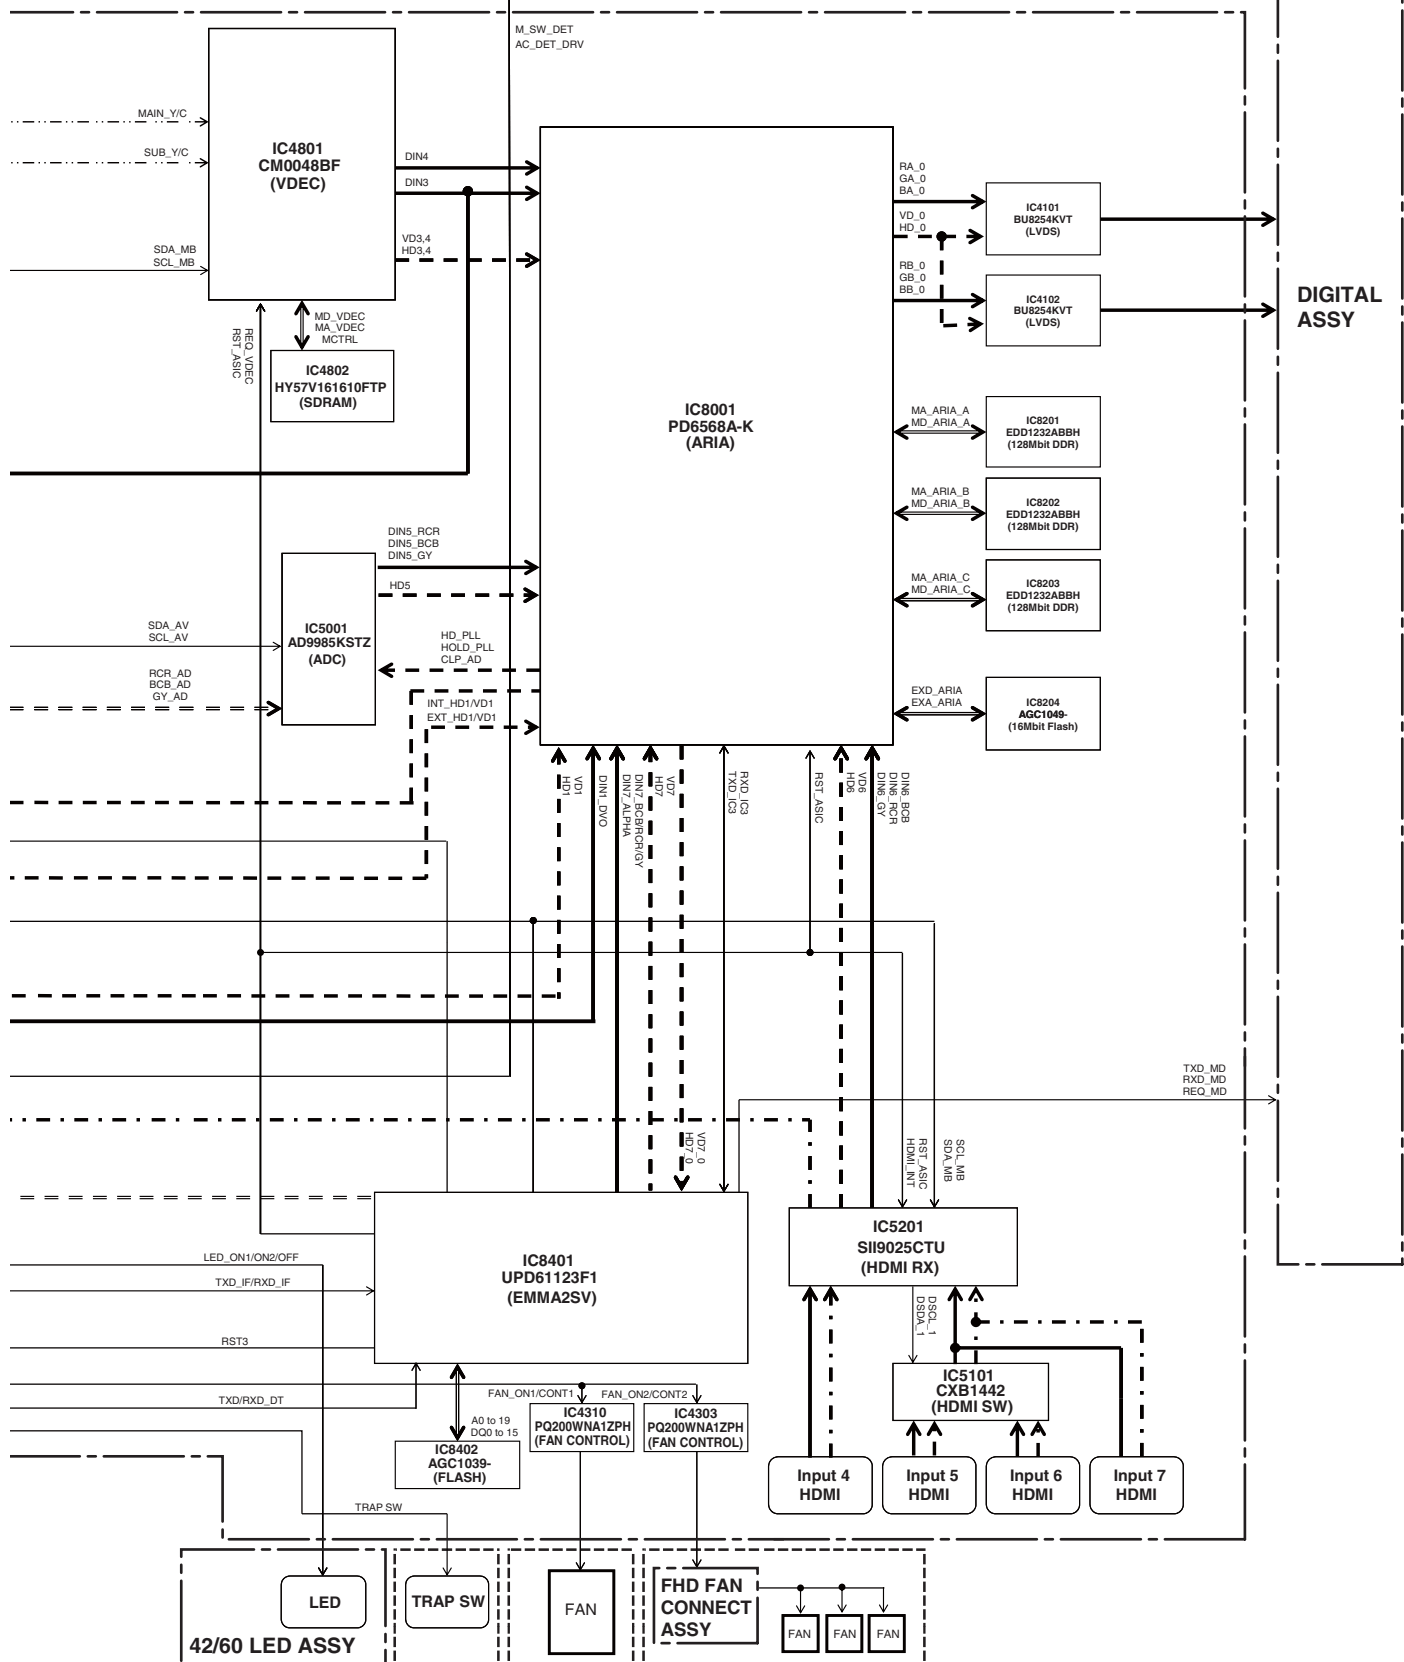


4

F



4.6 60F X DRIVE ASSY

60F X DRIVE ASSY

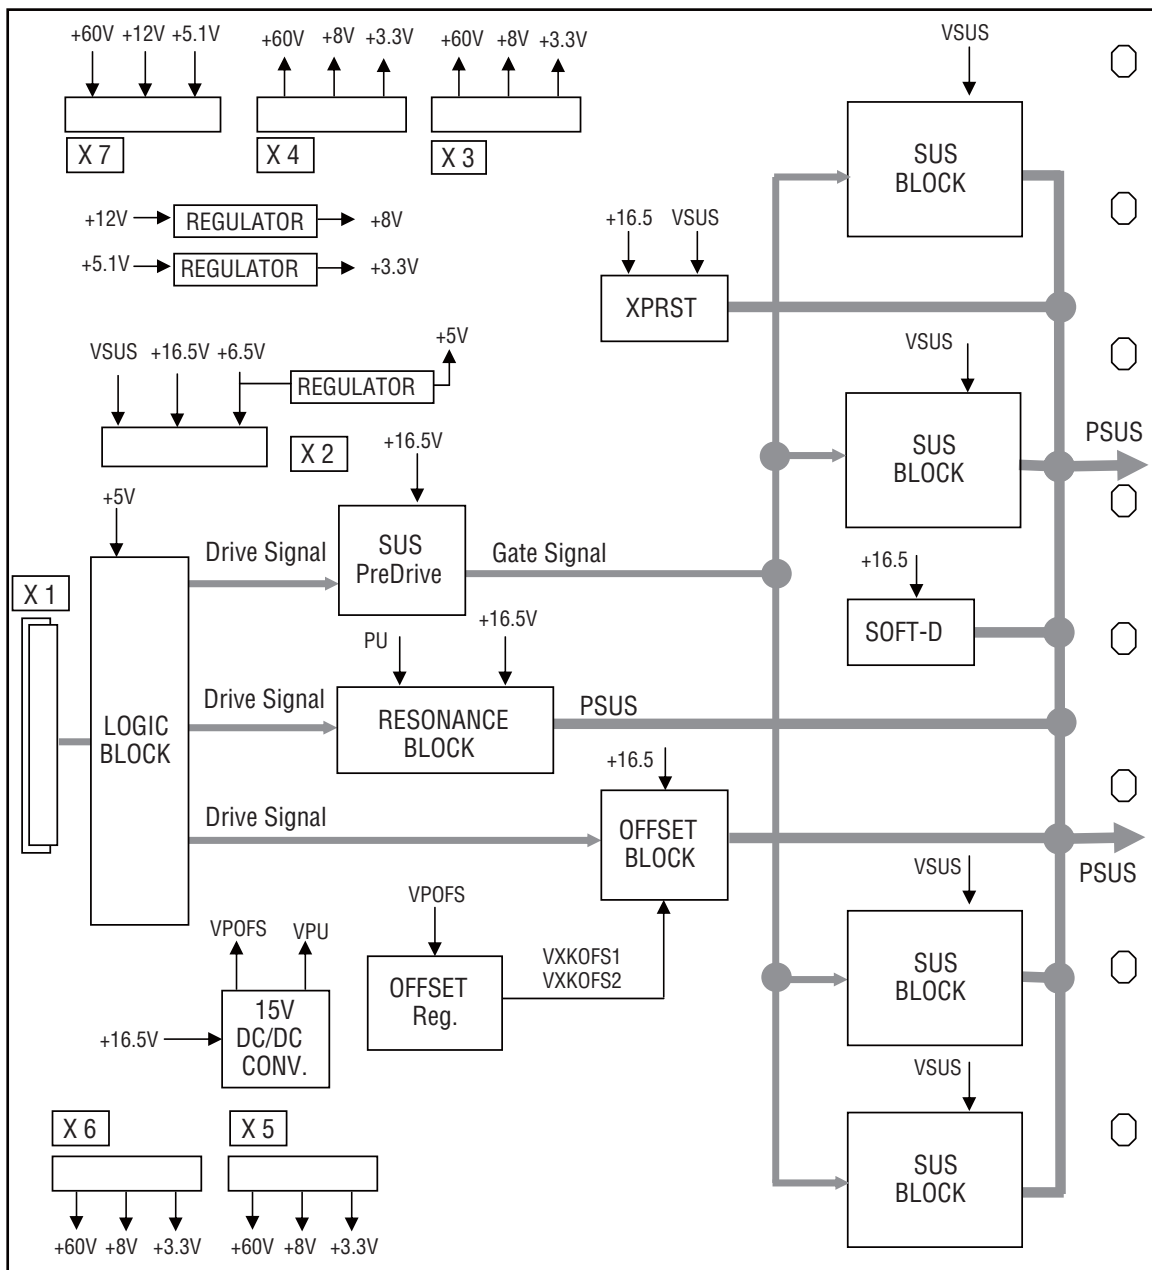

4.7 60F Y DRIVE, 60F SCAN A, B, C and D ASSYS


60F SCAN B ASSY (HIGH-SIDE_LOW)

60F SCAN A ASSY (HIGH-SIDE_HIGH)


60F Y DRIVE ASSY

60F SCAN D ASSY (LOW-SIDE_LOW)


60F SCAN C ASSY (LOW-SIDE_HIGH)

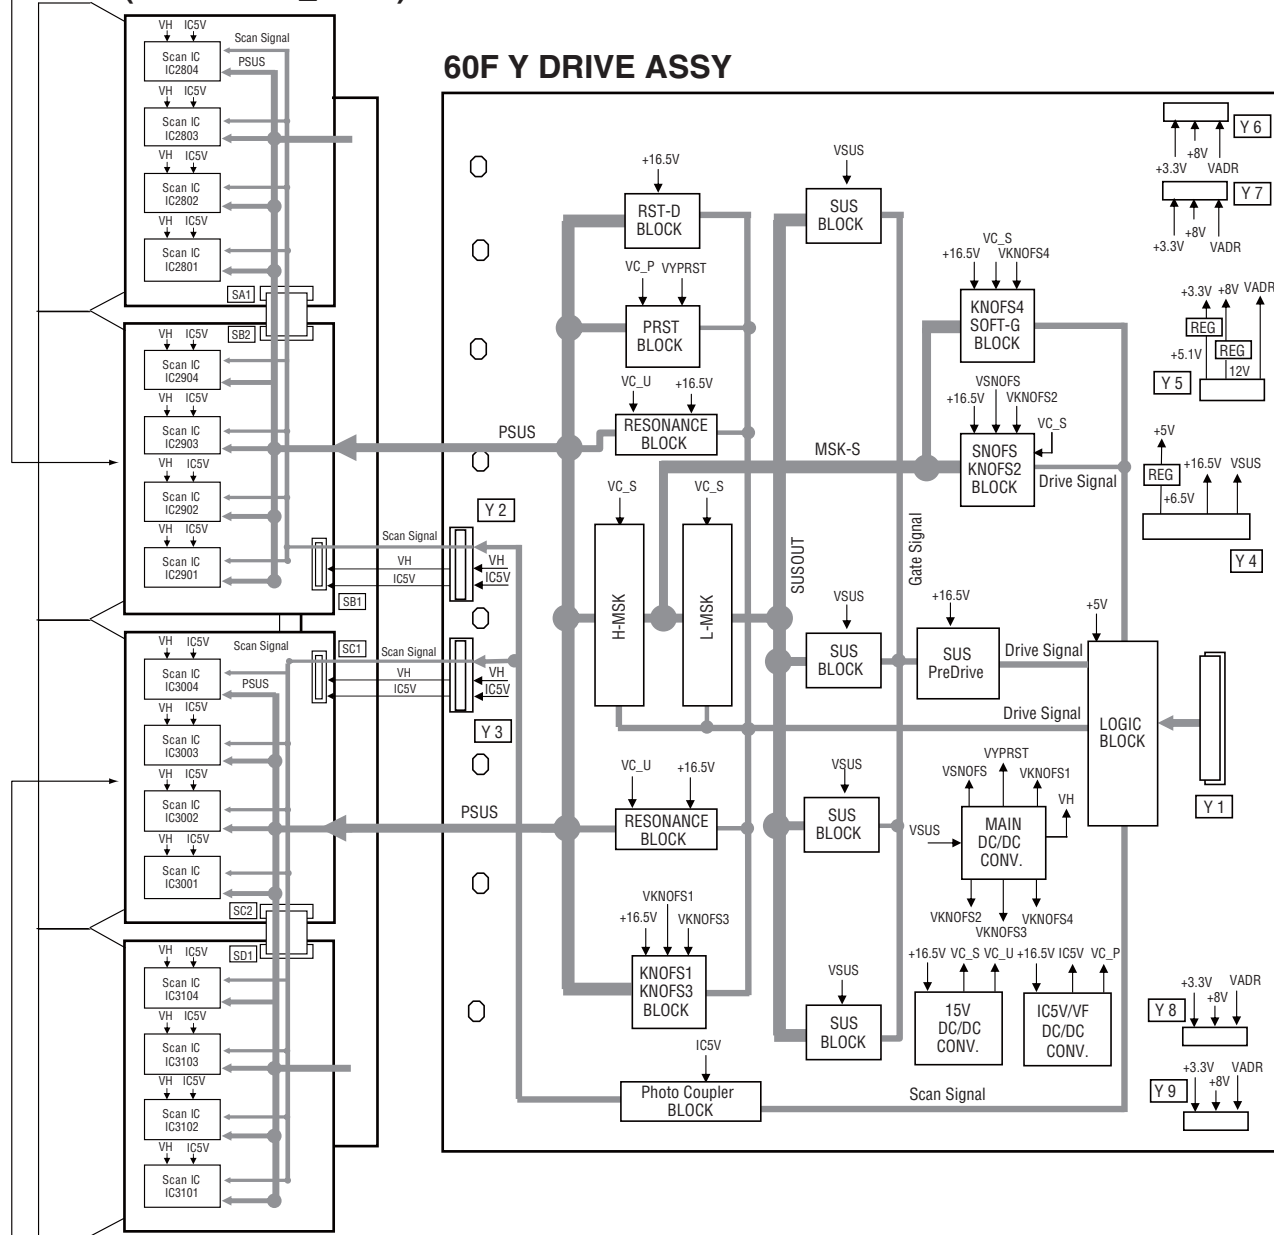

4.8 POWER SUPPLY BLOCK of 60F X, Y DRIVE and 60F SCAN A, B, C and D ASSYS

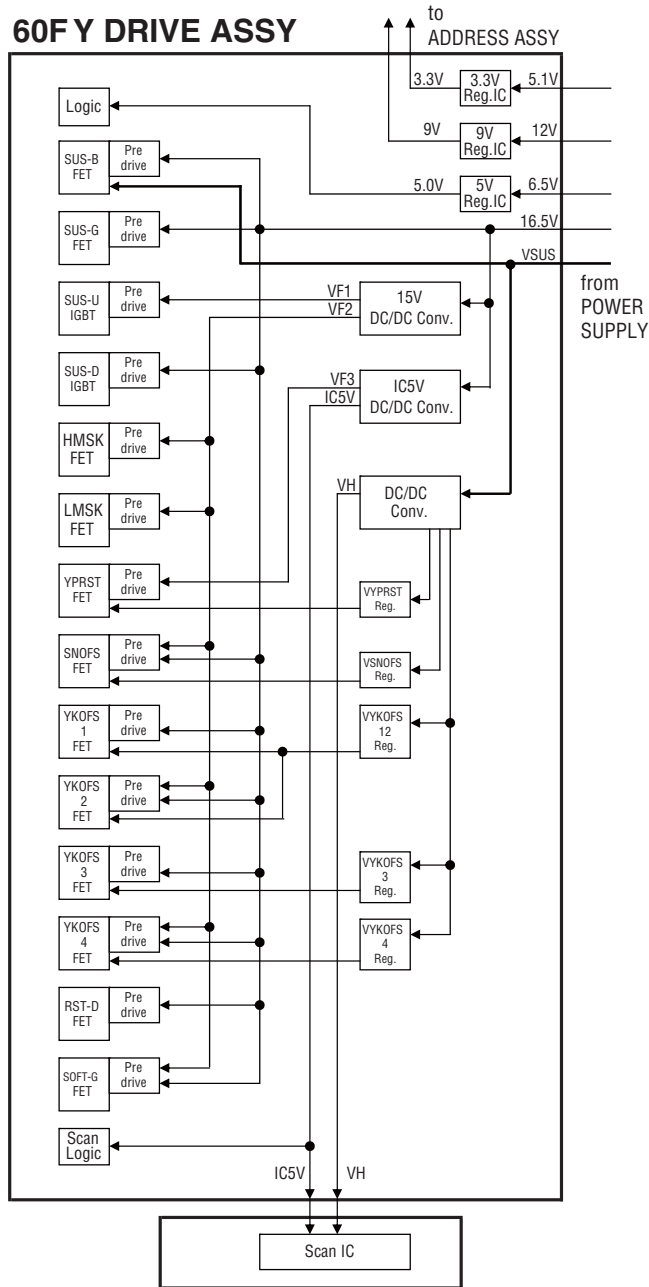


60F SCAN A, B, C, D ASSYS

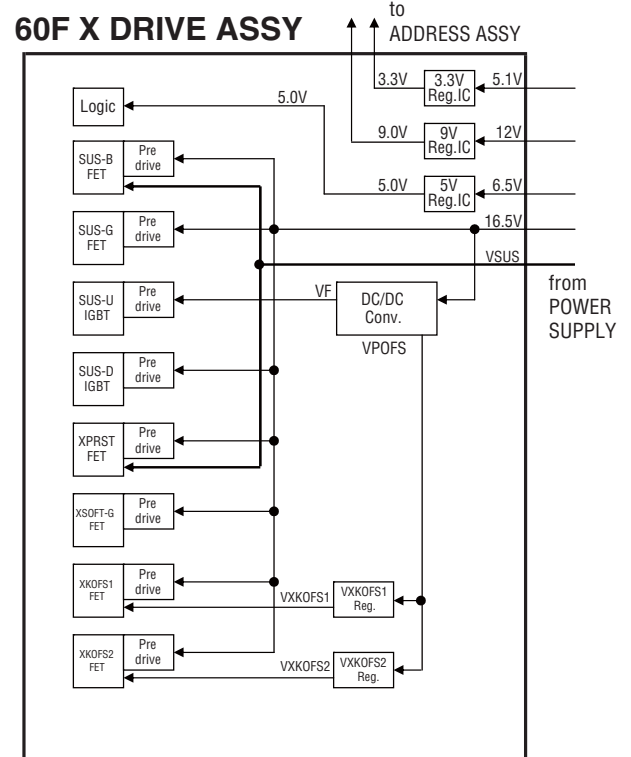


Note:
VYPRST, VSNOF5, VYKOF5 12, VYKOF5 3, VYKOF5 4
VXKOF5 1 and VXKOF5 2 voltages are electrical volume controls.

4.9 60F ADDRESS L and S ASSYS


60F ADDRESS L ASSY

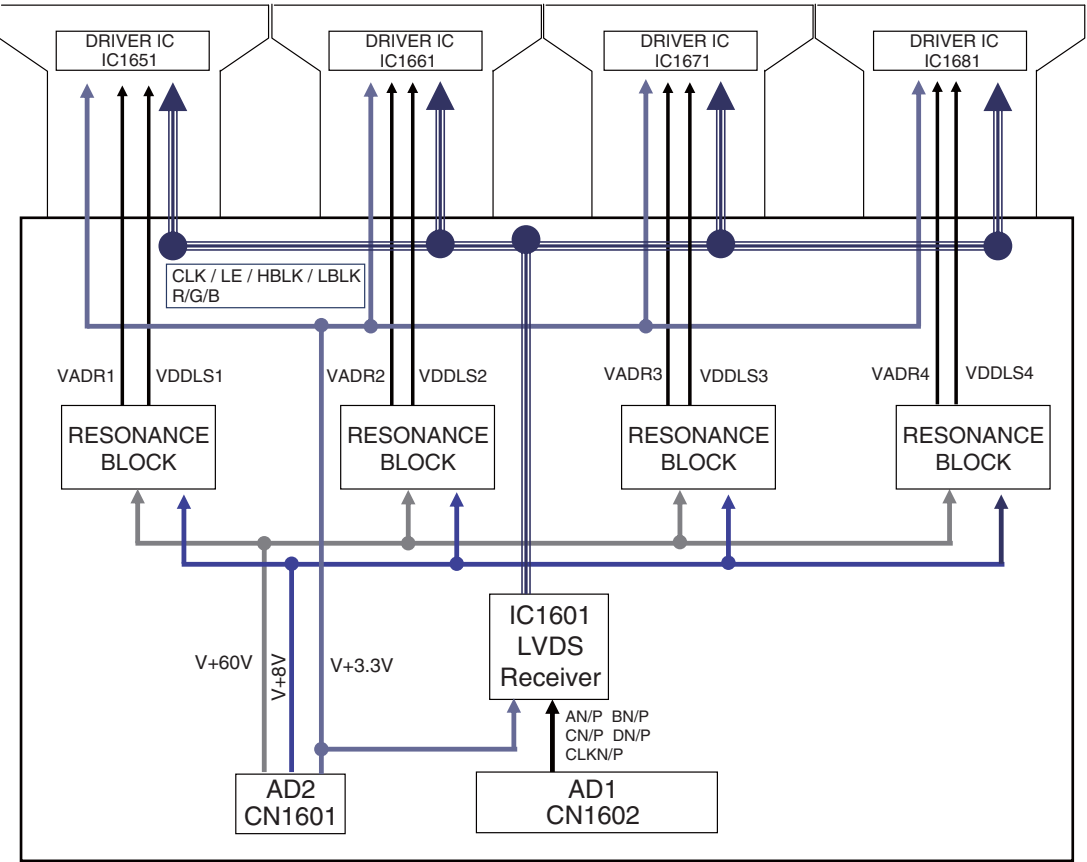

60F ADDRESS S ASSY

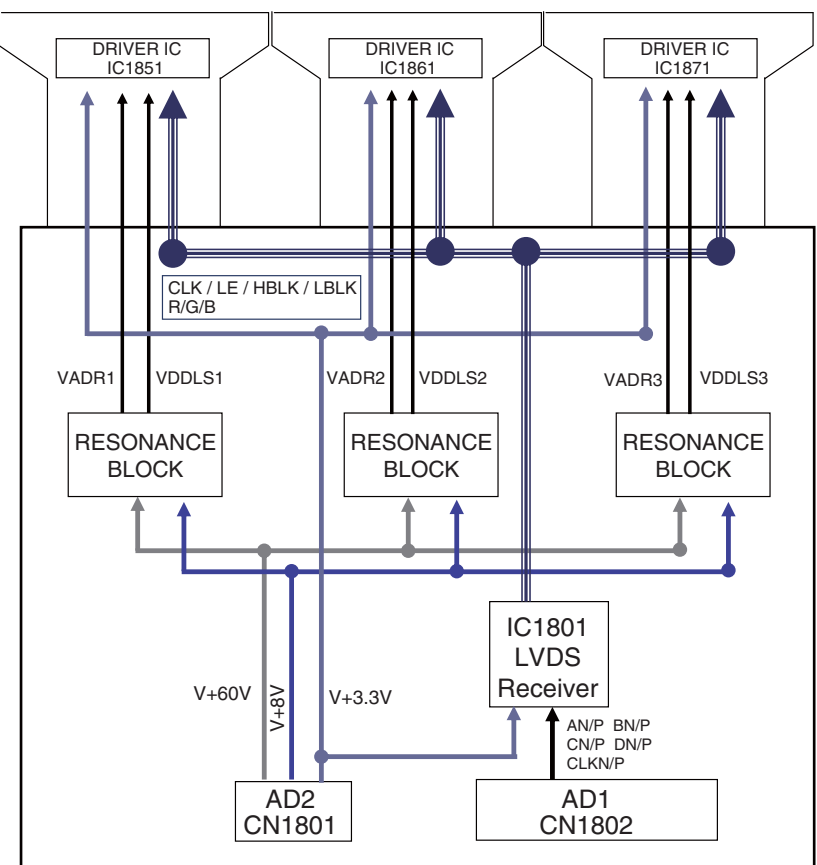

4.10 60F DIGITAL ASSY

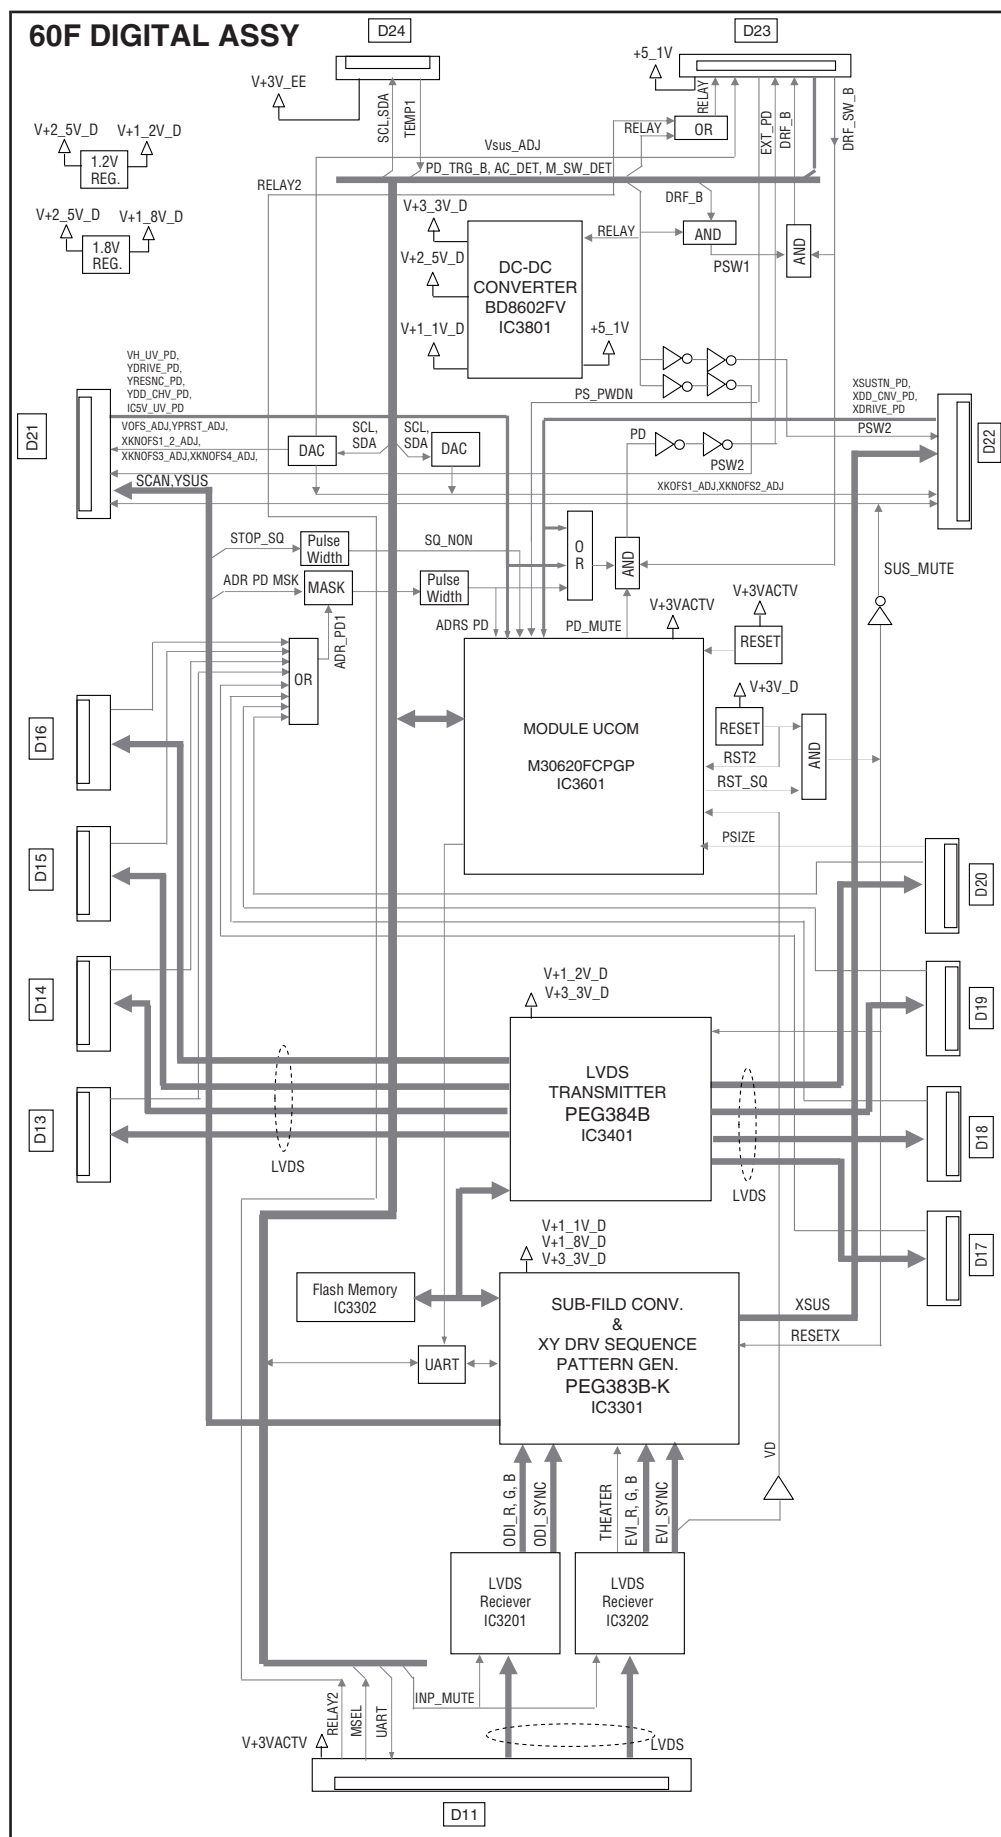

4.11 MAIN ASSY (DTV BLOCK DIAGRAM)

A


B

C

D

E

F

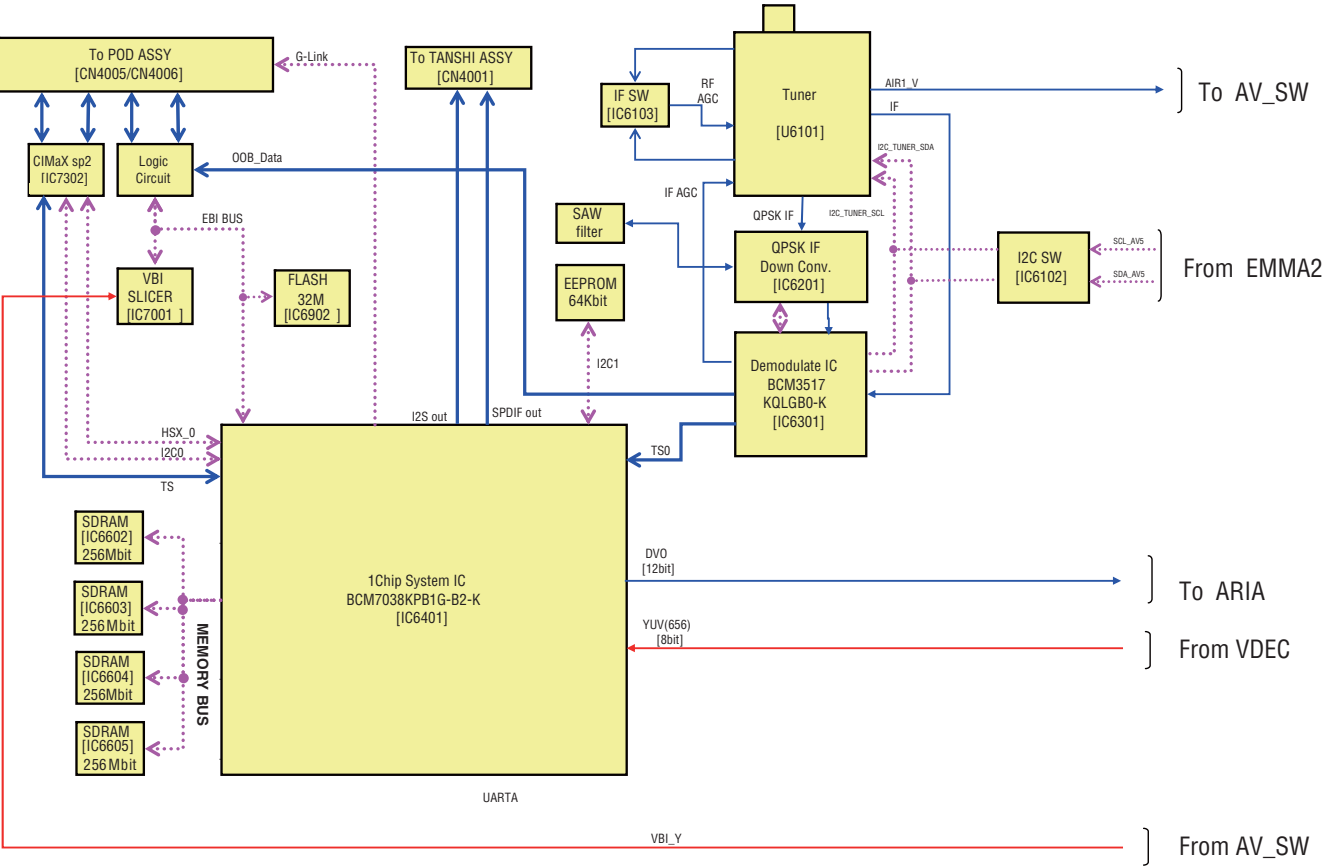

-

5

-

6

-

7

-

8

-

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

■

7

■

8

■

4.12 POWER SUPPLY BLOCK of MAIN ASSY

A

B


C


D

E

F

SW REG CONTROLLED BY RELAY

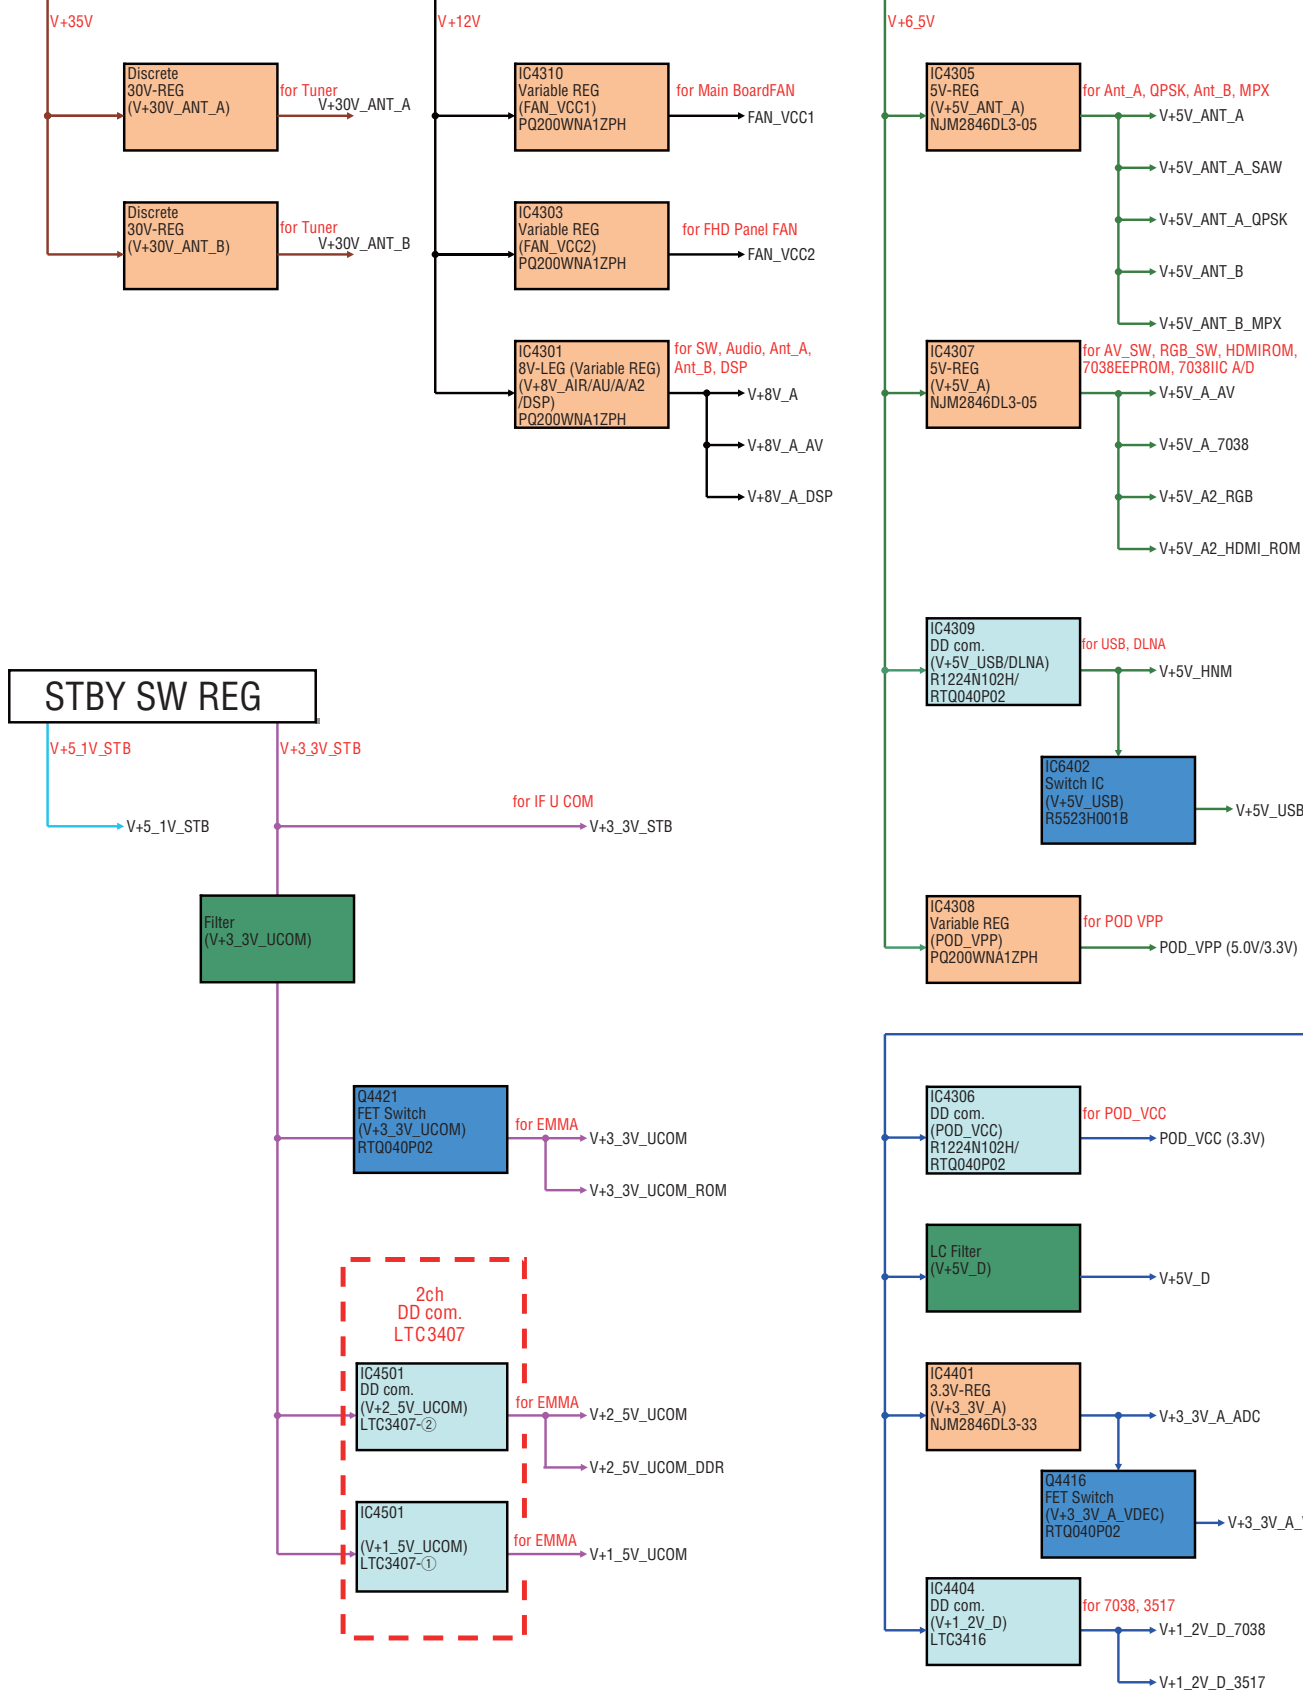

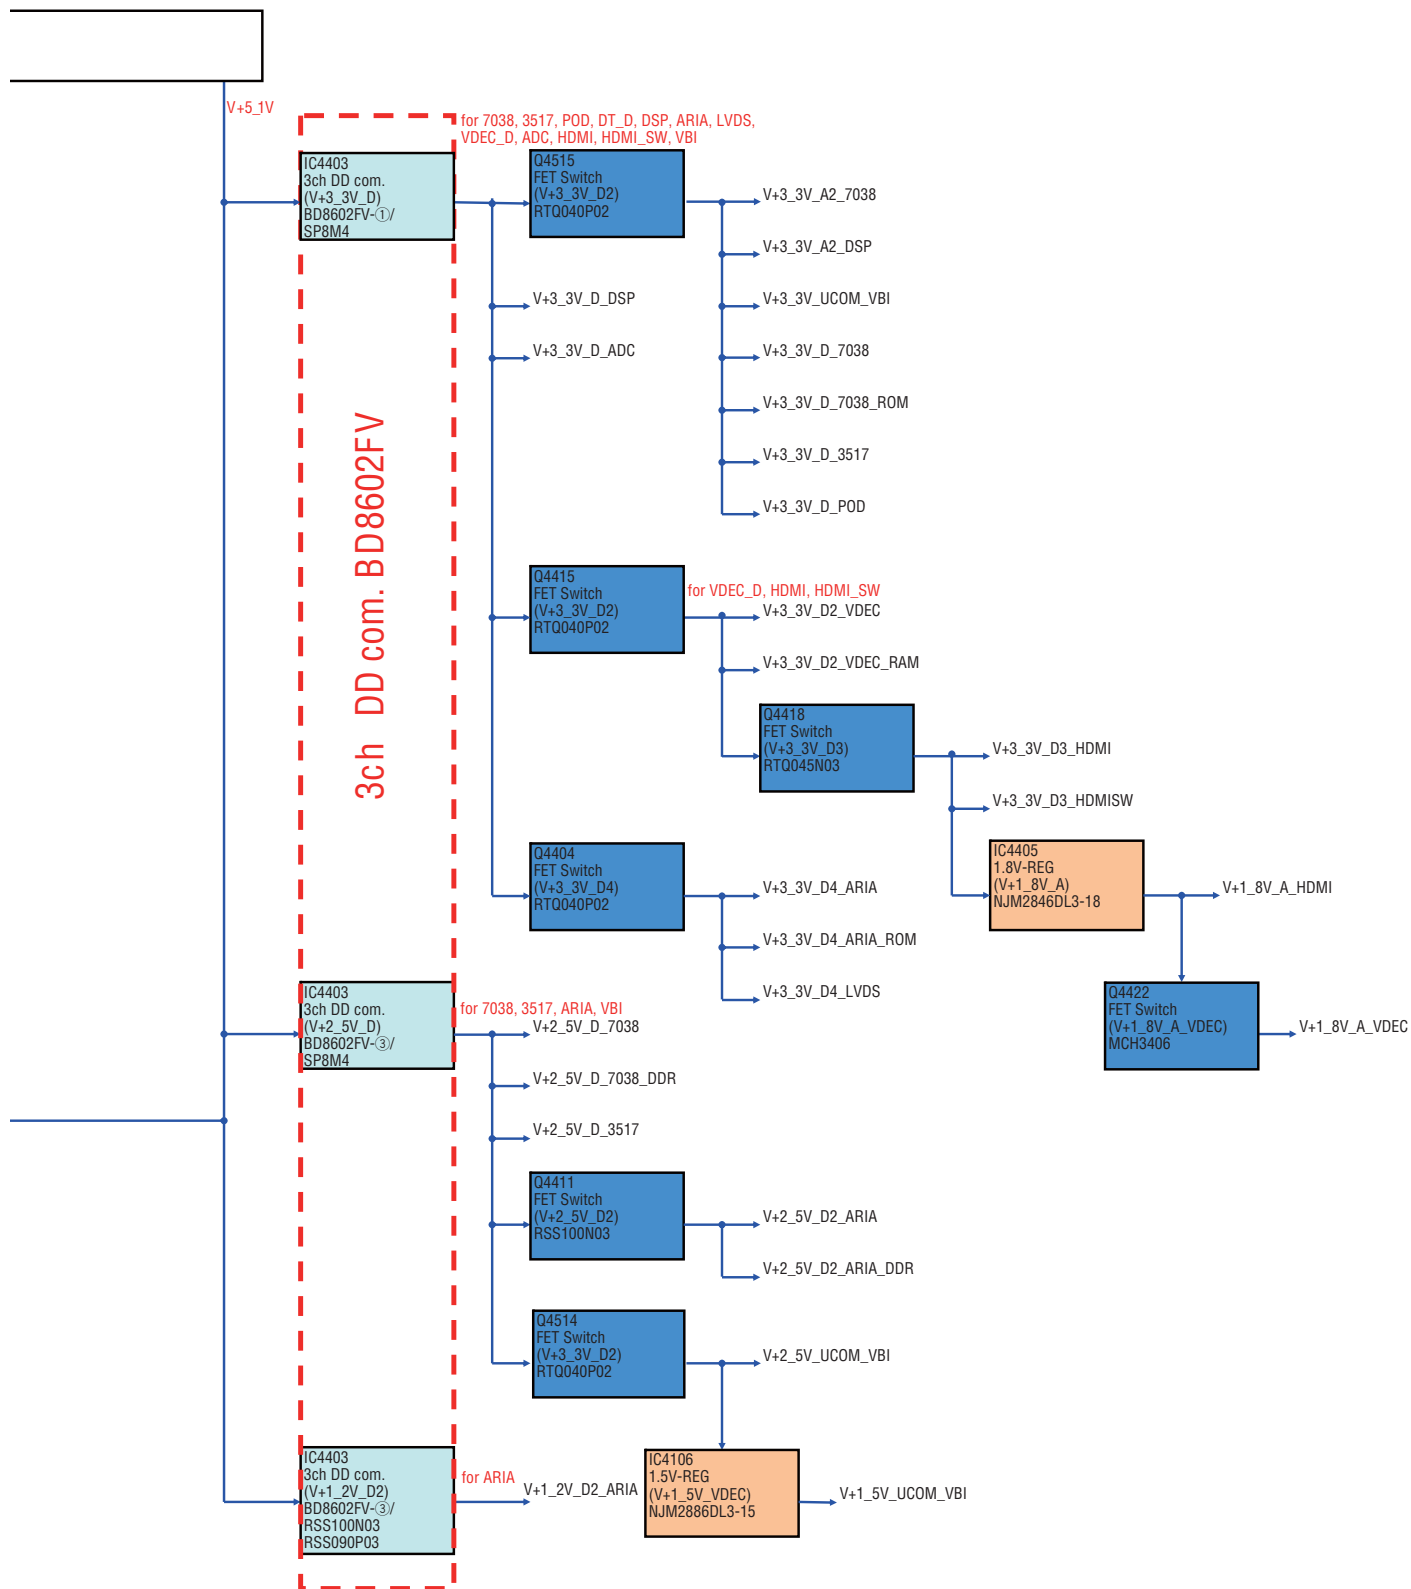


△


F



4.14 42/60 LED and FHD IR ASSYS

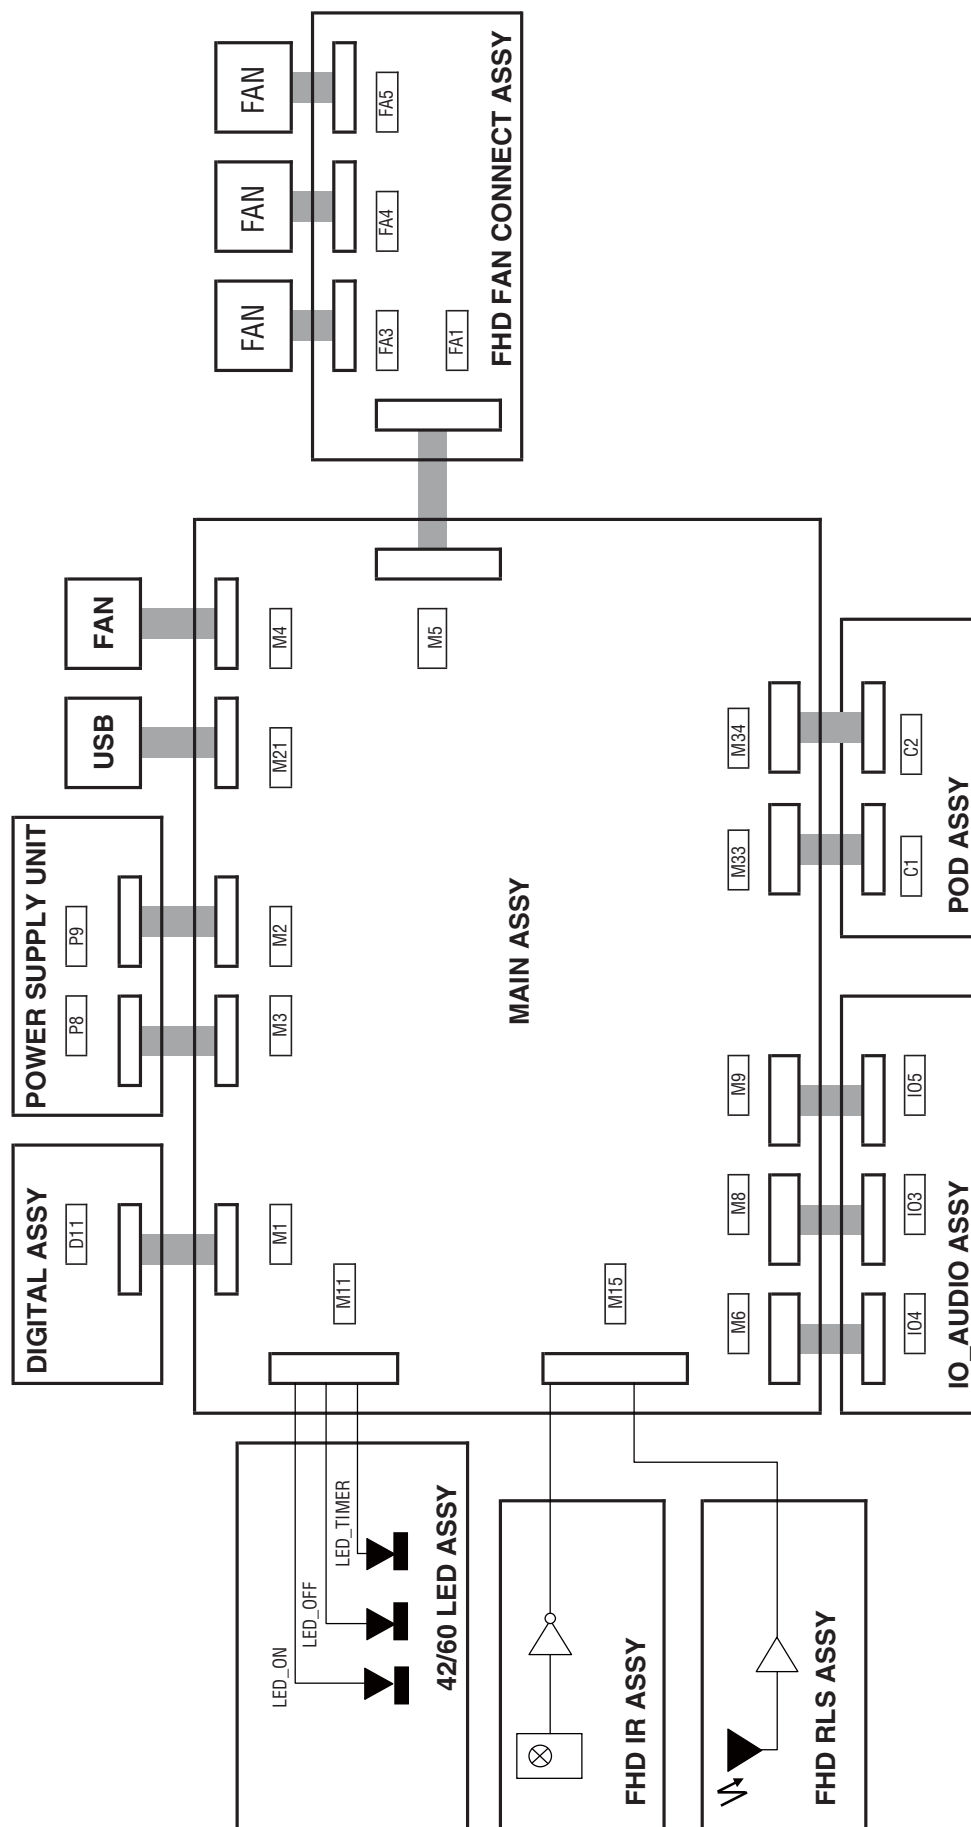

4.15 POWER SUPPLY BLOCK of FHD RLS and SIDE KEY ASSYS

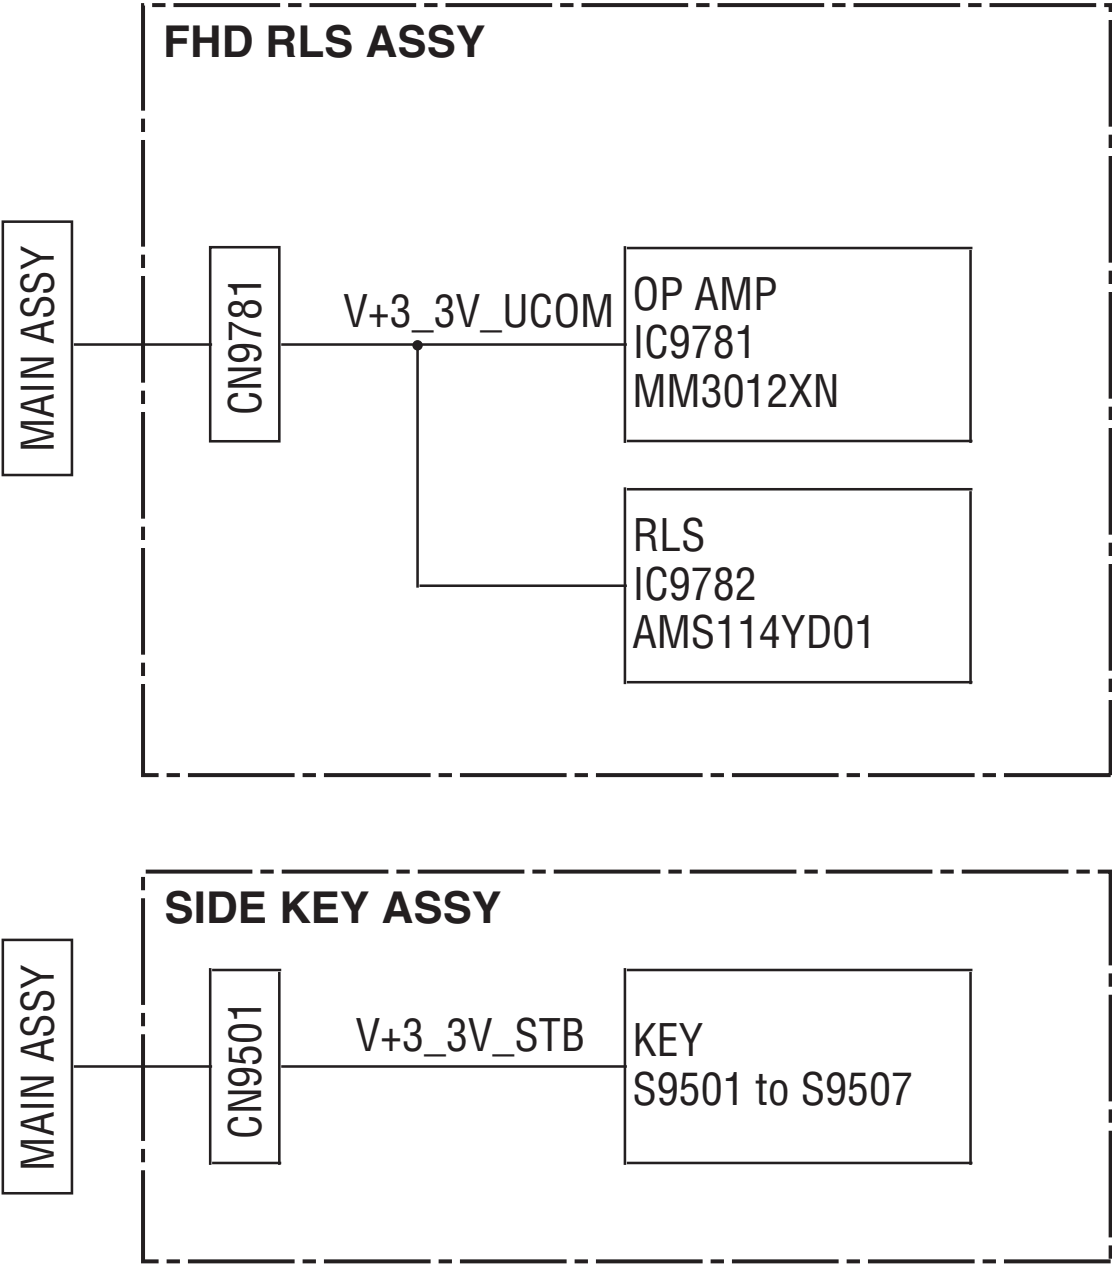






5. DIAGNOSIS

5.1 POWER SUPPLY OPERATION


5.1.1 LED DISPLAY INFORMATION

LED Pattern



State	LED	LED Pattern / Remarks					
AC OFF or Main power switch OFF	Blue	Lightins out					
	Red	Lightins out					
	Orange	Lightins out					
Standby power management	Blue	Lightins out					
	Red	Always lighting					
	Orange	Lightins out					
Power ON	Blue	Always lighting					
	Red	Lightins out					
	Orange	Lightins out					
Power-down	Blue	Once	Twice	}	n times		Once
	Red	500 mS				2.5 S	
	Orange	Lightins out					
Shutdown	Blue	500 mS		}		2.5 S	
	Red	Once	Twice		n times		Once
	Orange	Lightins out					
No digital adjustment data copied for backup	Blue						
	Red	Always lighting					
	Orange	Lightins out					
In the process of rewriting the program of the microcomputer	Blue						
	Red						
	Orange	Lightins out					
During factory operation	Blue						
	Red						
	Orange						
During DTV Module software downloading	Blue						
	Red						
	Orange						
Downloading of DTV Module software is finished normally.	Blue						
	Red	500 mS	500 mS	500 mS	500 mS	500 mS	500 mS
	Orange						
Downloading of DTV Module software is abnormally finished.	Blue						
	Red						
	Orange	500 mS	500 mS	500 mS	500 mS	500 mS	500 mS
Trap switch	Blue	Always lighting					
	Red	Always lighting					
	Orange	Lightins out					

5.1.2 POWER ON SEQUENCE

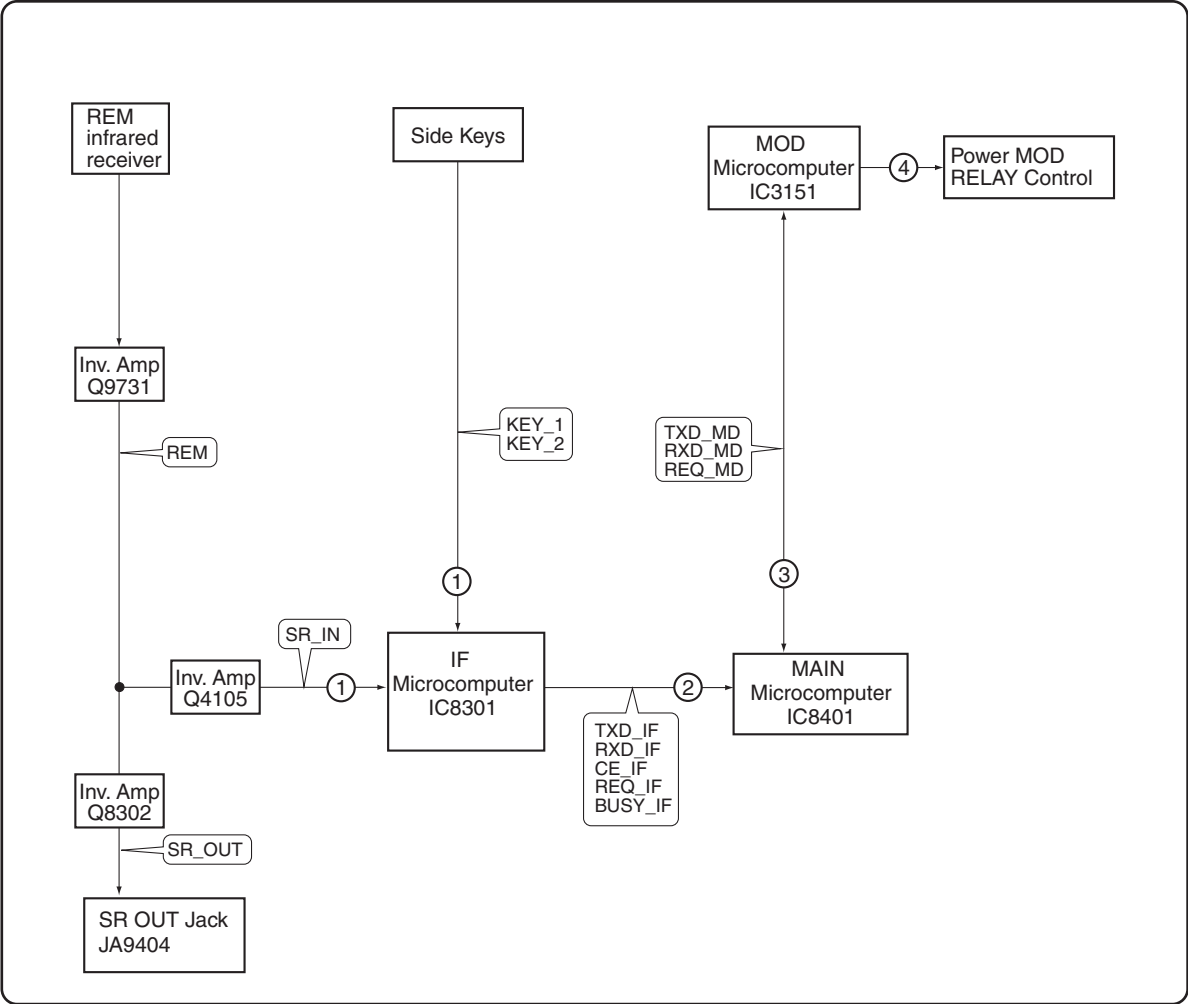

- ① : The remote control (or KEY) signal is input to the IF microcomputer.
- ② : The IF microcomputer sends the operation data of the remote control unit (or KEY) to the main microcomputer.
- ③ : The main microcomputer issues a startup command (PON) to the MOD microcomputer.
- ④ : The relay is controlled with logical OR interpretation of control signals by the main microcomputer and module (MOD) microcomputer.

A

Power supply status - Standby

Microcomputer output port state


IF: ACTIVE	ON
Main: PSW1	OFF
Module: RELAY	OFF
Module: DRF_B	OFF

Microcomputer input port state

Main: RST4	ON
Main: RST2	OFF
Module: RST2	OFF

B

C

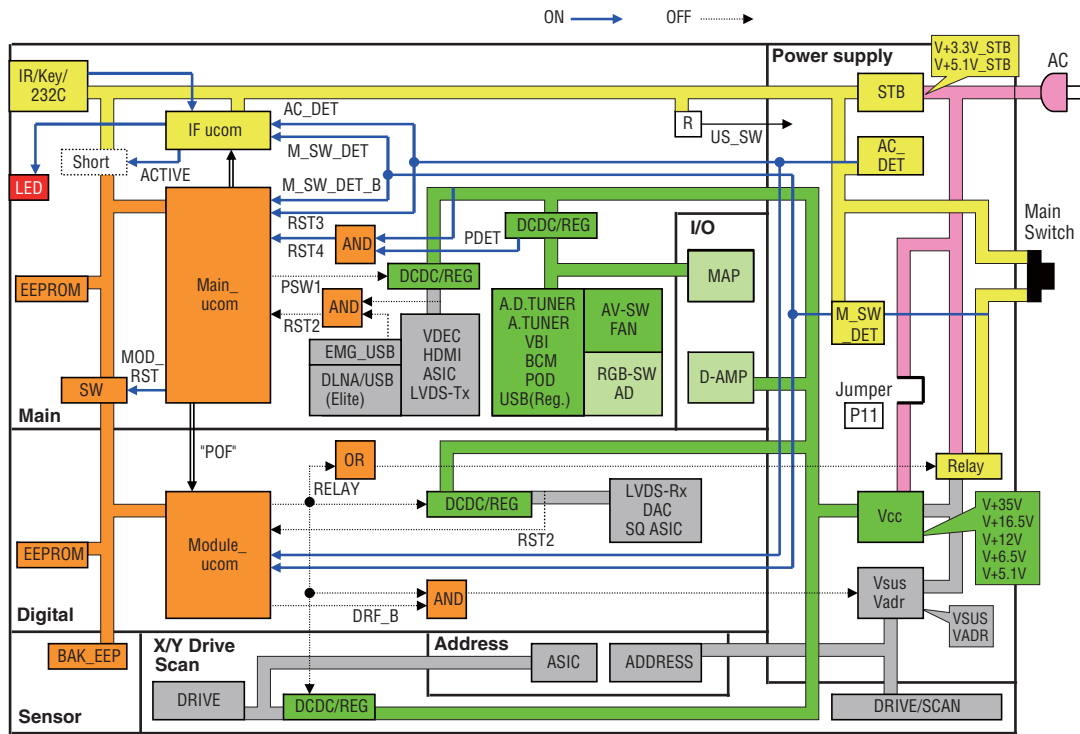

Remote control unit waiting state. (Red LED: ON)

Standby power device and some Vcc power devices operate.

RGB-SW/AD/D-AMP/MAP are electrified, but uses the power-saving mode function of the IC.

Power supply status - ON

D

Microcomputer output port state


IF: ACTIVE	ON
Main: PSW1	ON
Module: RELAY	ON
Module: DRF_B	ON

Microcomputer input port state

Main: RST4	ON
Main: RST2	ON
Module: RST2	ON

E

F

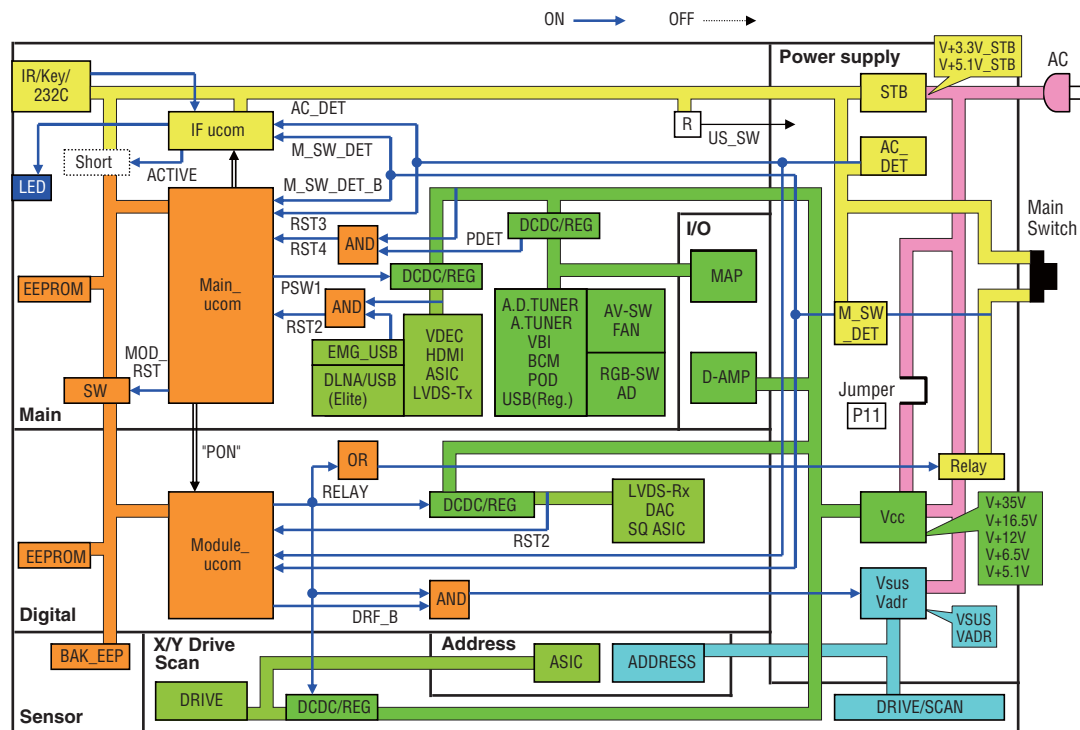


A state when it displays a picture on the PDP. (Blue LED: ON)

All devices are electrified.

5.2 DIAGNOSIS FLOWCHART OF FAILURE ANALYSIS

5.2.1 WHOLE UNIT

Flowchart of Failure Analysis for The Whole Unit

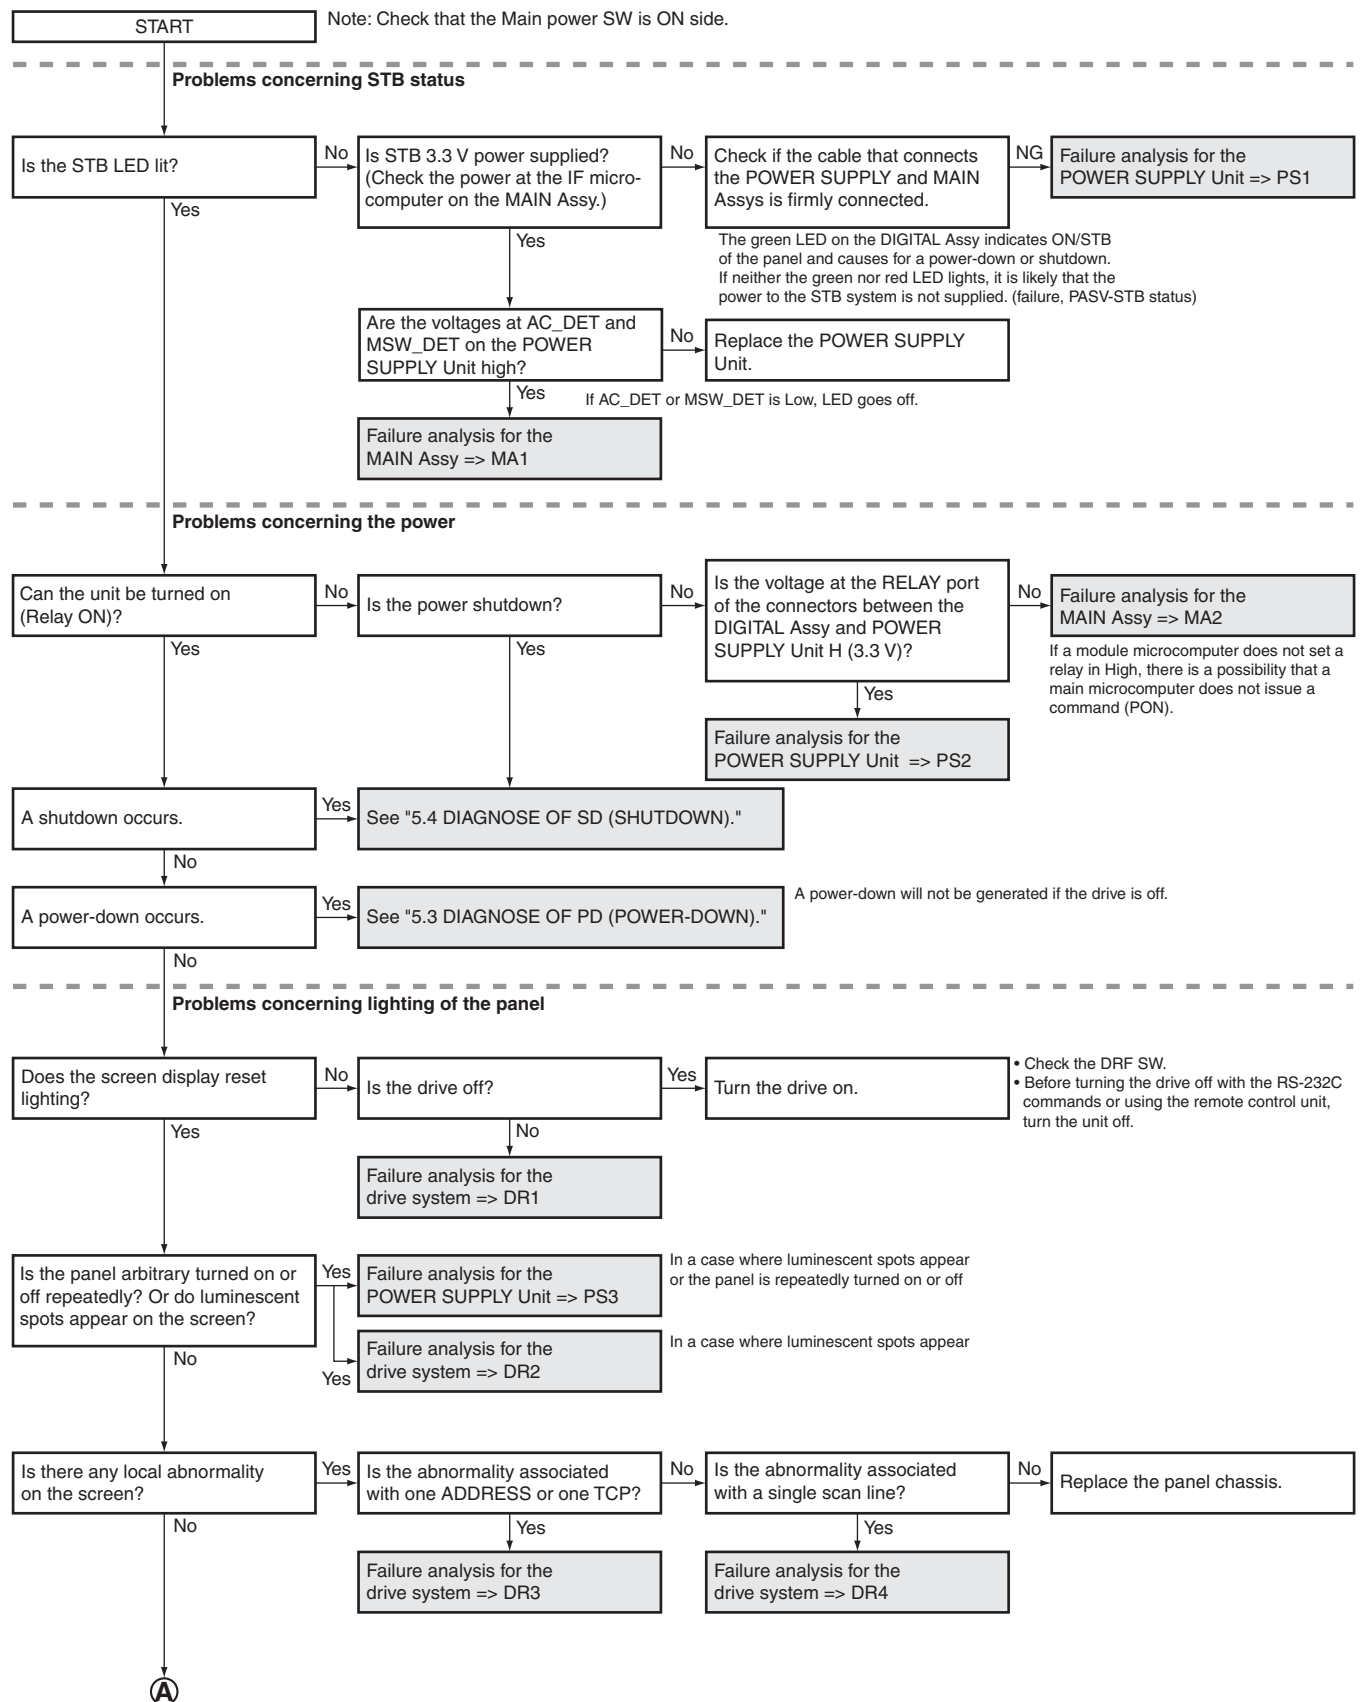


A

A


In the subsequent diagnostic steps, it is most likely that the multi base section is in failure.

Problems concerning video display

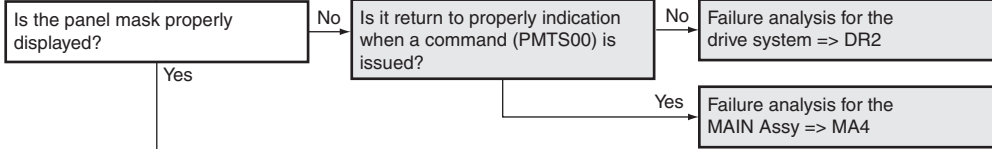


B

 Check with the animated slanting ramp mask.




Yes
Check on the Factory menu.

 

Yes

Problems concerning the audio output

 C



Yes

Specific failure whose cause is difficult to identify in the initial stage


D

E


F


5.2.2 POWER SUPPLY UNIT

Flowchart of Failure Analysis for The POWER SUPPLY Unit

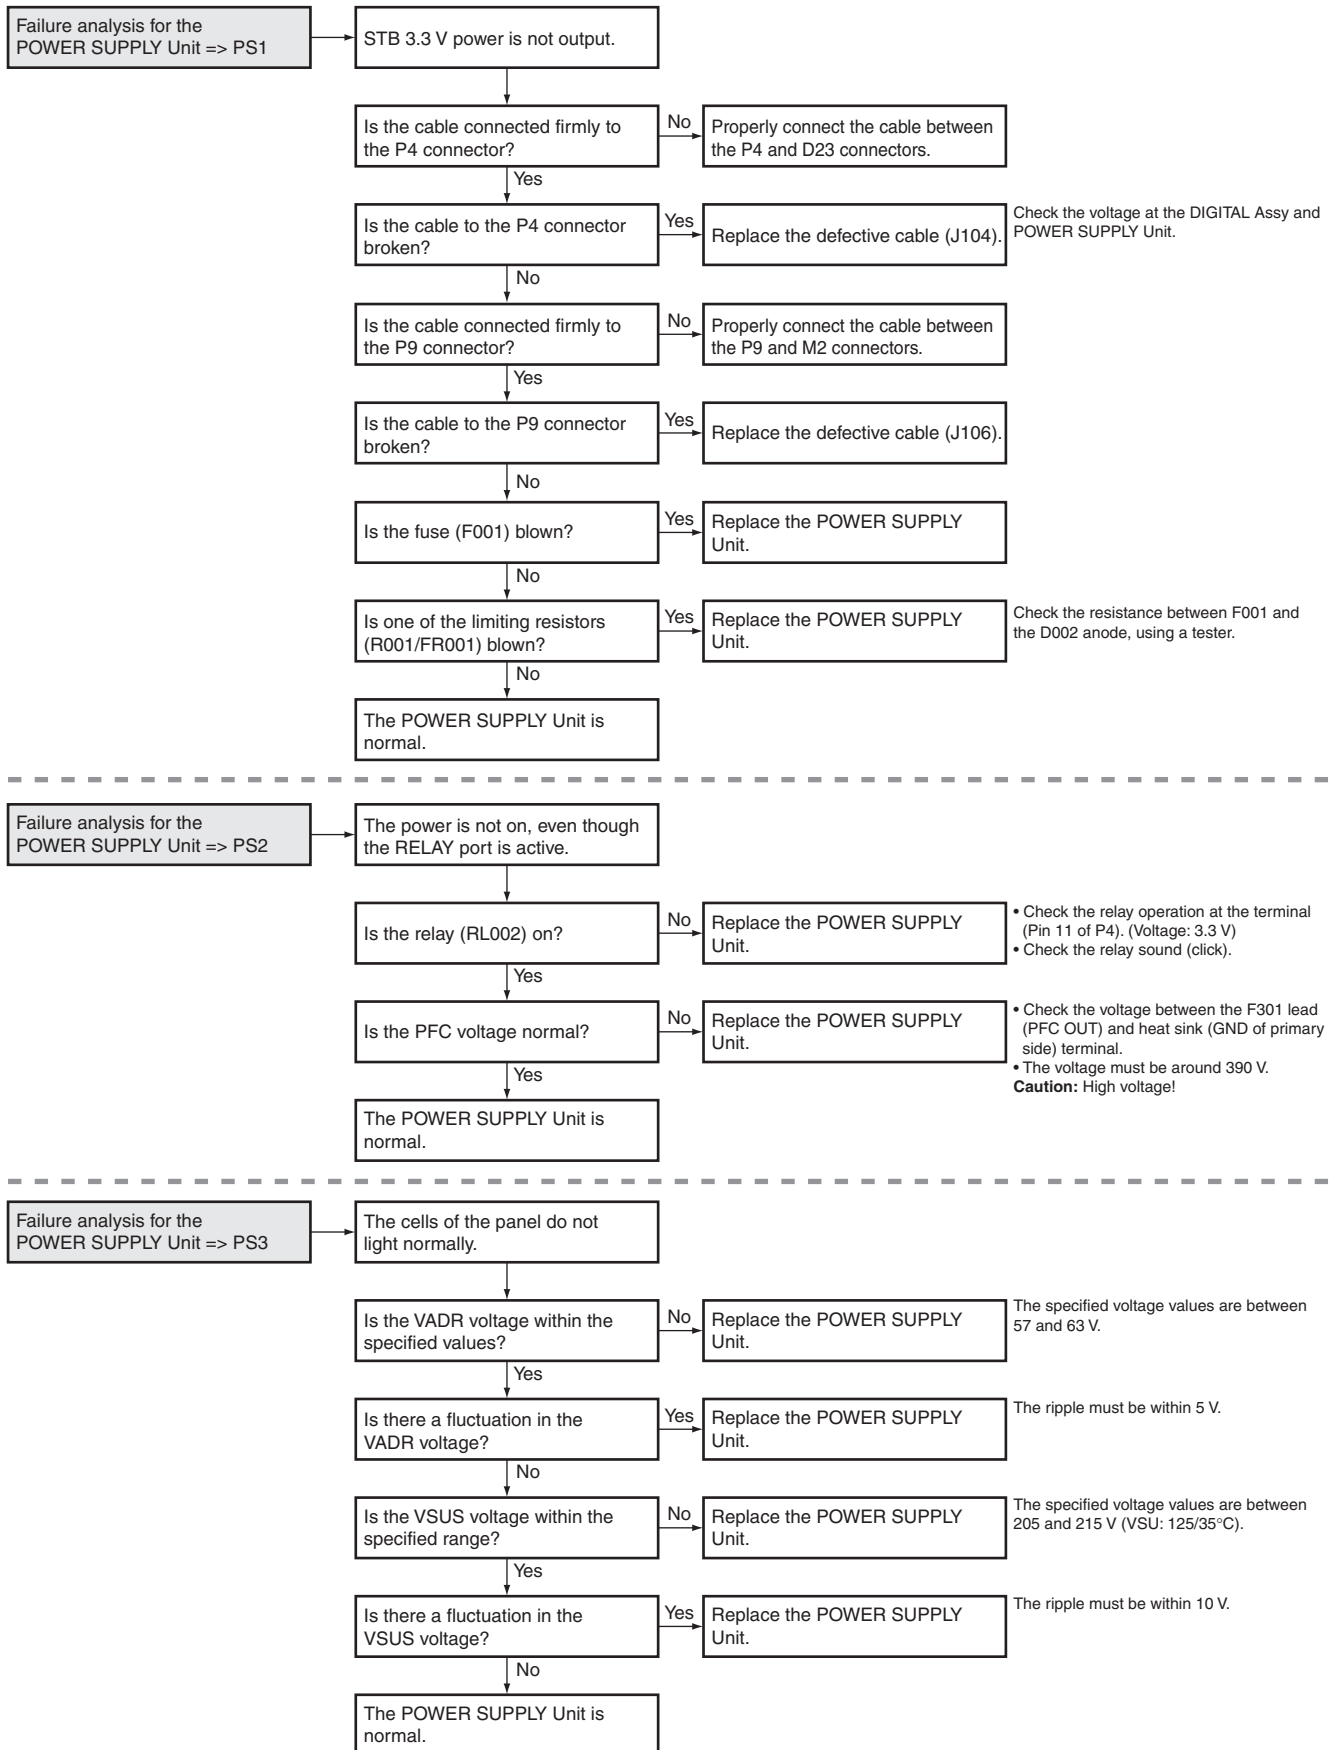

Flowchart of Failure Analysis for The Drive Assy

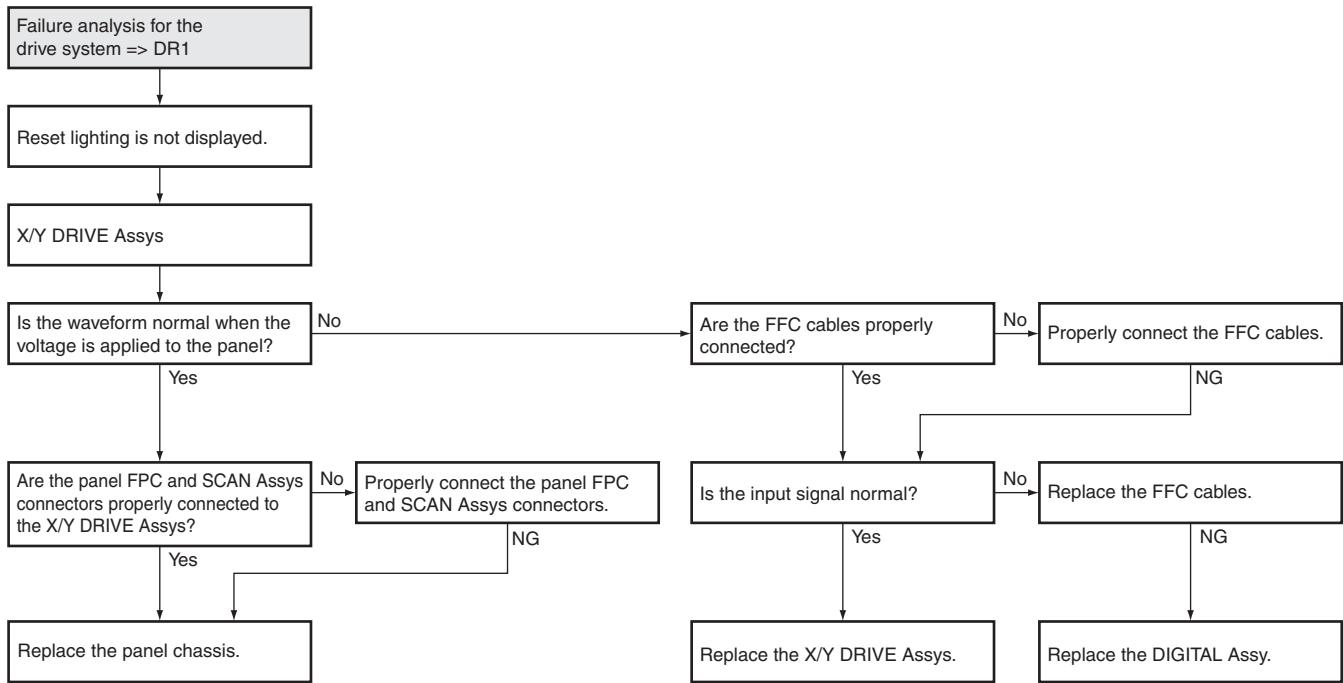

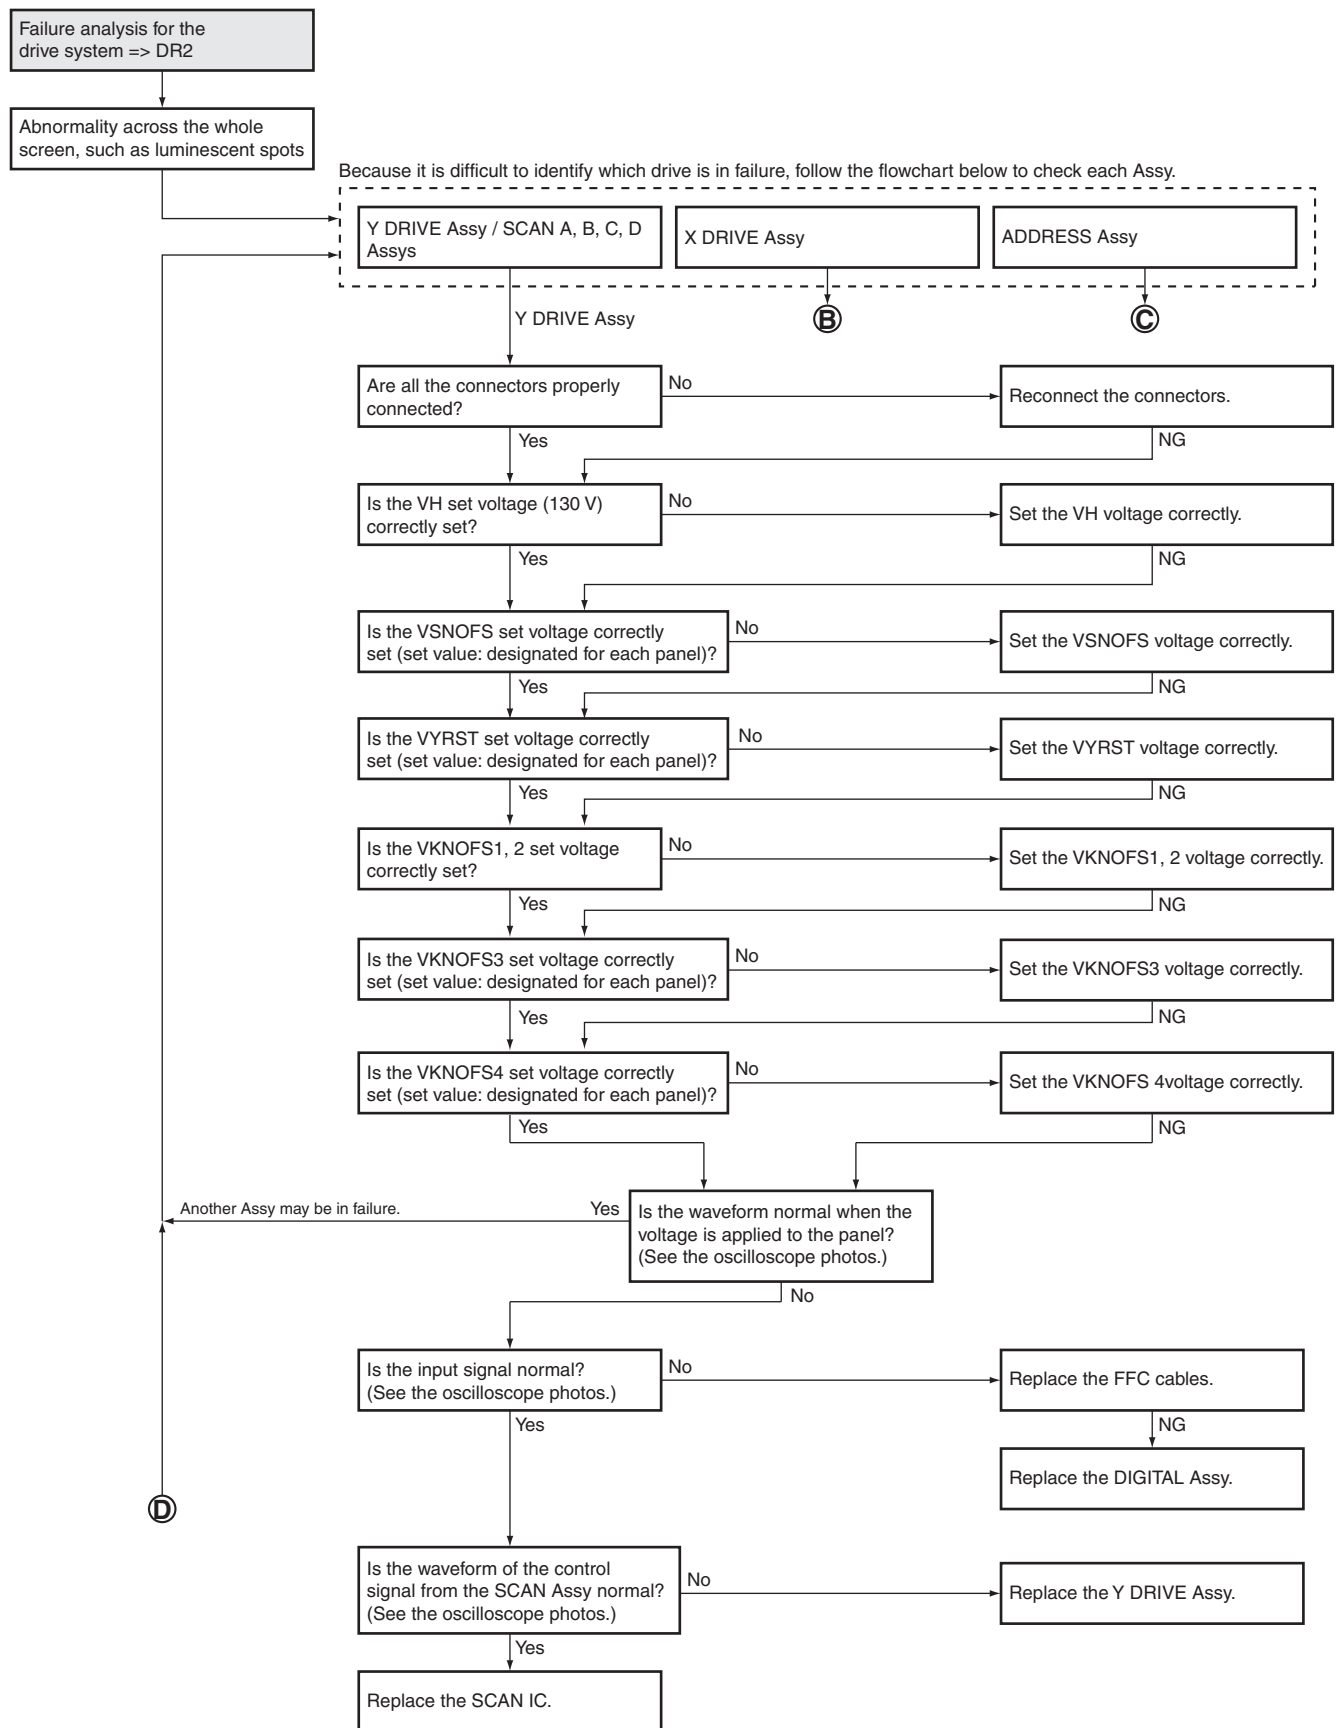

A


B

C


D



E

F

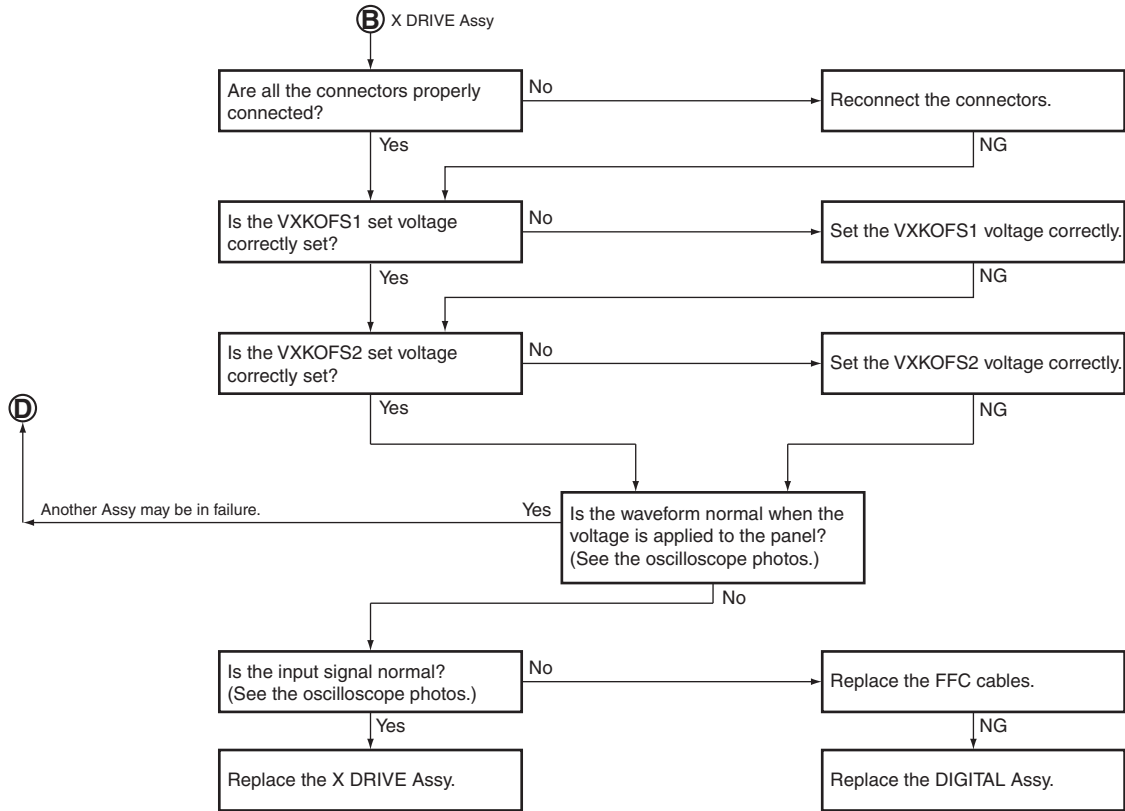


(C) ADDRESS Assy

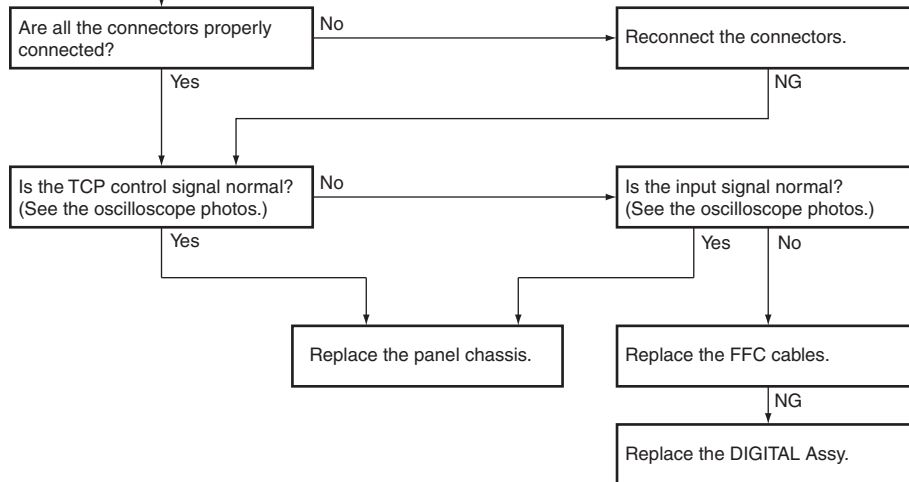

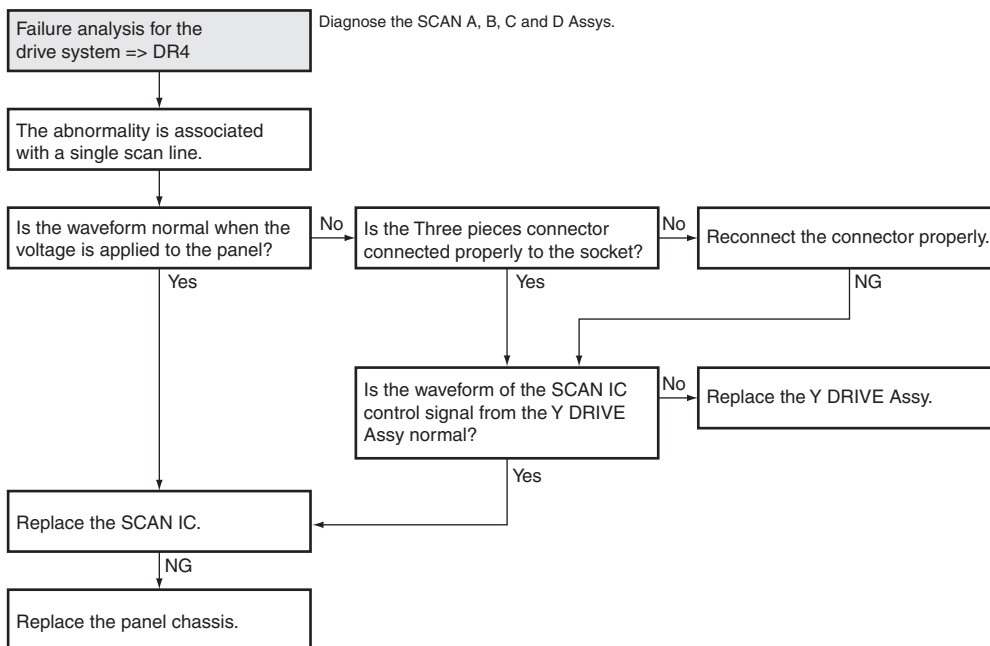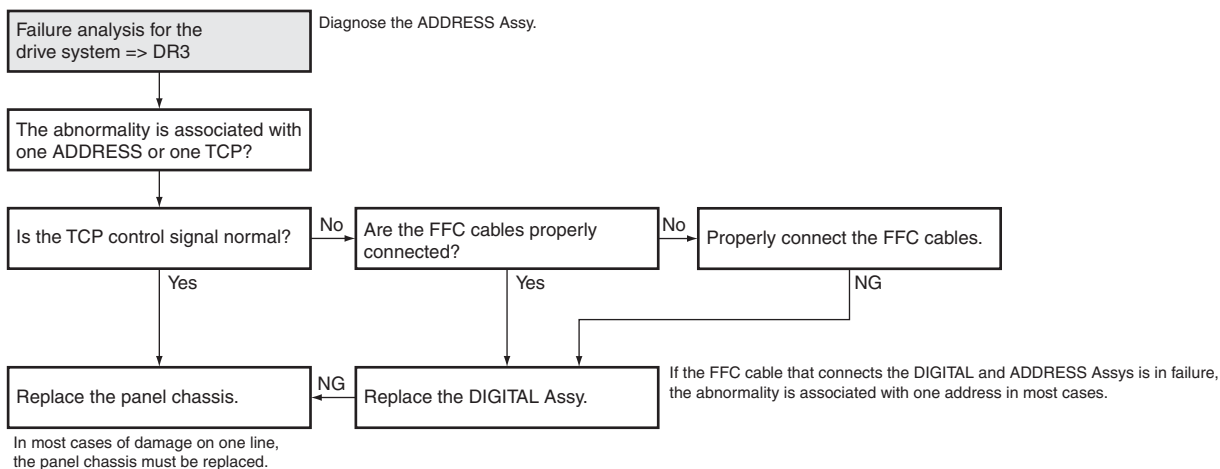


Flowchart of Failure Analysis for The DIGITAL Assy

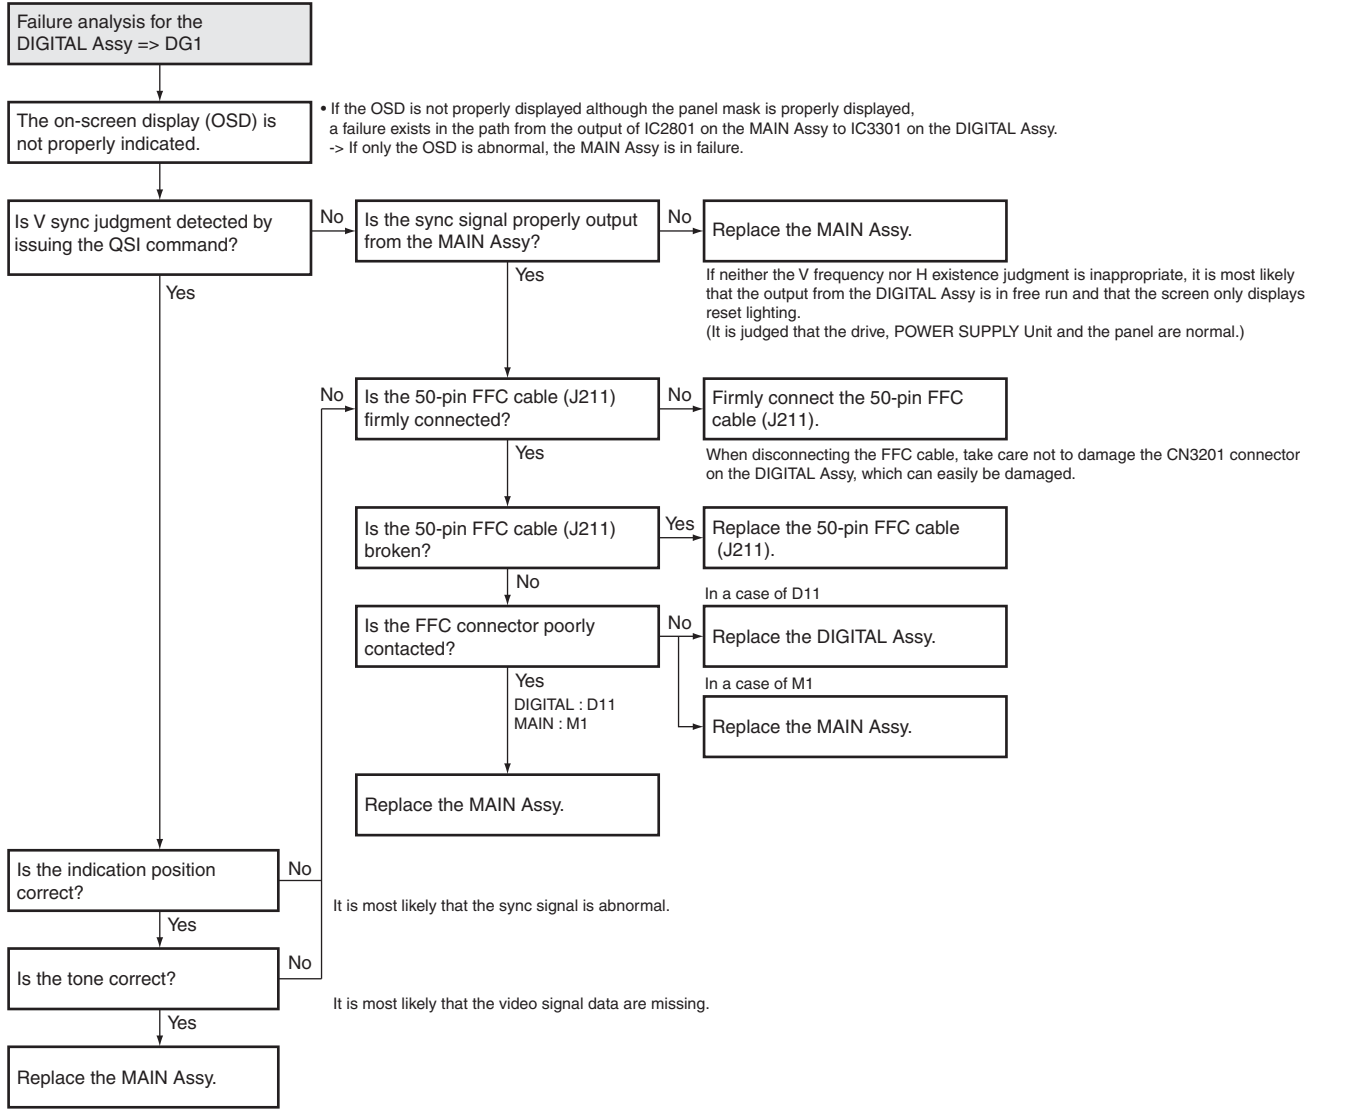


5.2.5 MAIN ASSY

Flowchart of Failure Analysis for The MAIN Assy

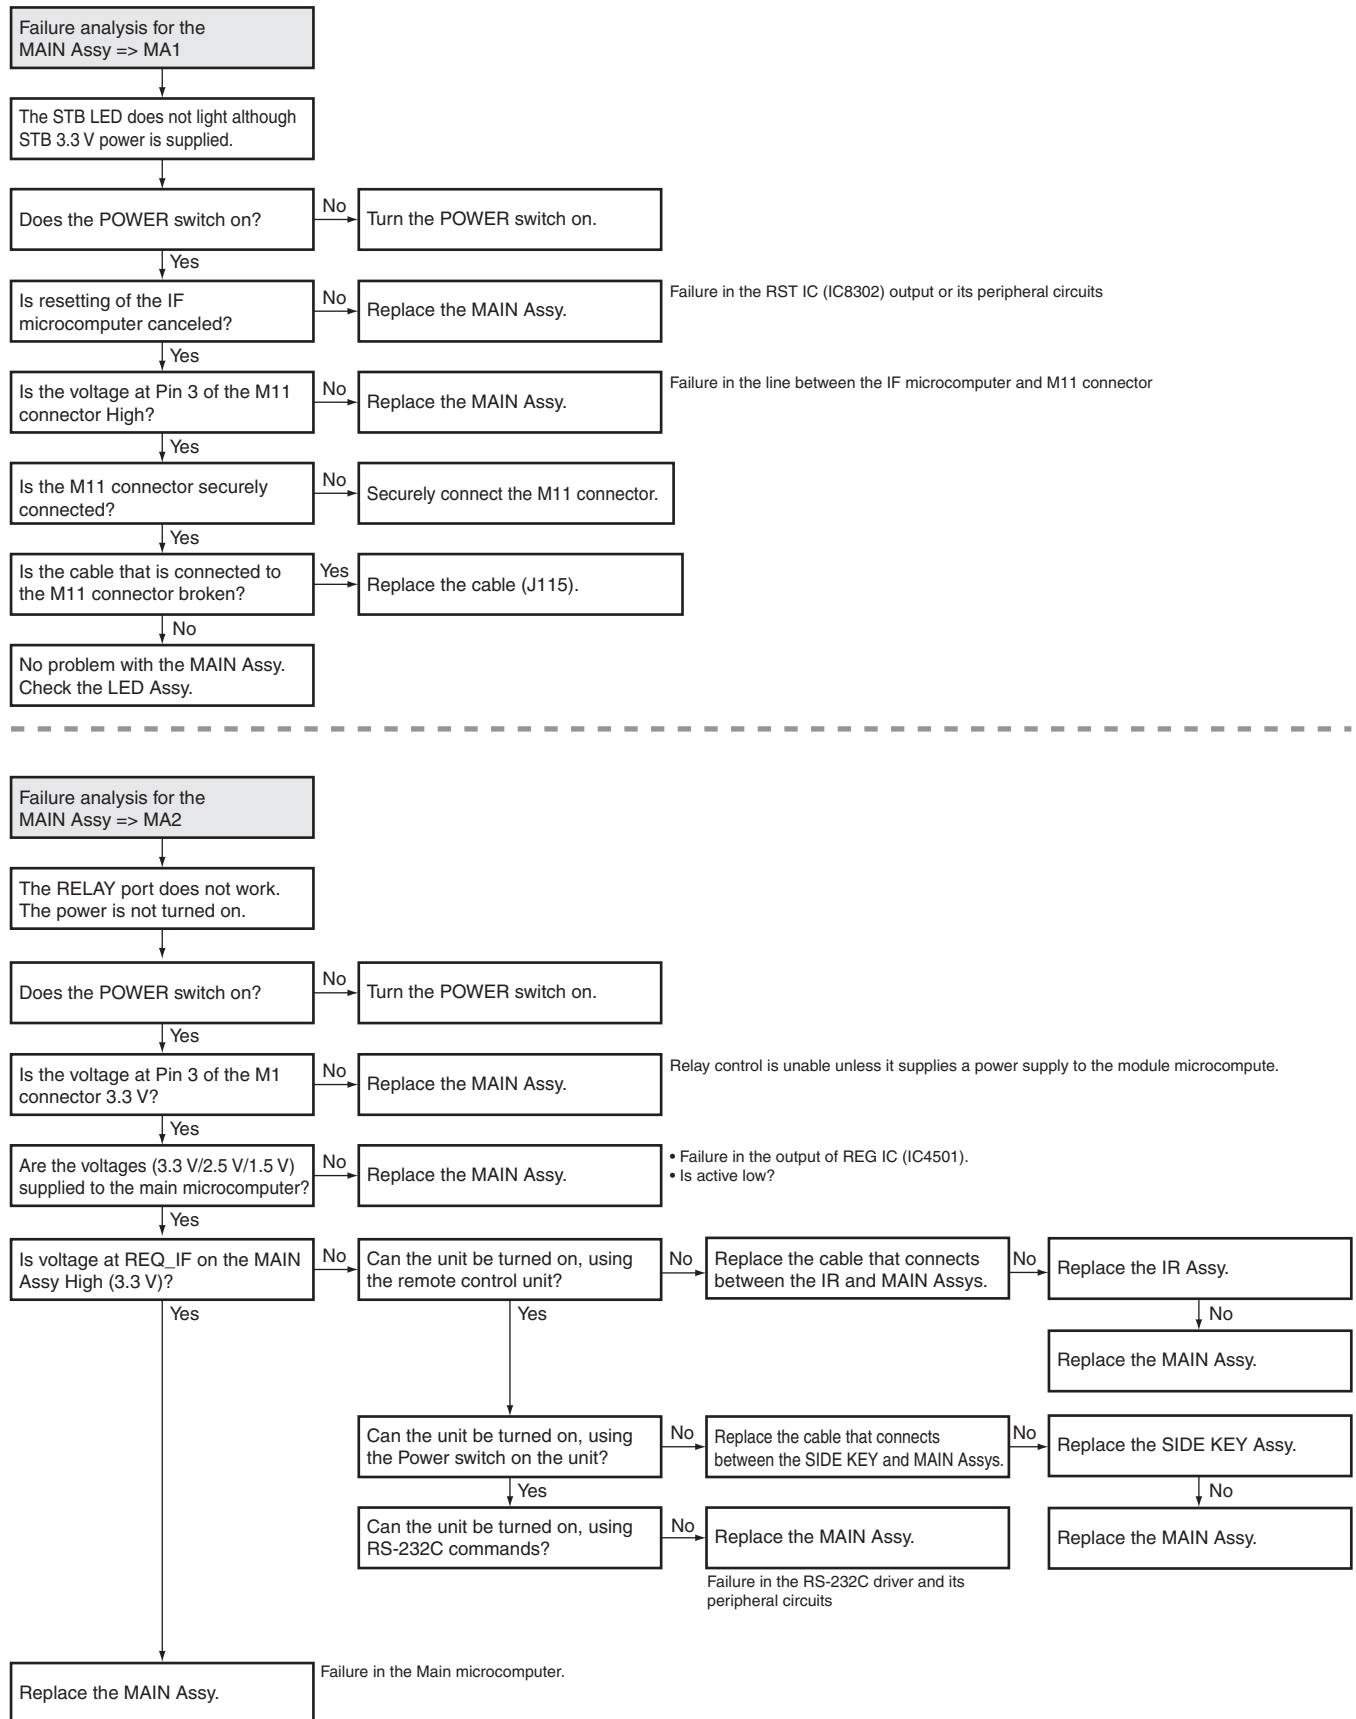


5.2.6 VIDEO SYSTEM

Flowchart of Failure Analysis for The Video System

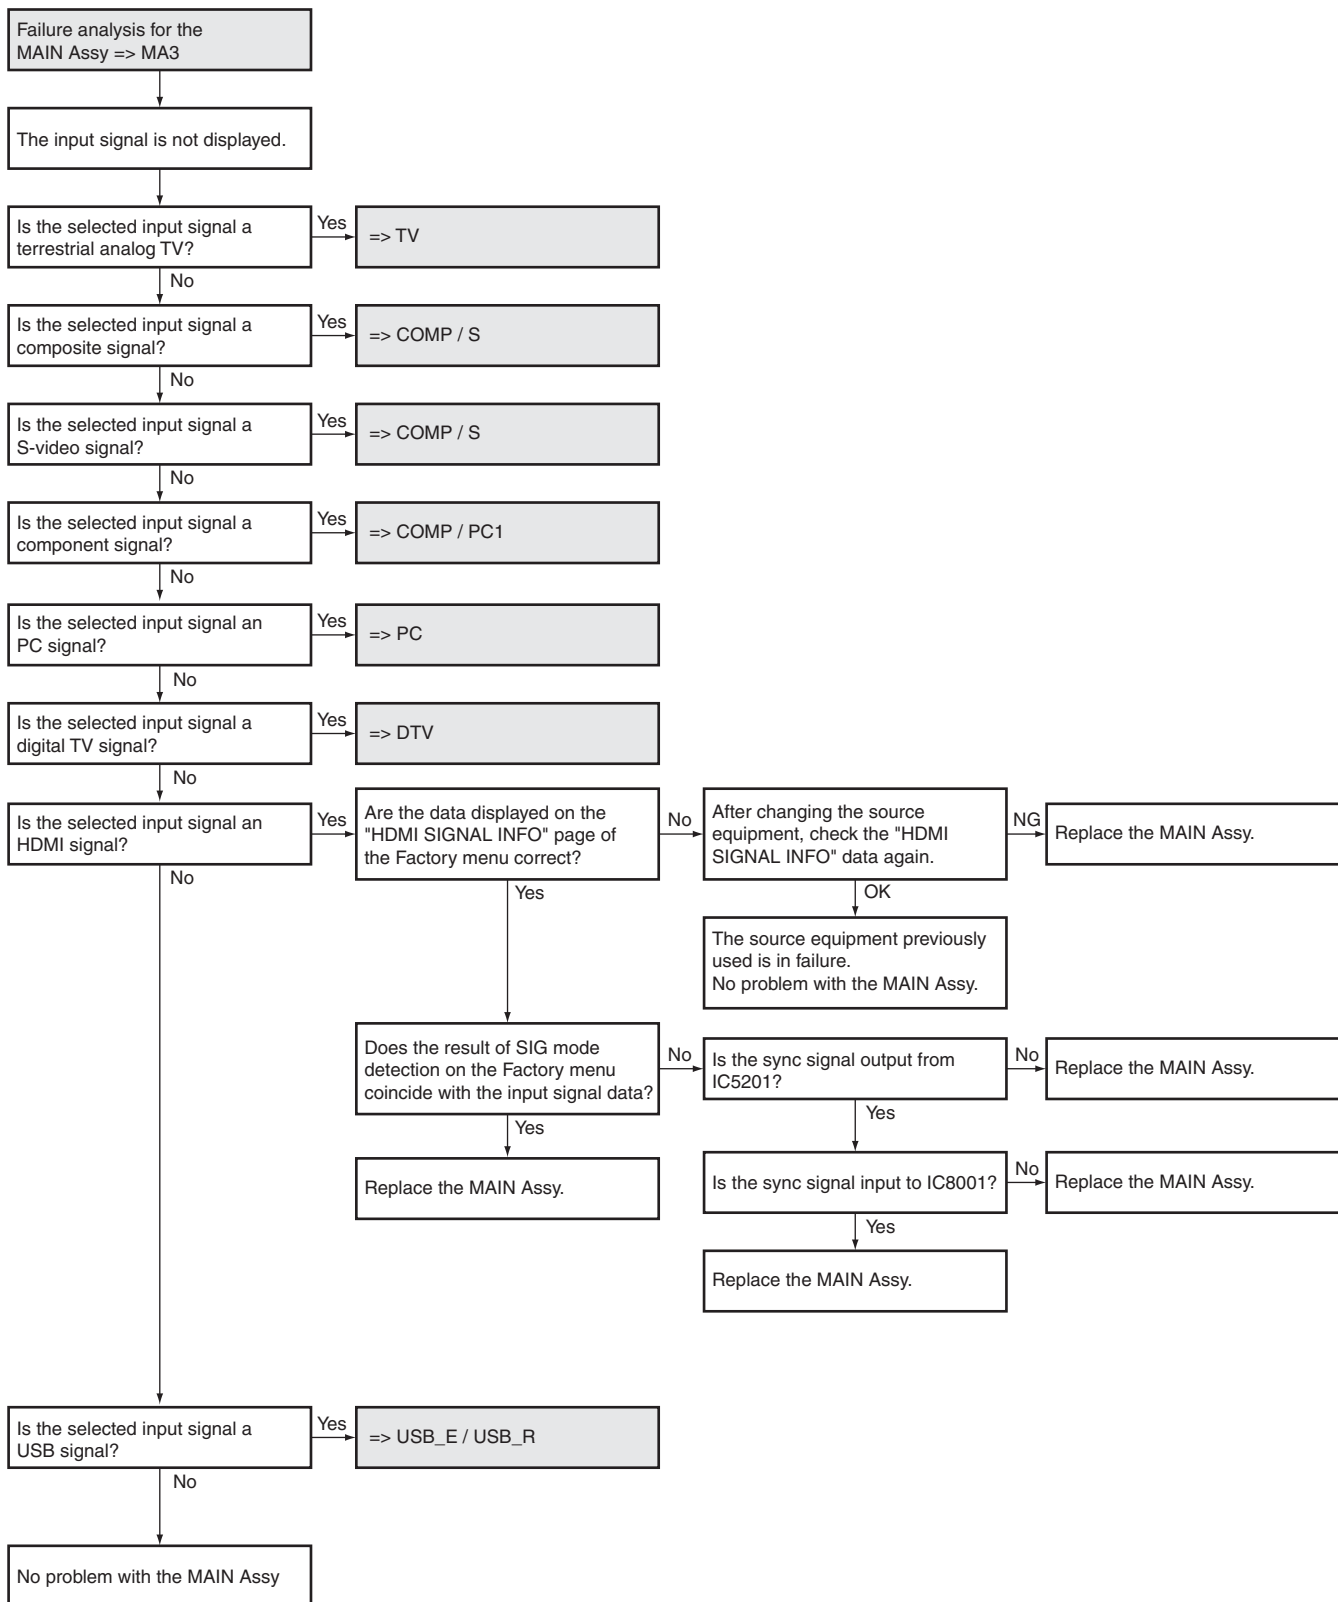


Flowchart of Failure Analysis for The Video System

No video from Composite or S-VIDEO

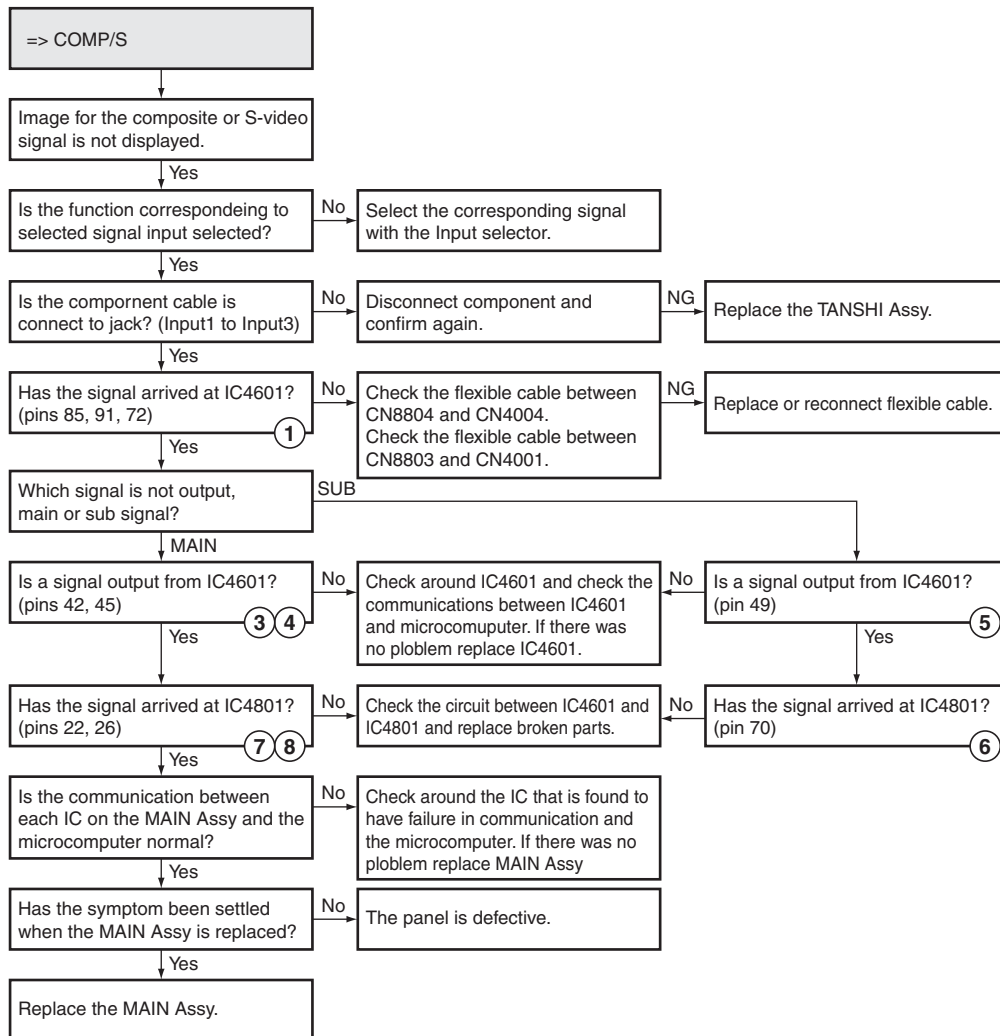


● Waveforms

Input signal: Color-bar

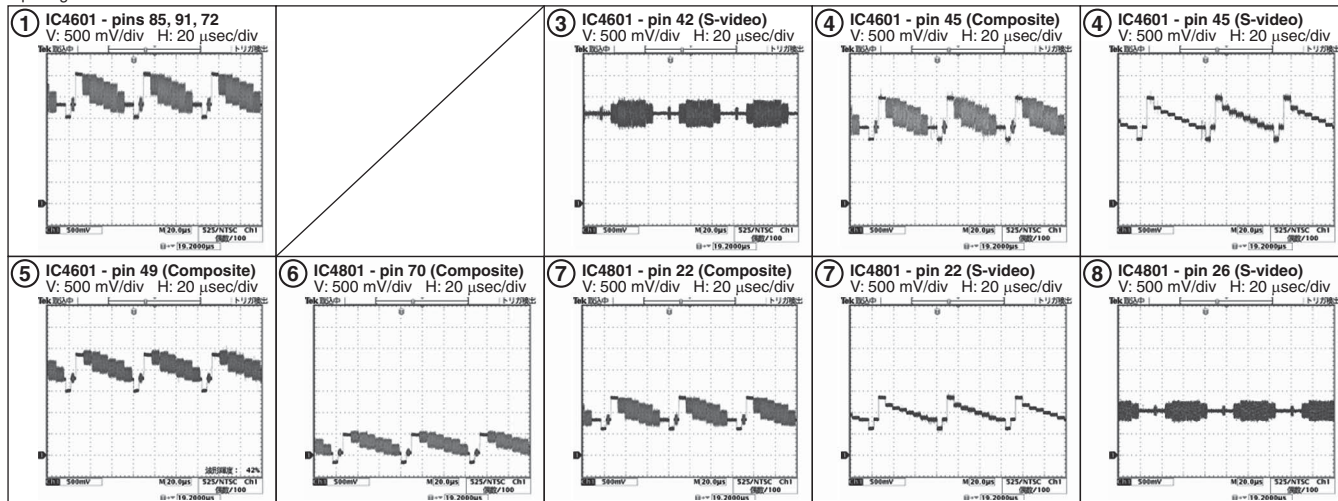

A

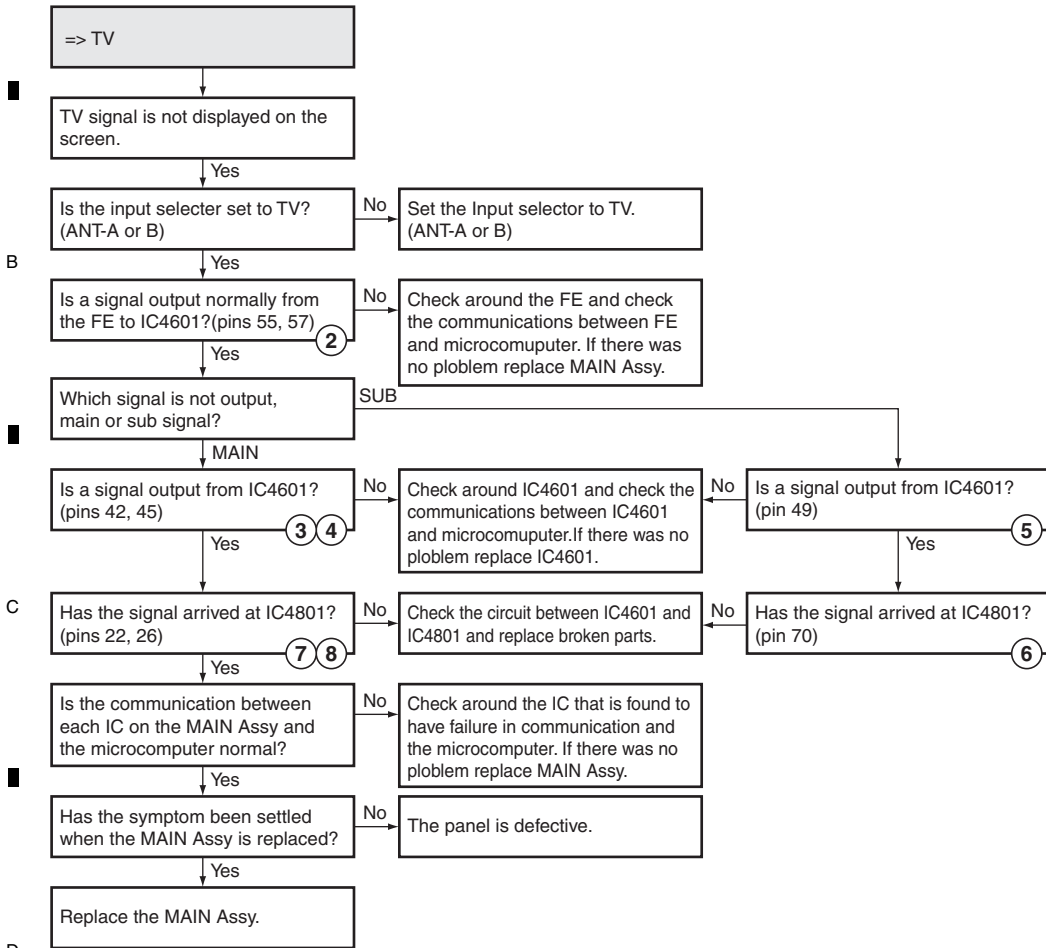No video from TV signal


D


● Waveforms

Input signal: Color-bar

E


F

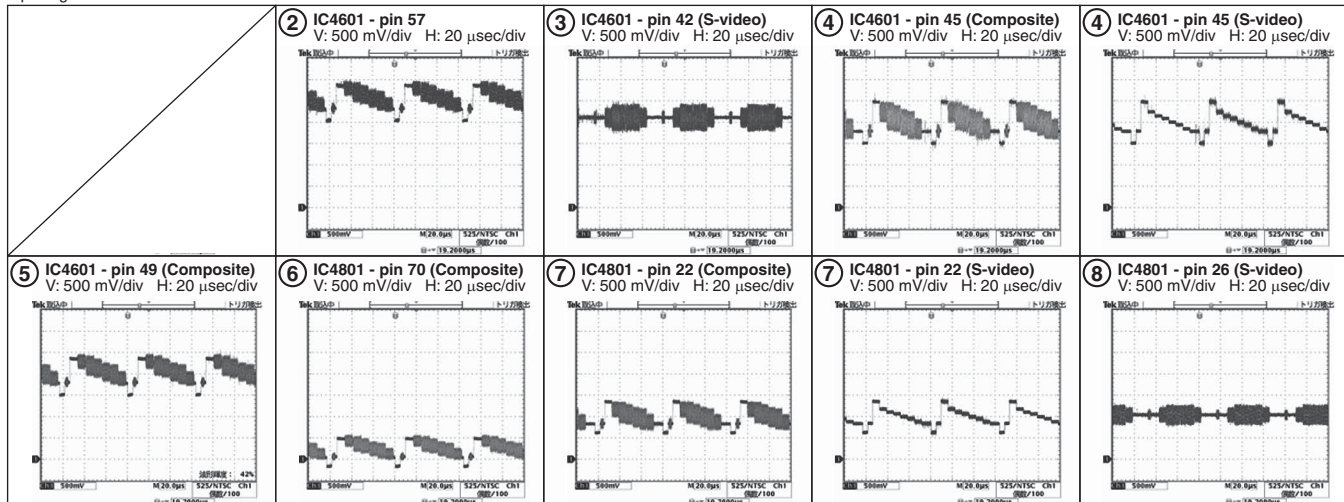

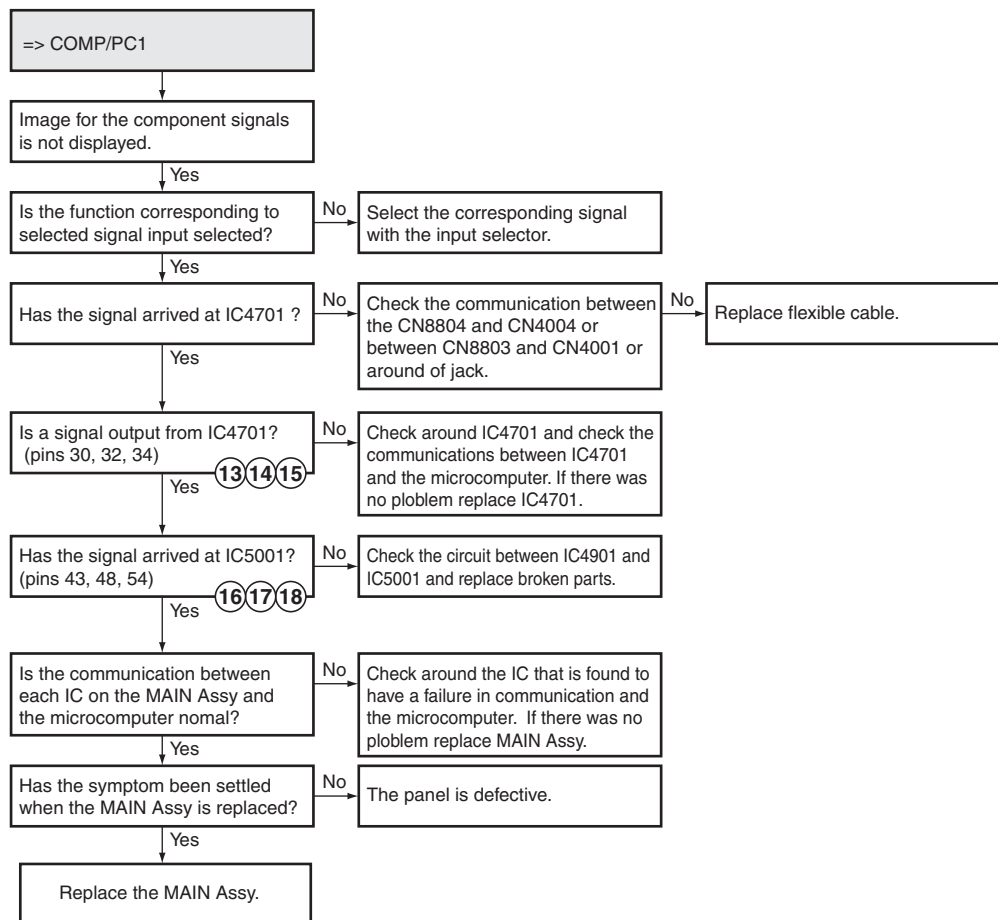


● Waveforms

Input signal: Color-bar

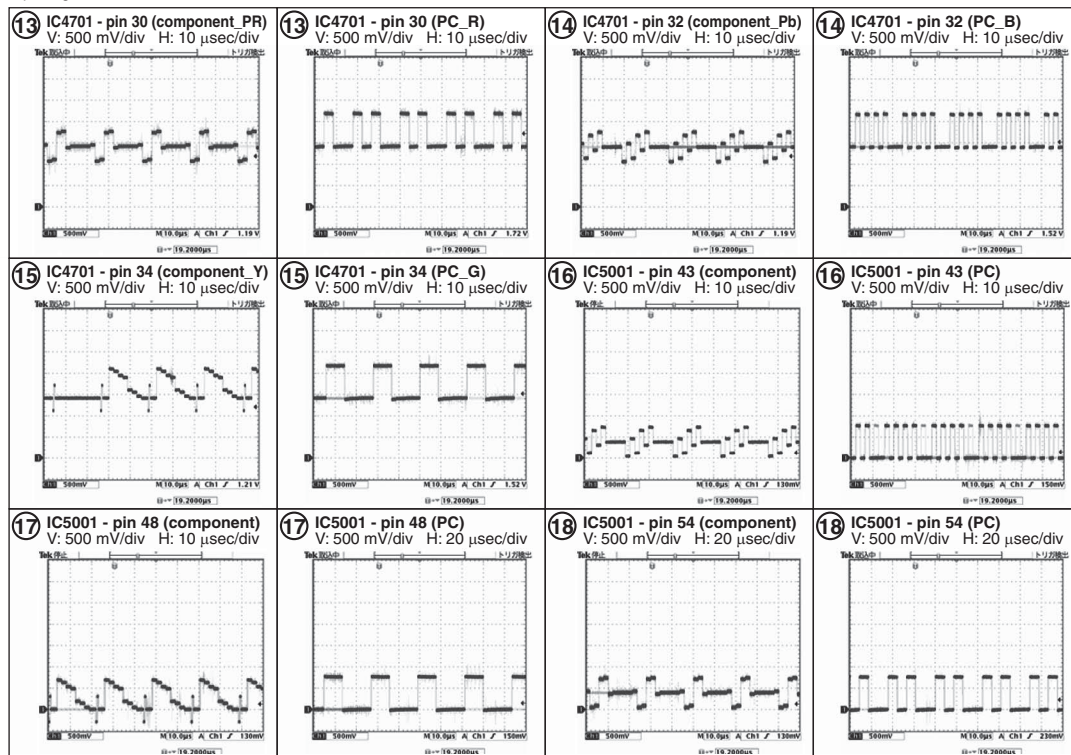


A

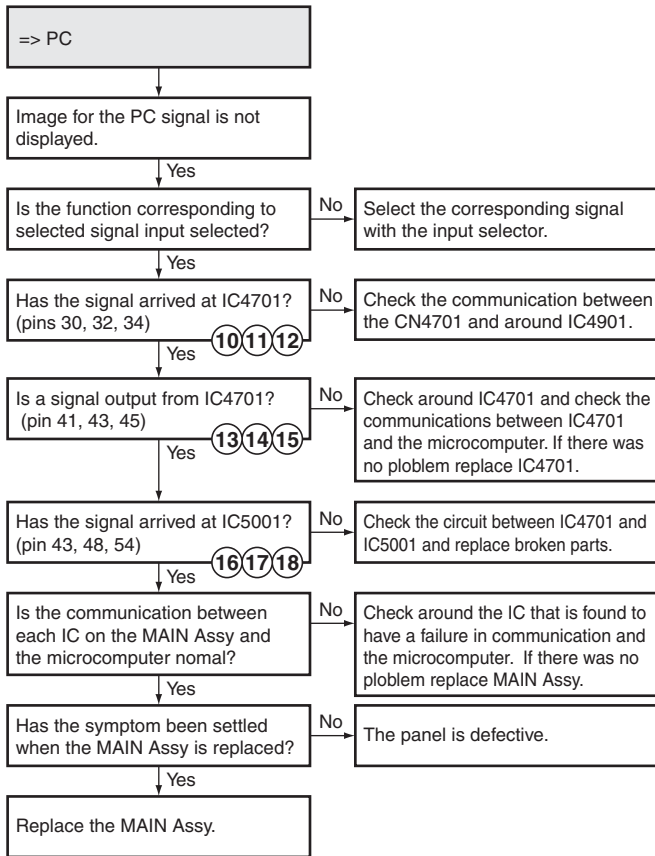


D

● Waveforms


Input signal: Color-bar

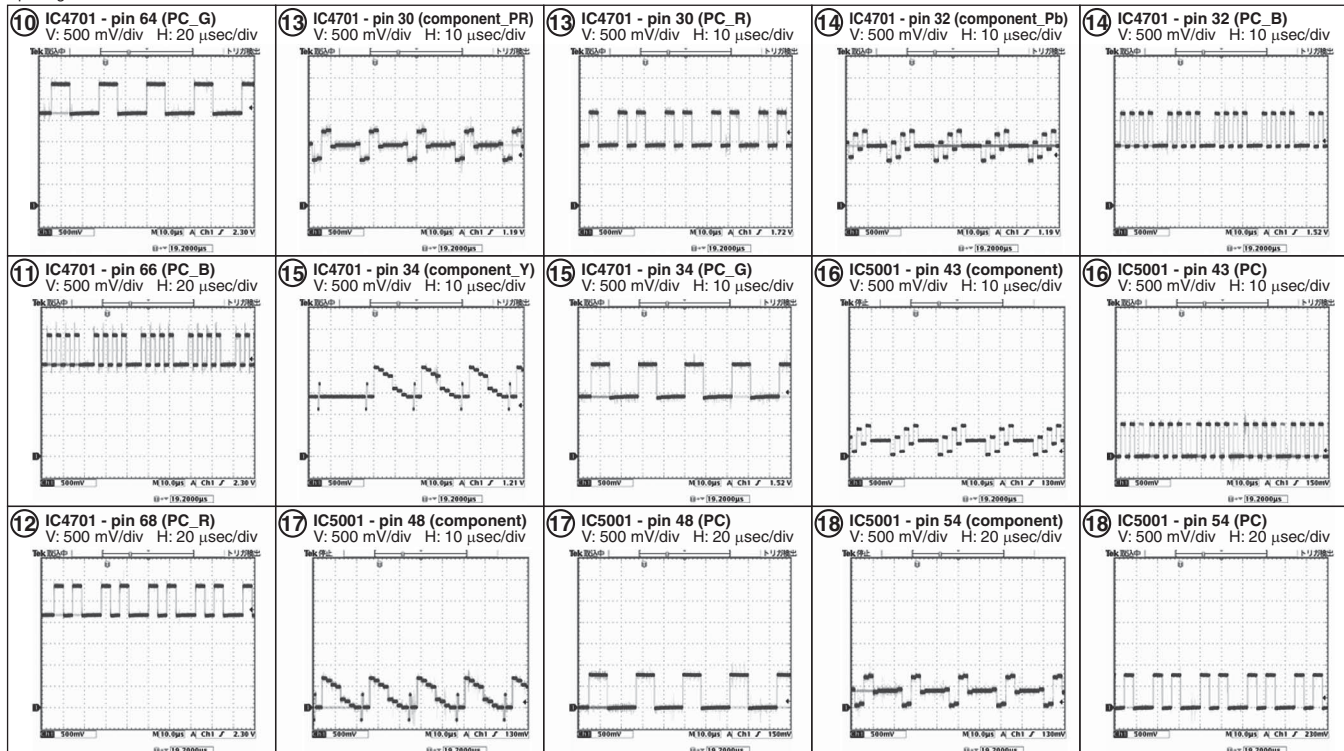

F

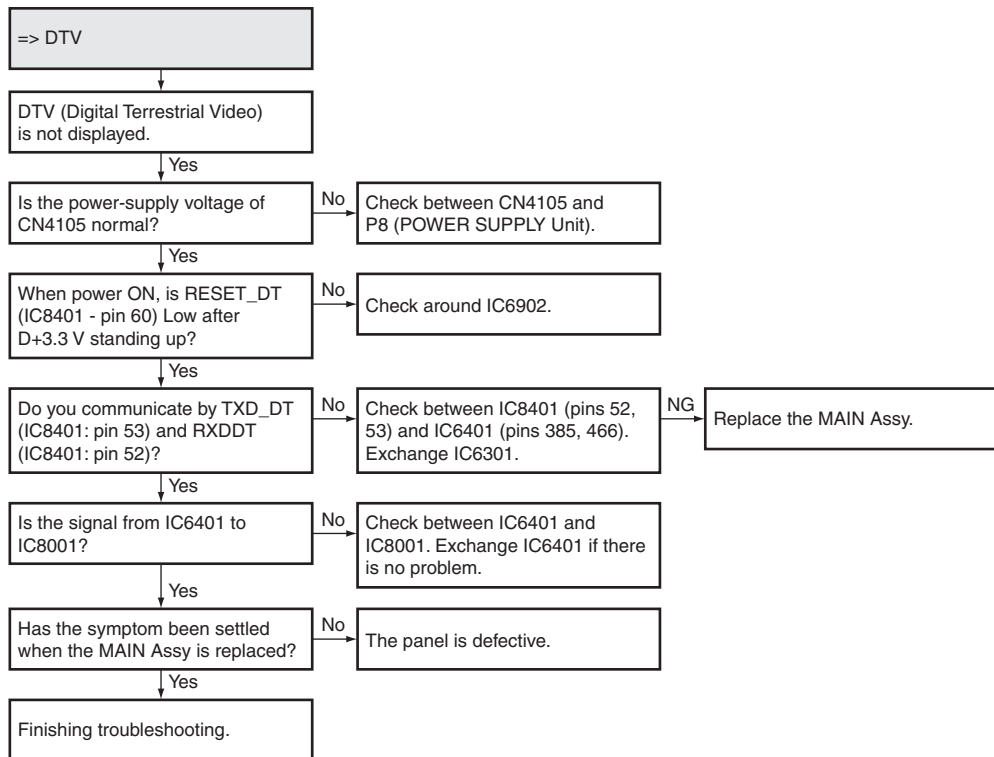



No video from USB input

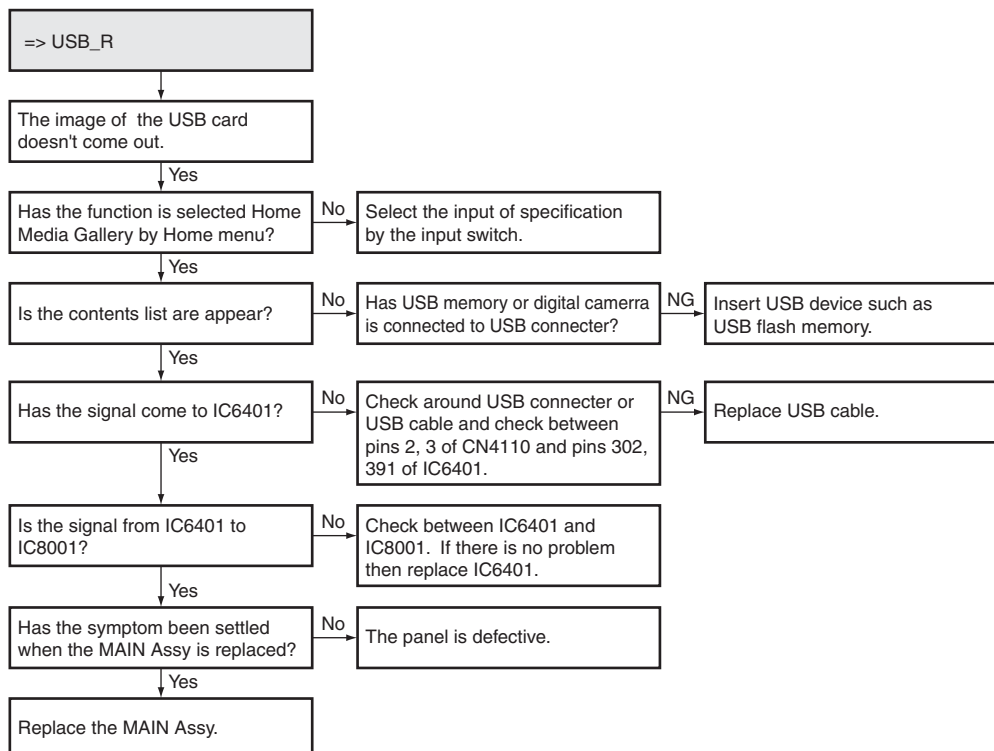

5.2.7 AUDIO SYSTEM


Flowchart of Failure Analysis for The Audio System

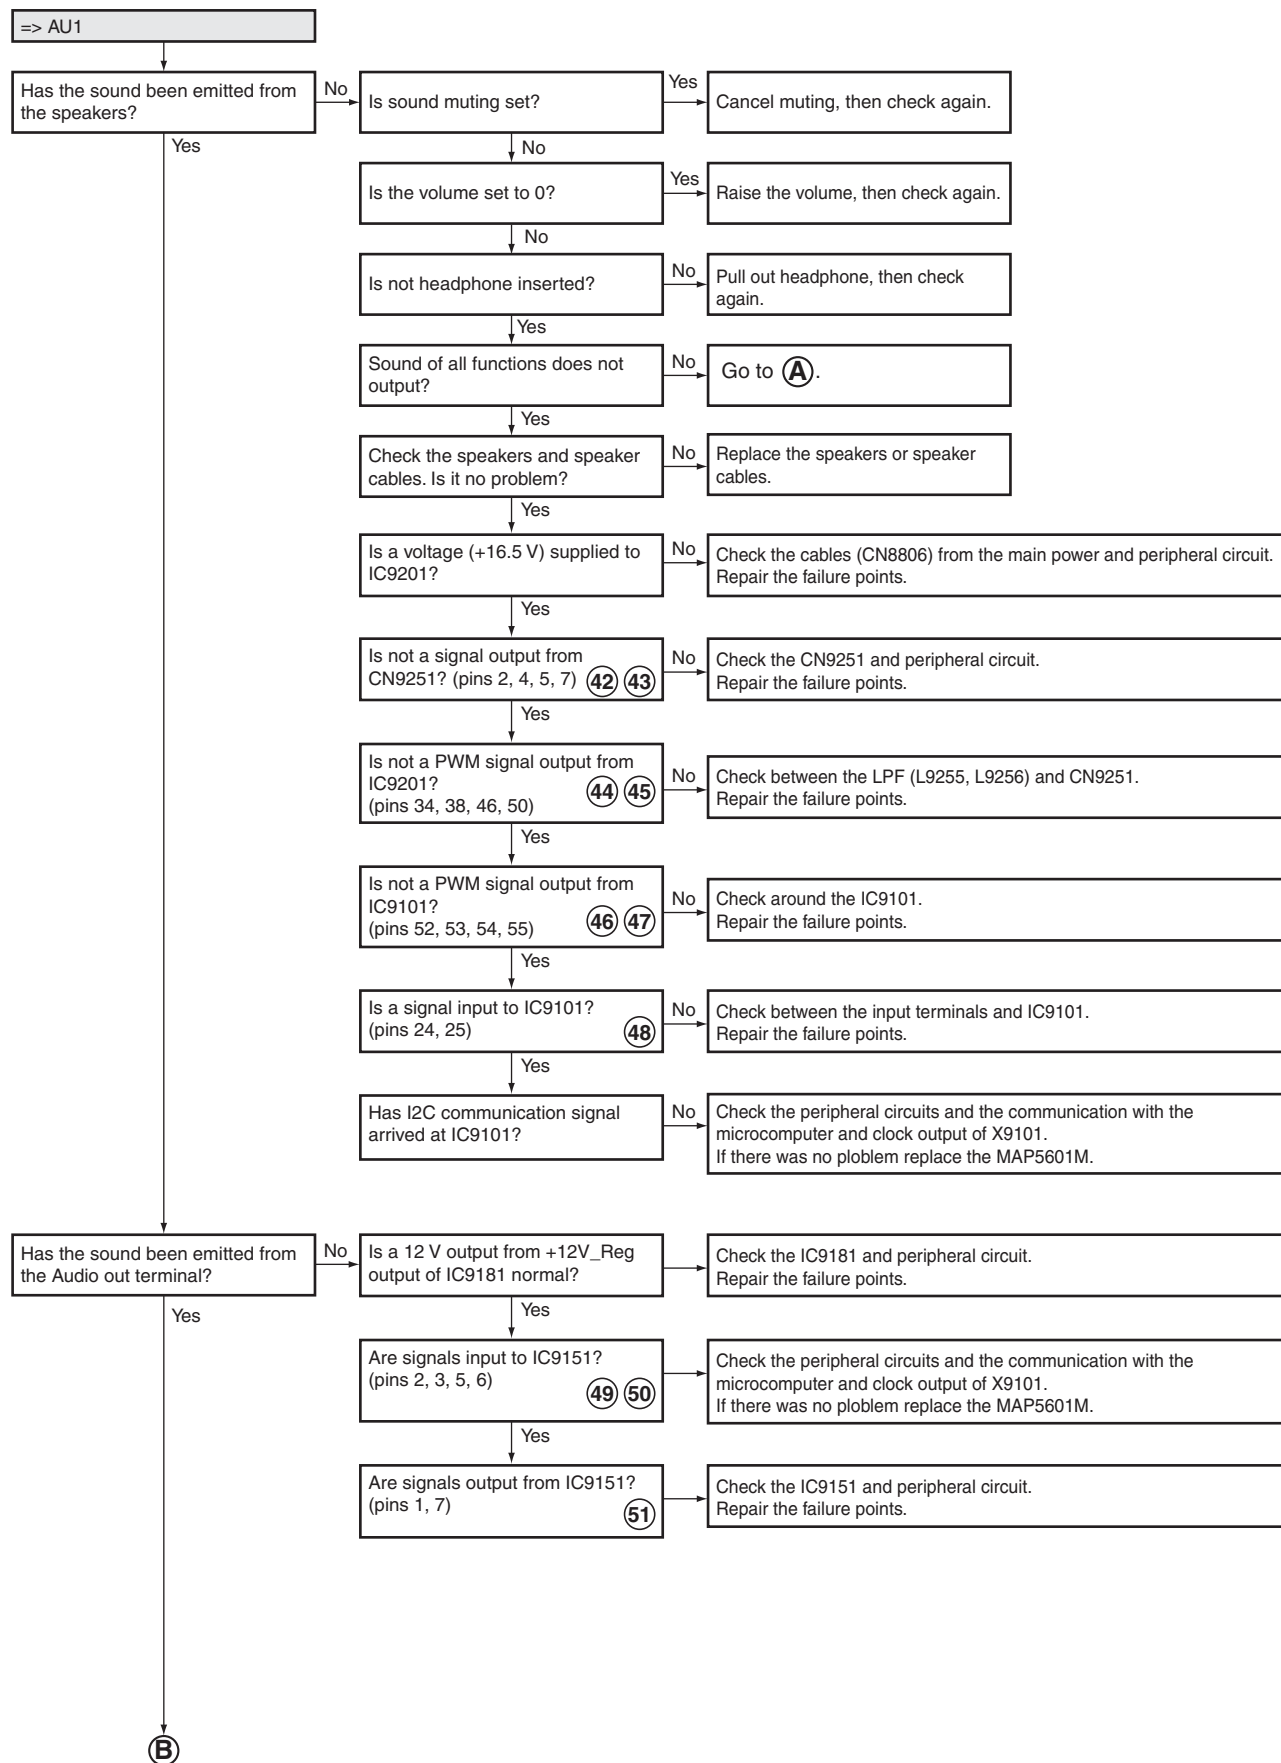

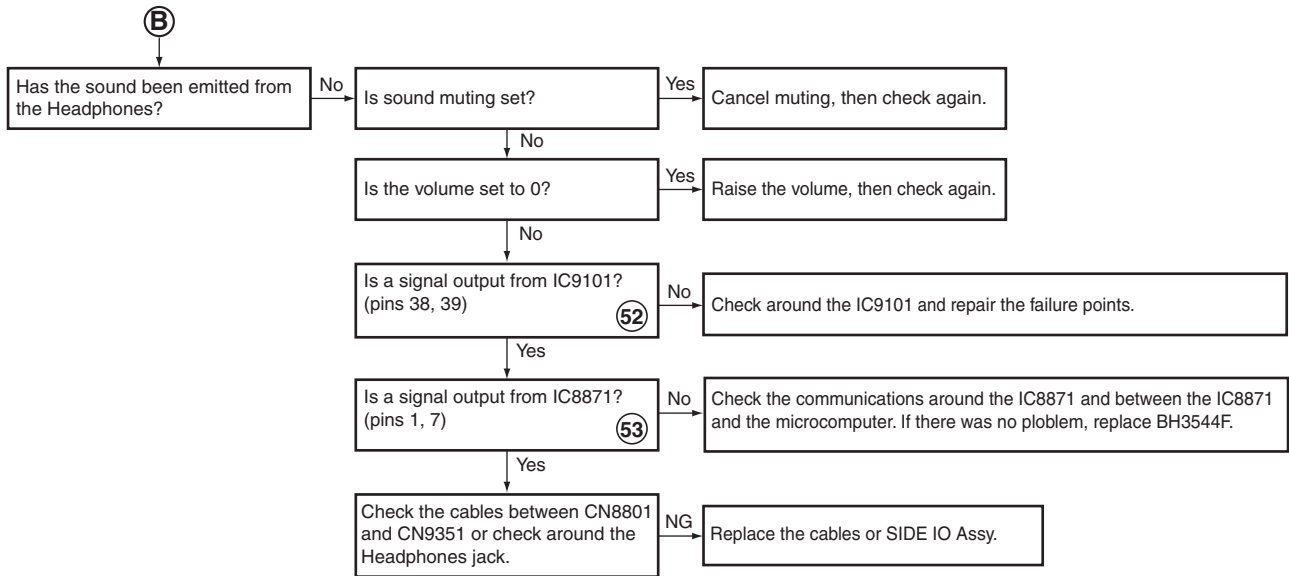


• Waveforms


Input signal: L/R 1 kHz, 0.5 Vrms (VOL 30)

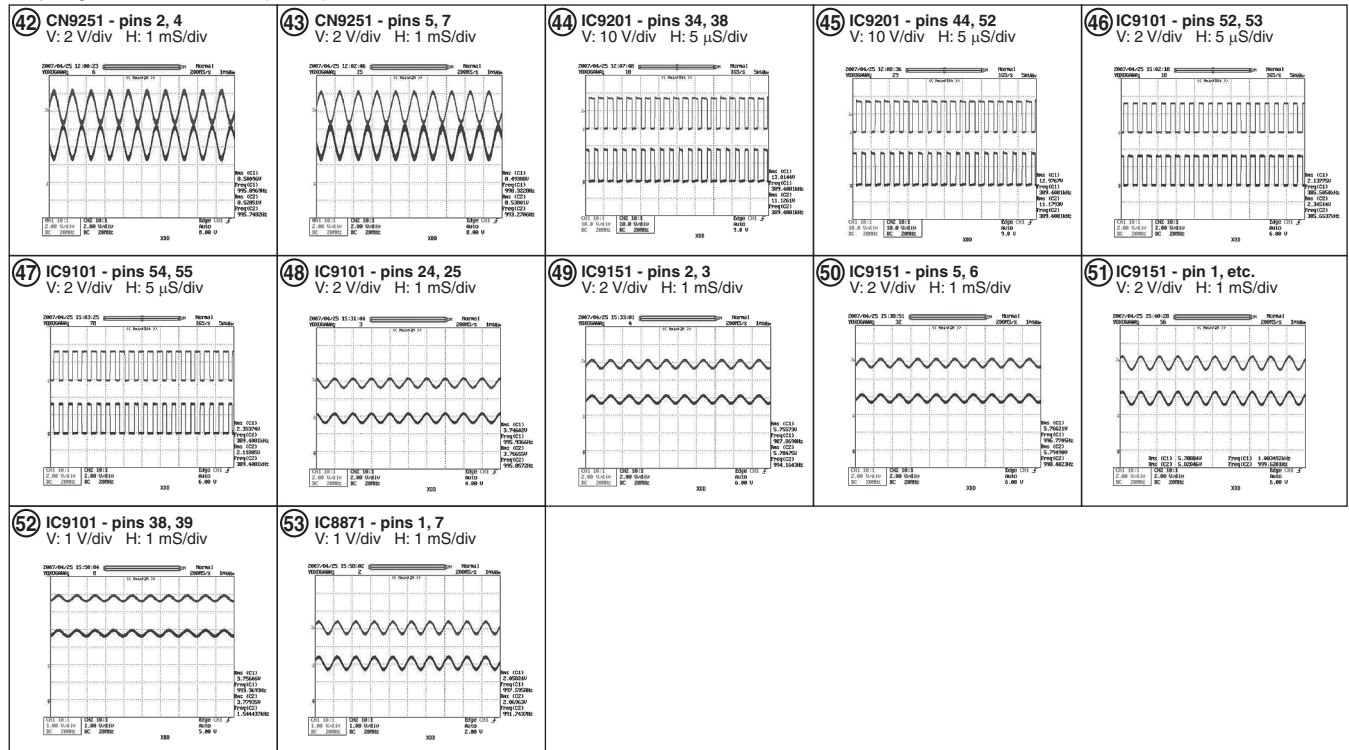


A

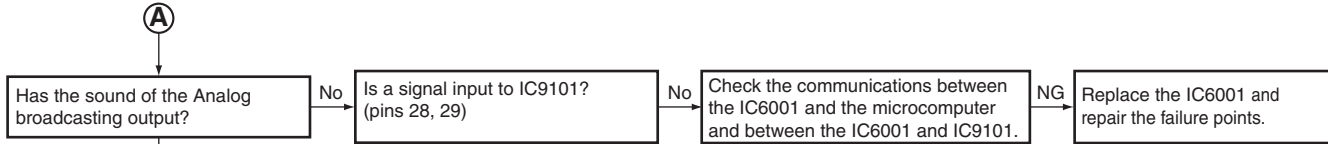


B

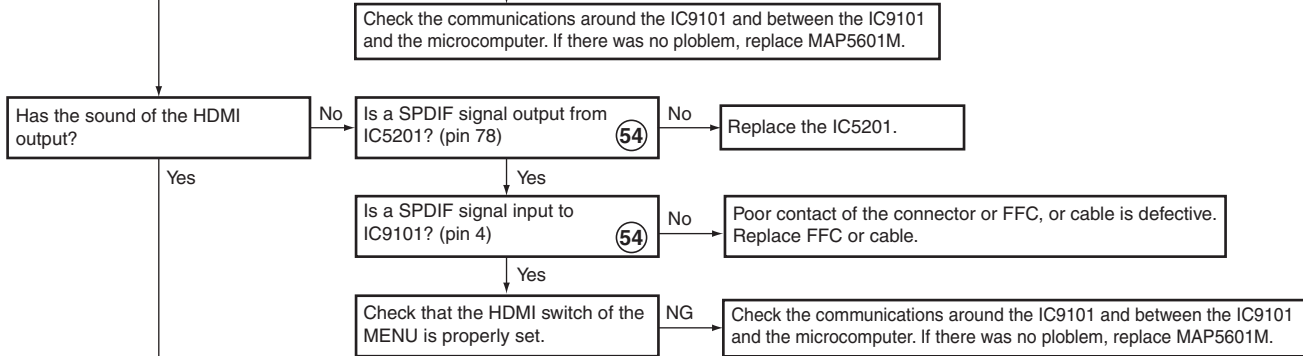


C

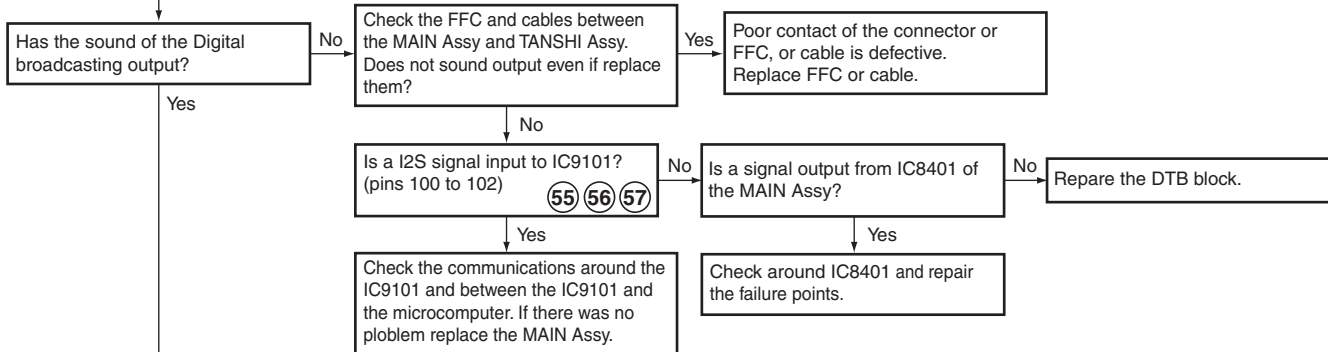

D

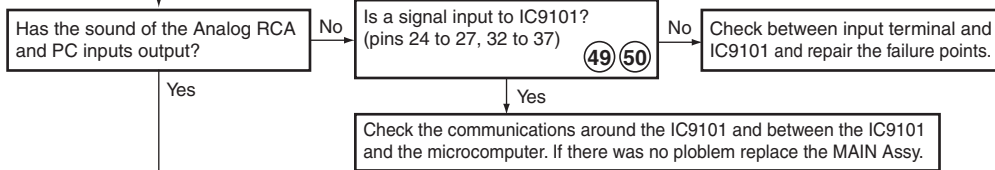


E

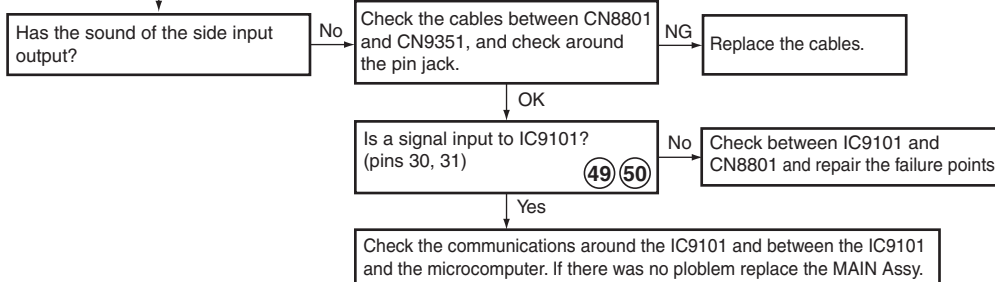

Waveforms

Input signal: L/R 1 kHz, 0.5 Vrms (VOL 30)

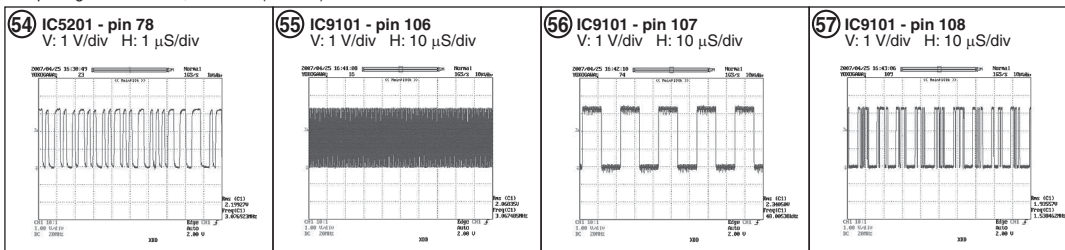


F

5.3 DIAGNOSIS OF PD (POWER-DOWN)

5.3.1 BLOCK DIAGRAM OF THE POWER-DOWN SIGNAL

■ Block Diagram of the Power-Down Signal

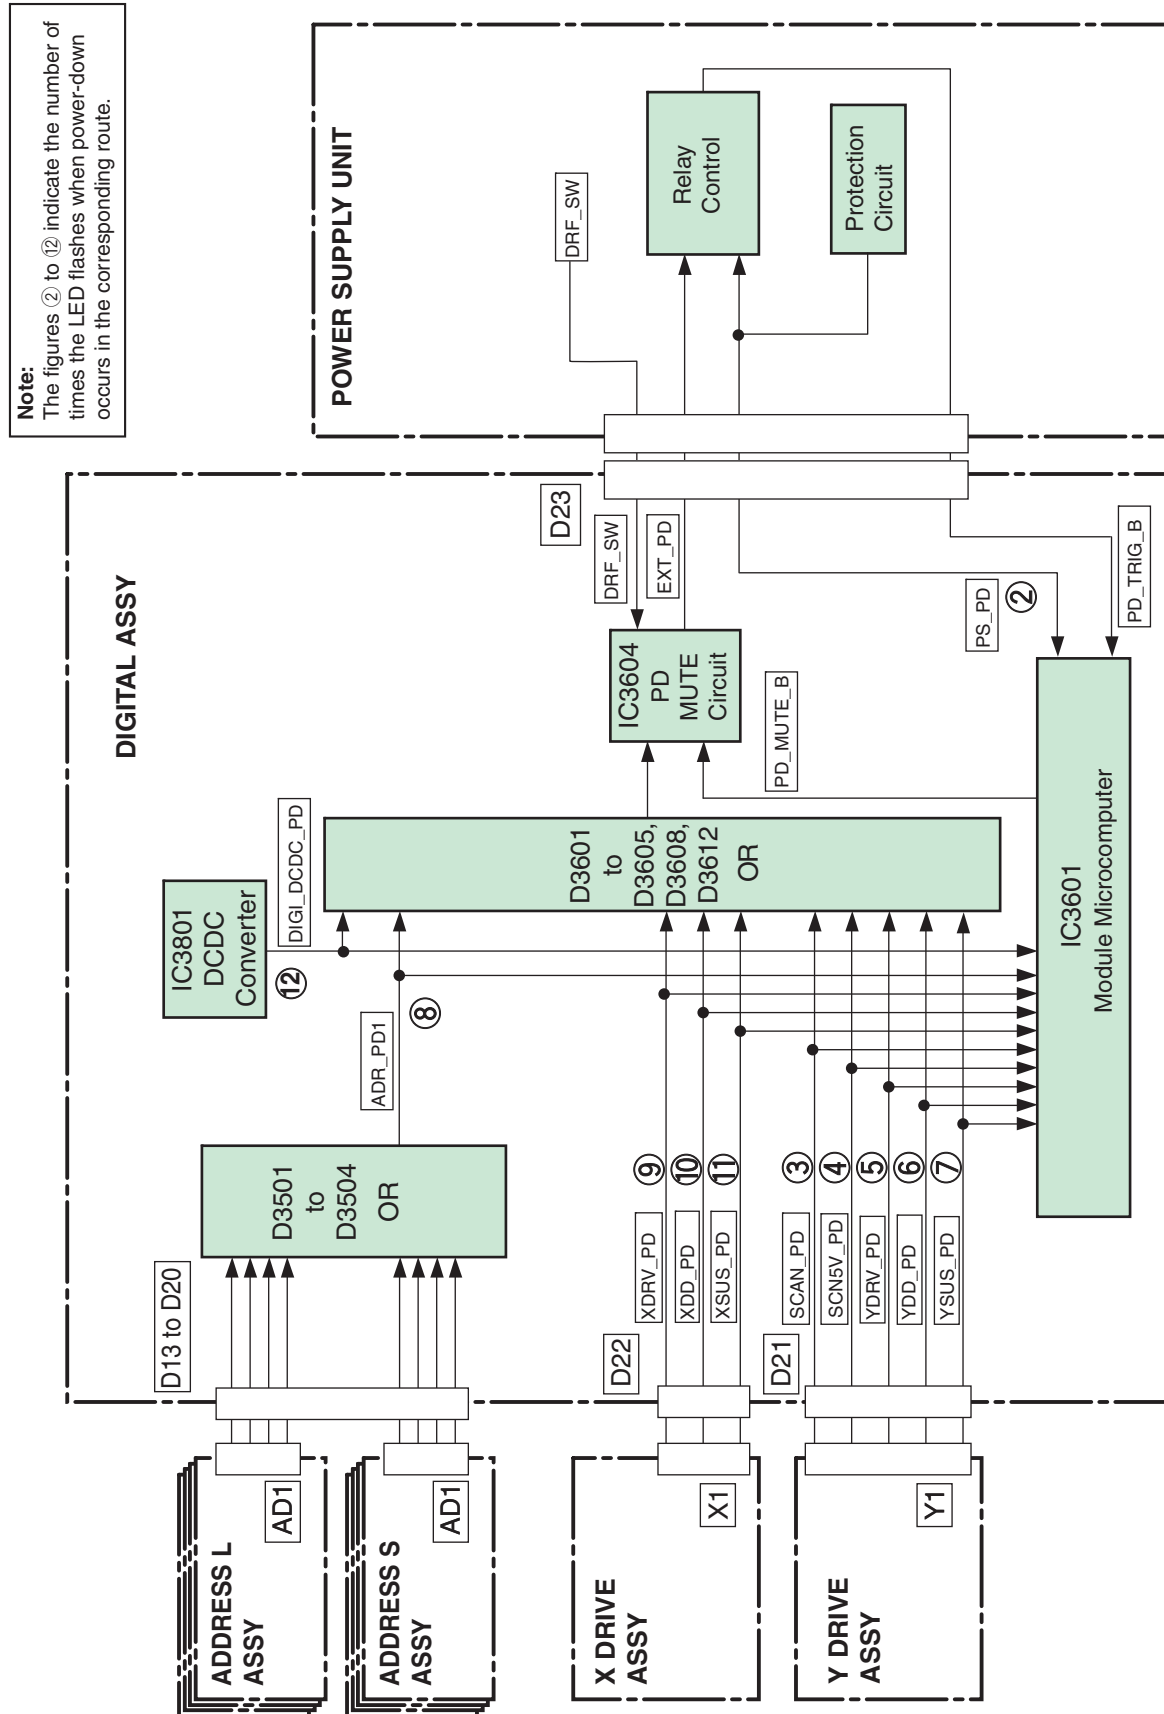

5.3.2 PD (POWER-DOWN) DIAGNOSIS OF FAILURE ANALYSIS

Prediction of failure symptoms when a PD (power-down) is generated


Red LED Flashing Count	Operating PD	Defective Assy	PD Outline	Checkpoint	Possible Defective Part	Remarks
2	POWER	POWER SUPPLY Unit	Failure in the POWER SUPPLY Unit			
		X DRIVE Assy	VSUS UVP	X SUS BLOCK	Q1219 to Q1224	VSUS-PSUS and SUSOUT-SUSGND are short-circuited.
		Y DRIVE Assy		Y SUS BLOCK	Q2217 to Q2224	VSUS-SUSOUT and SUSOUT-SUSGND are short-circuited.
3	SCAN	SCAN Assy	VH UVP	SCAN IC	SCAN IC	
		X DRIVE Assy		X SUS BLOCK	Q1218 to Q1224,Q1226	VSUS-PSUS and SUSOUT-SUSGND are short-circuited.
		Y DRIVE Assy		Y SUS BLOCK	Q2217 to Q2224	VSUS-SUSOUT and SUSOUT-SUSGND are short-circuited.
				VH DC/DC converter	IC2601,IC2603,D2604	
		DIGITAL Assy	Connectors disconnection detection	CN2001,CN2301 CN3509		
4	SCN-5V	SCAN Assy	Connectors disconnection detection	CN2801,CN2901,CN2902,CN3001,CN3002,CN3101		
		Y DRIVE Assy	IC5V UVP	SCAN IC	SCAN IC	
			IC5V DC/DC	Q2764,D2768,R2764		
6	Y-DCDC	Y DRIVE Assy	VNOFS UVP	Y MSK BLOCK	Q2320 to Q2325,Q2330,Q2332,Q2334	LMSK is short-circuited.
				VNOFS DC/DC	D2606,Q2709,Q2710	
			Vprst UVP	YPRST Regulator	Q2604,Q2605,IC2602	
			15VDD UVP	15VDC/DC	Q2662,R2669	
			VKOFs1_2 UVP	Y MSK BLOCK	Q2320 to Q2325,Q2330,Q2332,Q2334	LMSK is short-circuited.
				VKOFs1_2 Regulator	Q2705,Q2702	
			VKOFs3 UVP	Y MSK BLOCK	Q2320 to Q2325,Q2330,Q2332,Q2334	LMSK is short-circuited.
				VKOFs3 Regulator	Q2706,Q2703	
			VKOFs4 UVP	Y MSK BLOCK	Q2320 to Q2325,Q2330,Q2332,Q2334	LMSK is short-circuited.
				VKOFs4 Regulator	Q2707,Q2704	
7	Y-SUS	Y DRIVE Assy	Center electric potential detection PD	Y RESONANCE BLOCK	Q2106 to Q2109,Q2111,Q2113,D2104 to D2107	
8	ADRS	ADDRESS Assy	VADR UVP	ADDRESS RESONACE BLOCK		
			VADR UVP	TCP		
		DIGITAL Assy	Connectors disconnection detection	CN1601,CN1602,CN1801,CN1802		
				CN3501 to CN3508		
				CN1202 to CN1206		
				CN2302 to CN2306		
9	XDRIVE	X DRIVE Assy	Connectors disconnection detection	CN1001		
		DIGITAL Assy		CN3510		
10	X-DCDC	X DRIVE Assy	Connectors disconnection detection	CN1201		
			15VDD UVP	X SUS BLOCK	L1201,R1217	
				15VDC/DC	Q1402	
			VXKOFs1 UVP	VXKOFs1 Regulator	Q1405,Q1406	
				X OFFSET BLOCK	Q1302,Q1304	
			VXKOFs2 UVP	VXKOFs2 Regulator	Q1403,Q1404	
X OFFSET BLOCK	Q1301,Q1303					
11	X-SUS	X DRIVE Assy	Center electric potential detection PD	X RESONANCE BLOCK	Q1108,Q1116,Q1112,Q1119	
12	DIG-DCDC	DIGITAL Assy	3.3V, 2.5V, 1.1V UVP, OVP, OCP	Abnormality in the DC-DC converter control IC	IC3801	
				Periphery of the DC-DC converter	Q3841, Q3861, Q3881 L3841, L3861, L3881 R3820, R3848, R3868, R3888	
			5.1V OCP	Abnormality in 5.1V input (include abnormality in the protection fuse)	FU3801	
15	UNKNOWN	POWER SUPPLY Unit	Connectors disconnection detection	P4		EXT_PD line: Open
		DIGITAL Assy	Connectors disconnection detection	CN3801		EXT_PD line: Open
			ModuleUcom can not detection	Each PD line of ModuleUcom		It becomes "UNKNOWN" except above-mentioned PD detection condition.

UVP: Under Voltage Protection , OVP: Over Voltage Protection , OCP: Over Current Protection


■ How to distinguish which connector is disconnected

Assy	Connector	To which Assy the Connector is Connected	LED Flashing Count	Screen Display
X DRIVE Assy	CN1001	DIGITAL Assy	5 (XDRIVE)	
	CN1201	POWER SUPPLY Unit (drive system power)		Black screen
	CN1202	POWER SUPPLY Unit (ADR system power)	8 (ADRS)	
	CN1203	ADDRESS Assy	8 (ADRS)	
Y DRIVE Assy	CN2001	DIGITAL Assy	3 (SCAN)	
	CN2301	POWER SUPPLY Unit (drive system power)	3 (SCAN)	
	CN2302	POWER SUPPLY Unit (ADR system power)	8 (ADR)	
	CN2303 to CN2306	ADDRESS Assy	8 (ADR)	
	CN2501, CN2502	SCAN A, B, C, D Assy	4 (SCN-5V)	
SCAN A, B, C, D Assy	CN2901, CN3001	Y DRIVE Assy	4 (SCN-5V)	
	CN2801, CN2902 CN3002, CN3101	SCAN A, B, C, D Assy		
ADDRESS Assy	CN1602, CN1802	DIGITAL Assy	8 (ADRS)	
	CN1601, CN1801	X DRIVE Assy, Y DRIVE Assy	8 (ADRS)	


A

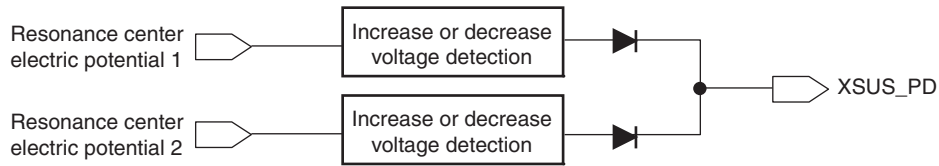X Drive PD system

B

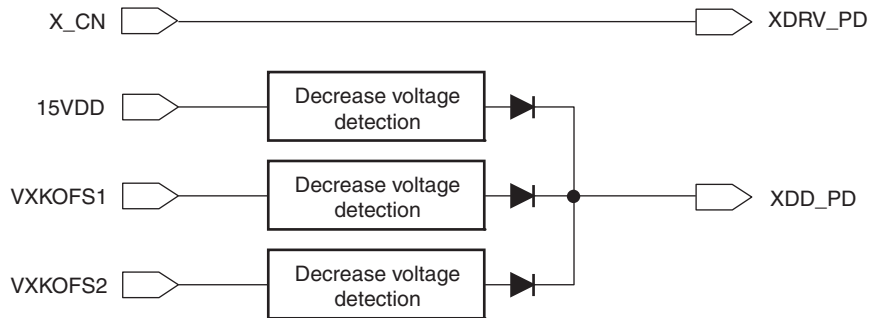


C

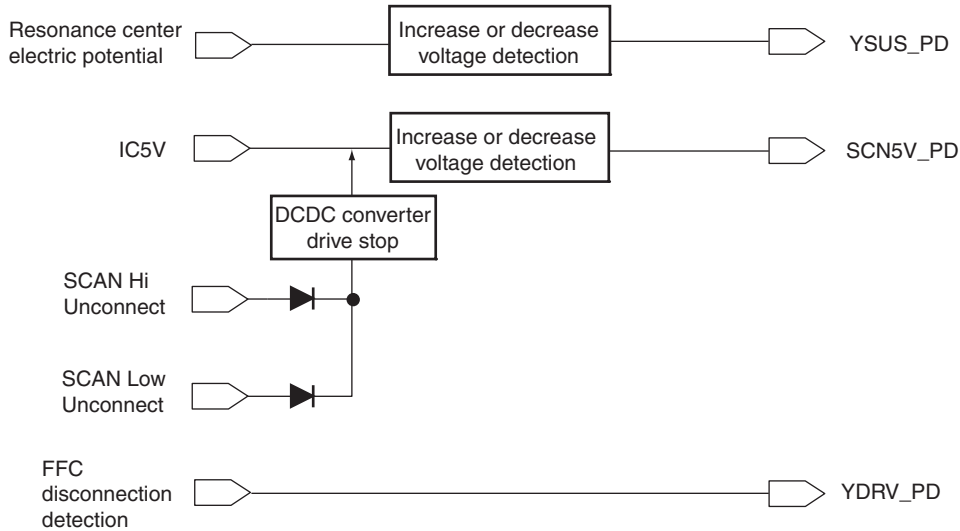
Y Drive PD system

D

E

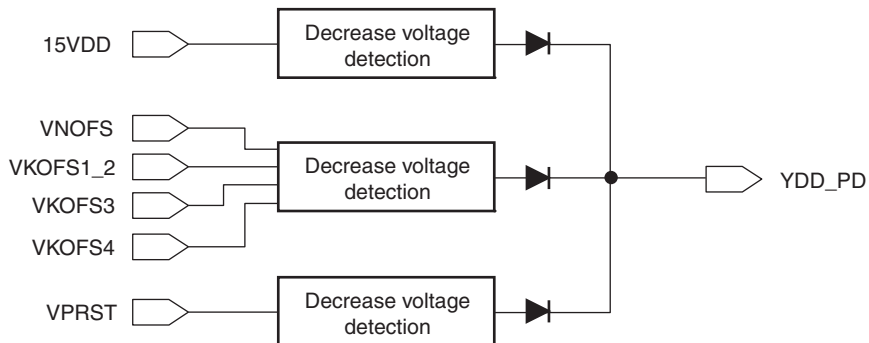


F

 

5.4 DIAGNOSIS OF SD (SHUTDOWN)

5.4.1 BLOCK DIAGRAM OF THE SHUTDOWN SIGNAL

■ Block Diagram of the Shutdown Signal

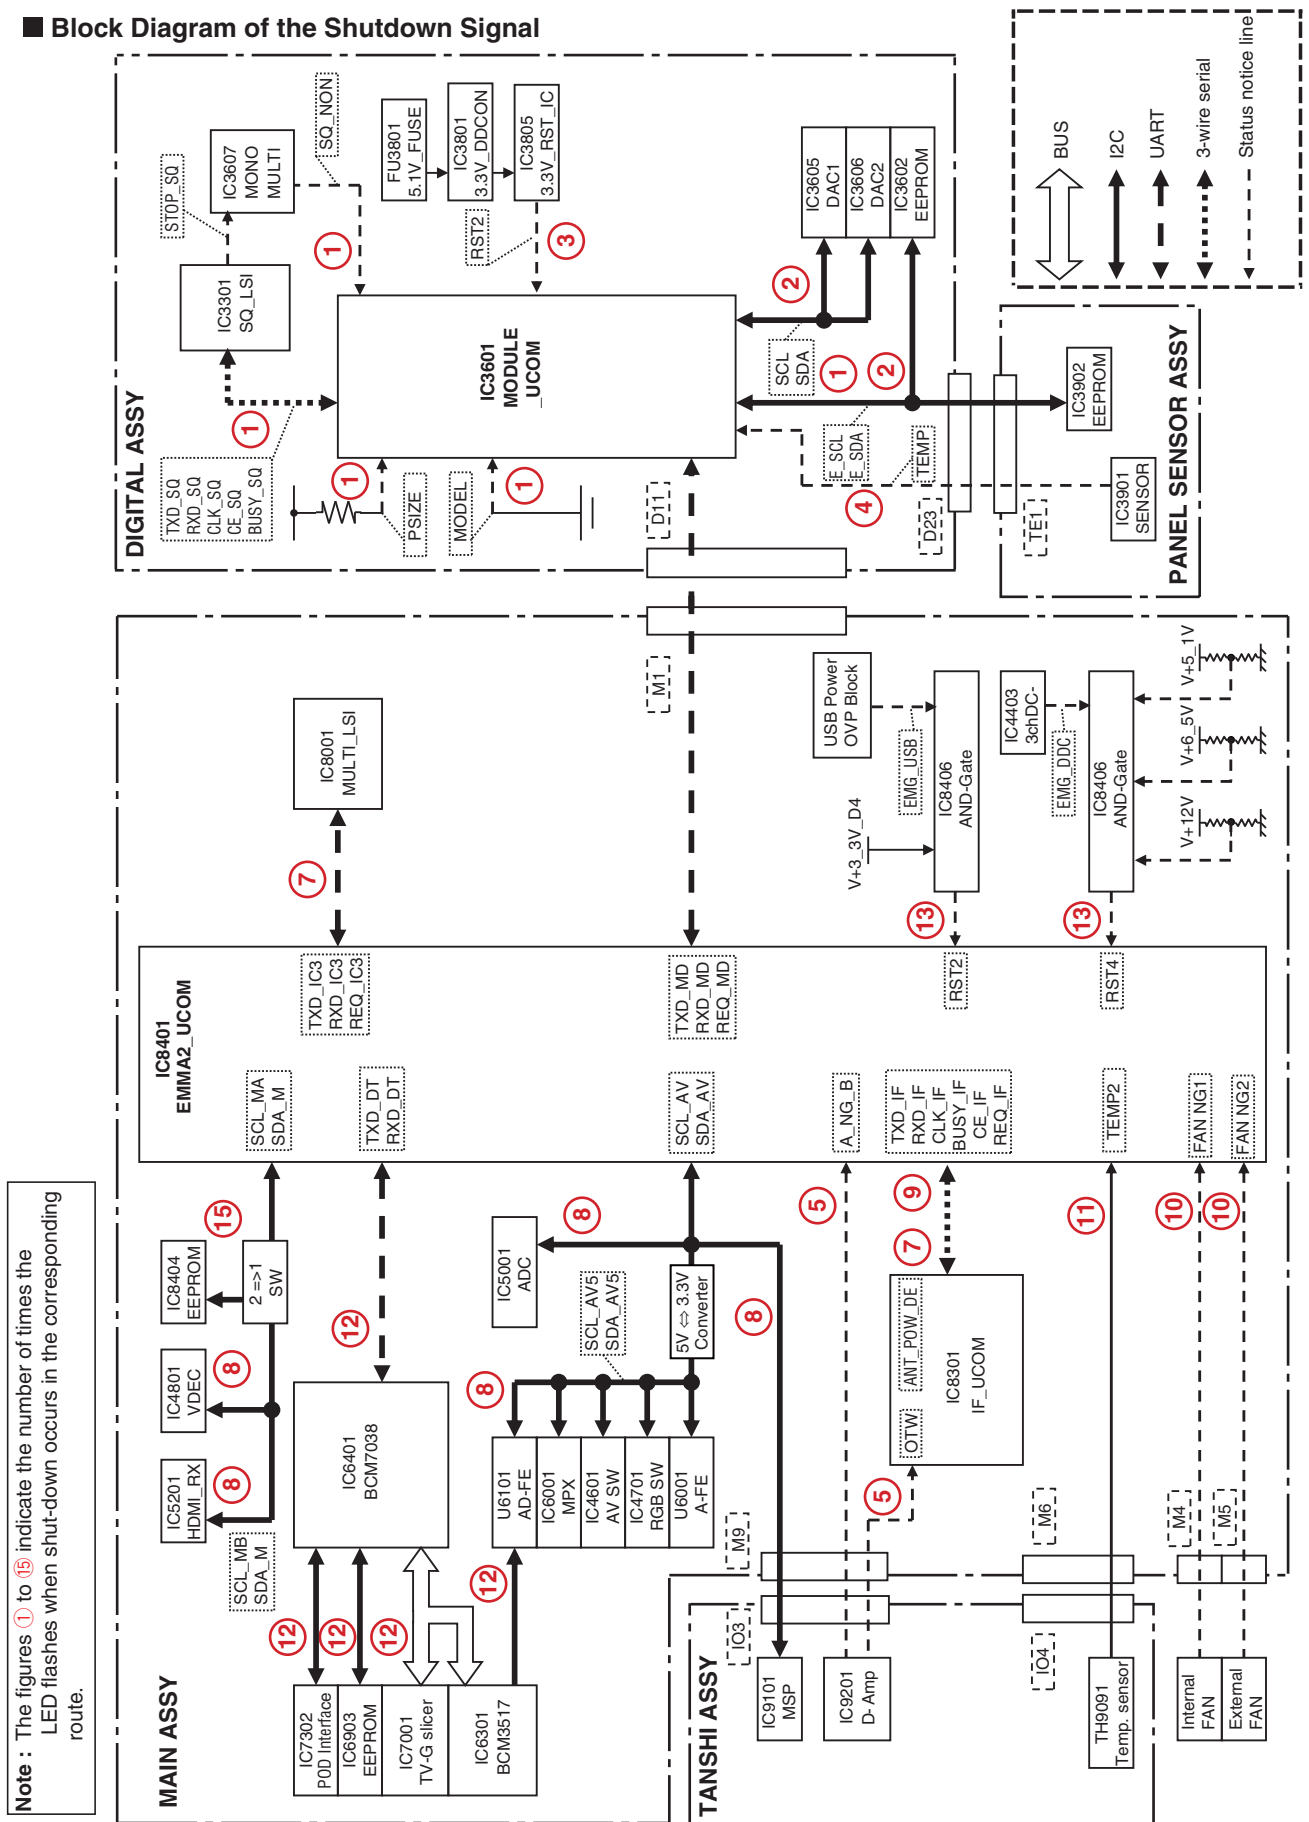

5.4.2 SD (SHUTDOWN) DIAGNOSIS

Frequency of LED Flashing	Major Type	Detailed Type	Log Indication in Factory Mode		Checkpoint	Possible Defective Part	Remarks
			MAIN	SUB			
Blue 1	Abnormality in the Sequence LSI	Communication error		RTRY	CLK_SQ/TXD_SQ, etc.	IC3301, IC3601	SQ_IC communication not established. IC3301 may not have properly started up.
		Drive stop		SONO	Check if the video sync signal is input to IC3301.	CN3201, IC3202, IC3301	A shutdown occurs if IC3301 has not properly started up (a communication failure between IC3301 and IC3302 [FASH]).
		Busy		BUSY	BUSY_SQ	IC3301, IC3601	If BUSY_SQ remains high, a shutdown is generated.
		Incoherent version (hardware, software)		VER-HS	Check the model number of the DIGITAL Assy and the destination of the sequence LSI.	IC3302, IC3601	The written SEQ_PROG is incoherent with data on the DIGITAL Assy.
Blue 2	Failure in IIC communication with the module microcomputer	Incoherent version (memory, software)		VER-MS	Check the model number of the DIGITAL Assy and the destination of the sequence LSI.	IC3302, IC3601, IC3602	A shutdown occurs if the SEQ_PROG that has been stored in backup memory does not coincide with the actual SEQ_PROG.
		DIGITAL Assy EEPROM		EEPROM	IIC communication line of IC3602	IC3602, IC3601	Check the pull-up resistor of the IIC control line and the power to the corresponding IC.
		PANEL SENSOR Assy EEPROM		BACKUP	IIC communication line of IC3902	PANEL SENSOR Assy (IC3902), IC3901	Check the pull-up resistor of the IIC control line and the power to the corresponding IC.
		DAC1		DAC1	IIC communication line of IC3605	IC3605, IC3601	Check the pull-up resistor of the IIC control line and the power to the corresponding IC.
Blue 3	Abnormality in RST2 power decrease			DAC2	IIC communication line of IC3606	IC3606, IC3601	Check the pull-up resistor of the IIC control line and the power to the corresponding IC.
					Is the output voltage (3.3 V) of the DC-DC converter low?	TP3881, TP3882	If RST2 does not become high after the unit is turned on, a shutdown will be generated in several seconds.
Blue 4	Abnormality in panel temperature				The 5.1 V power is not output.	POWER SUPPLY Unit (IC3901)	If TEMP1 that is read by the module microcomputer is 85 °C or higher, a shutdown will be generated.
					High temperature abnormality in the panel temperature sensor	PANEL SENSOR Assy (IC3901)	A shutdown occurs if the reading of TEMP1 detected by the module microcomputer is -20 °C or less. Also check the connection with the PANEL SENSOR Assy.
Blue 5	Short-circuiting of the speakers / D-AMP temperature abnormality				Low temperature abnormality in the panel temperature sensor	PANEL SENSOR Assy (IC3901)	Check if any speaker cable is in contact with the chassis.
					Speaker terminals	JA9301	Check if the AMP output is short-circuited.
Blue 6	Failure in communication with the module microcomputer				AUDIO_AMP	IC9201, IC9101	Check if cables are firmly connected.
					Periphery of the cable between IO3 and M8, and IO6 and P5	CN8803, CN4001, CN8806, P5	Check if cables are firmly connected.
Blue 7	Failure in main microcomputer 3-wire serial communication				Communication line between MAIN and MOD	IC3151, IC8401	Check if cables are firmly connected.
					Periphery of the cable between D11 and M1	CN3001, CN4101	Check the communication lines (TXD_MOD/RXD_MOD/REQ_MOD).
		IF microcomputer			Communication line between IF and MAIN	IC8301, IC8401	Check the communication lines (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/CE_IF/REQ_IF).
		MULTI processor			Communication line between MULTI and MAIN	IC8001, IC8401	Check the communication lines (TXD_IC3/RXD_IC3).
Blue 8	Failure in IIC communication with the main microcomputer	Tuner 1			IIC communication line between Tuner (ANT-F) and MAIN	U6101, IC8401	Check the communication lines (SCL_TU/SDA_TU or SCL_AV5/SDA_AV5).
		MSP/MAP			IIC communication line between MSP/MAP and MAIN	IC9101, IC8401	Check the communication lines (SCL_AV/SDA_AV).
		AV switch			IIC communication line between AV-SW and MAIN	IC4601, IC8401	Check the communication lines (SCL_AV5/SDA_AV5).
		RGB switch			IIC communication line between RGB-SW and MAIN	IC4701, IC8401	Check the communication lines (SCL_AV5/SDA_AV5).
		Main VDEC			IIC communication line between M-VDEC and MAIN	IC4801, IC8401	Check the communication lines (SCL_MB/SDA_MB).
		VDEC SDRAM			IIC communication line between VDEC and SDRAM	IC4801, IC8402	Check the communication lines (SDRAM). Defective SDRAM
		AD/PLL			IIC communication line between ADC and MAIN	IC5001, IC8401	Check the communication lines (SCL_AV/SDA_AV).
		HDMI			IIC communication line between HDMI_RX and MAIN	IC5001, IC8401	Check the communication lines (SCL_MB/SDA_MB).
		Tuner 2			IIC communication line between Tuner (ANT-B) and MAIN	U6001, IC8401	Check the communication lines (SCL_AV5/SDA_AV5).
		US-MSP			IIC communication line between US_MSP and MAIN	IC6001, IC8401	Check the communication lines (SCL_AV5/SDA_AV5).
Blue 9	Failure in communication with the main microcomputer				Communication line between IF and MAIN	IC8301, IC8401	Check the communication lines (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/CE_IF/REQ_IF).
Blue 10	FAN NG				Dirt attached to the fan motor	-	Check the fan. (SD10 does not detect it at the temperature that a fan does not turn.)
		FAN1			Periphery of the cable between FAN and M4	CN4103	Check if cables are firmly connected.
					Periphery of the fan control regulator	IC4310	Check that the voltage outputs it.
		FAN2			Dirt attached to the fan motor	-	Check the fan. (SD10 does not detect it at the temperature that fans do not turn.)
					Periphery of the FHD FAN CONNECT	FHD FAN CONNECT Assy	FAN NG
					Periphery of the cable between FA1 and M5, FAN and M4, and P42 and P45	CN9551 to CN9555, CN4108	Check if cables are firmly connected.
					Periphery of the fan control regulator	IC4303	Check that the voltage outputs it.

Frequency of LED Flashing	Major Type	Detailed Type	Log Indication in Factory Mode		Checkpoint	Possible Defective Part	Remarks
			MAIN	SUB			
Blue 11	High temperature of the unit	—	TEMP2	—	Temperature sensor or its periphery Periphery of the temperature sensor	TH9091 —	TEMP2 A shutdown occurs because of high temperature. TEMP2
		DTV startup error DTV communication error BCM7038 is abnormal Tuner1 or Tuner2 Card I/F IC		PS/RST RETRY DE-BCM DE-FE DE-CAS	Periphery of the cable between IO4 and M6 Startup of BCM7038 Communication line between BCM7038 and MAIN Periphery of BCM7038 Front-end block (ANT-A)	CN8804, CN4004 IC8401 IC6401 IC6401 IC6401, U6101 IC7302, IC6401, POD Assy	Check if cables are firmly connected. Check the startup of the BCM7038 and the communication line with MAIN. Check the startup of the BCM7038 and the communication line with MAIN. Check the BCM7038 and its periphery device Check the BCM7038 and its periphery device
Blue 12	Digital Tuner	VBI Slicer EEPROM	DTUNER	DE-VBI DE-EP1	Periphery of VBI slicer	IC7001 IC6903, IC6401	Check the BCM7038 and its periphery device Check the BCM7038 and its periphery device
		TV Guide		TV-G	TV-GUIDE function (Data from broadcast wave)	—	Check the BCM7038 and its periphery device
		Home Gallery Middleware		HOME-G DTV MID	HNM circuit DTV middleware	IC6401, ANW2497 —	Check the BCM7038 and its periphery device
		Application		DTV APP	DTV application	—	—
		DC-DC Converter power decrease		M-DCDC	DC-DC converter or its periphery, RST2 EMG_USB	IC4403, Q4404 IC4309, Q4304	Check if V + 3.3 V_D4 is started. Check if the voltage at a waveform check point is 5 V.
Blue 13	Failure in the power supply	POWER SUPPLY	RST-MA	RELAY	The 12 V power is not output, RST4	POWER SUPPLY Unit	Check if V + 12 V is started.
					The 6.5 V power is not output	POWER SUPPLY Unit	Check if V + 6.5 V is started.
					The 5.1 V power is not output	POWER SUPPLY Unit	Check if V + 5.1 V is started.
					EMG_DDC	DC-DC converter CN4105	Check if the DC-DC converter is overloaded. Check if cables are firmly connected.
Blue 14	Home Media Gallery	HMG startup error	HMG	START	Periphery of the cable between P8 and M3 Periphery of connector	CN4111	Check if cables are firmly connected.
Blue 15	Main EEPROM	Main EEPROM communication error	MA-EEP	—	HNM power supply	IC4309, Q4304	Check if the voltage at a waveform check point is 5 V.
					IIC communication line between EEPROM and MAIN	IC8404, IC8401	Check the communication lines (SCL_EP/SDA_EP).

5.5 NON-FAILURE INFORMATION

5.5.1 INFORMATION ON SYMPTOMS THAT DO NOT CONSTITUTE FAILURE

■ Information on symptoms that do not constitute failure

Symptom	Cause, item to check, information
HDMI: Symptoms concerning the input format and settings	
The picture color for an INPUT 4 to 7 signal is not correct.	The color setting for INPUT 4 to 7 is not compatible with that of the output equipment. Check whether the color setting is YPbPr or RGB.
The video signal to INPUT 4 to 7 is not displayed, and a message is displayed.	A unsupported video signal is input.
The audio signal input to the INPUT 4 to 5 is not output. No HDMI signal is input.	The audio setting for INPUT 4 to 5 is any setting and a video signal is not input. If the audio setting is any setting to output an analog audio signal, the HDMI signal must be input. (If a DVI device is to be connected, use a DVI-HDMI conversion cable.) If the HDMI video signal is not input, the analog audio signal is not output.
No sound of signals to INPUT 4 to 7 is output.	The setting on the side of the HDMI output equipment is wrong. Example: Dolby Digital
The 1080p input signal is not displayed properly or at all, although the 1080i input signal is displayed properly.	Check that the connected cable supports HDMI Category 2. (As the clock frequency for the 1080p signal is triple that for the 1080i signal, signal degradation caused by a cable must not be neglected. A cable supporting HDMI Category 2 can be used for the 1080p signal. Although some conventional cables can support the 1080p signal, some others cannot.)
DIGITAL OUT	
Playback of the signal from the DIGITAL audio output connector is possible, but recording is not possible.	The video signal output from the DIGITAL connector is copy-protected.
Miscellaneous	
The no-signal off function is not activated.	The no-signal off and no-operation off functions are effective only if video (composite, S video, component, HDMI [excluding PC]) input or TV input is selected.
The no-operation off function is not activated.	
Power management does not function.	Power Management is effective only while an analog PC signal is being input. It is not effective with HDMI-PC signal input.
The AUTO SETUP function is not activated.	The Auto Setup function is effective only while an analog PC signal is being input. This function does not work if an analog PC signal is not input, even if the INPUT PC is selected.
Control via the SR connector is not possible.	Wrong connection of the cable to the PC INPUT (AUDIO) connector is suspected.
The audio signal from the PC is not output.	Wrong connection of the cable to the SR connector is suspected.
The picture-quality setting (AV Selection) is not stored.	The picture-quality setting is stored for each input. As the setting is changed when another input is selected, the user may have a false idea that the setting is not stored.
The picture size changes arbitrary.	The Auto Size setting is set to ON.
The display position of the screen changes slightly while the screen is on.	The orbiter function for minimizing the effects of phosphor burn is activated. Although the setting for this function can be changed on the Home menu, retaining the factory setting is strongly recommended.
The video signal to the S video connector is not displayed.	The component video cable is connected to the same input function as for the S video (even if no signal is input to the component video connector, merely having something plugged in to the connector will result in judgment that a signal is being fed in and the component video connector takes priority). (Priority of connectors: component video > S video > composite video)
The video signal to the composite video connector is not displayed.	The S Video or component video cable is connected to the same input function as for the composite video. (Priority of connectors: component video > S video > composite video)

SUPPLEMENT: On the video setting for HDMI

There are three types of HDMI output formats: color difference 4:4:4, color difference 4:2:2, and RGB4:4:4.

(The proportions, such as 4:4:4 and 4:2:2, represent those of the amount of data for video signal components. For example, as for color difference 4:4:4, the proportion of the amount of data as for Y, Cb, and Cr is 4:4:4.)

It is required to make the settings of the PDP according to the settings of the output equipment. For usual operation, however, set them to AUTO. If the color is inappropriate, make the settings manually.

In the HDMI system, video signals are coded at 24 bits per pixel and transmitted as a series of 24-bit pixels. In a case of color difference 4:4:4, Y, Cb, and Cr use 8 bits each. In a case of color difference 4:2:2, Y, Cb, and Cr use 12 bits each, but Cb and Cr are transmitted at a half sampling rate of Y. This unit is capable of processing the upper 10 bits out of 12 bits of video data. Recent high-end DVD players, such as Pioneer DV-79AVi, are capable of outputting 10-bit color-difference signals. In general, it is said that picture quality for color difference 4:2:2 format is assumed to be higher, because human eyes are more sensitive to luminance than to colors. In the case of RGB4:4:4, R, G, and B use 8 bits each.

5.5.1.1 CONFIRMATION ON THE HDMI CONTROL FUNCTION


When you use the HDMI Control (HDMI-CEC) function, if the unit does not function properly, such as not being able to control or recognize connected equipment, check the following:

- **Confirmation of the manufacturer of the connected equipment**

Check if the connected equipment was manufactured by Pioneer and if it supports the HDMI Control function. If its manufacturer is not Pioneer, proper operations are not guaranteed.

- **Confirmation of connections**

Check if the unit is connected properly, as shown in the figures below:
(For details, refer to "Making the HDMI Control connections" in the Operating instructions.)

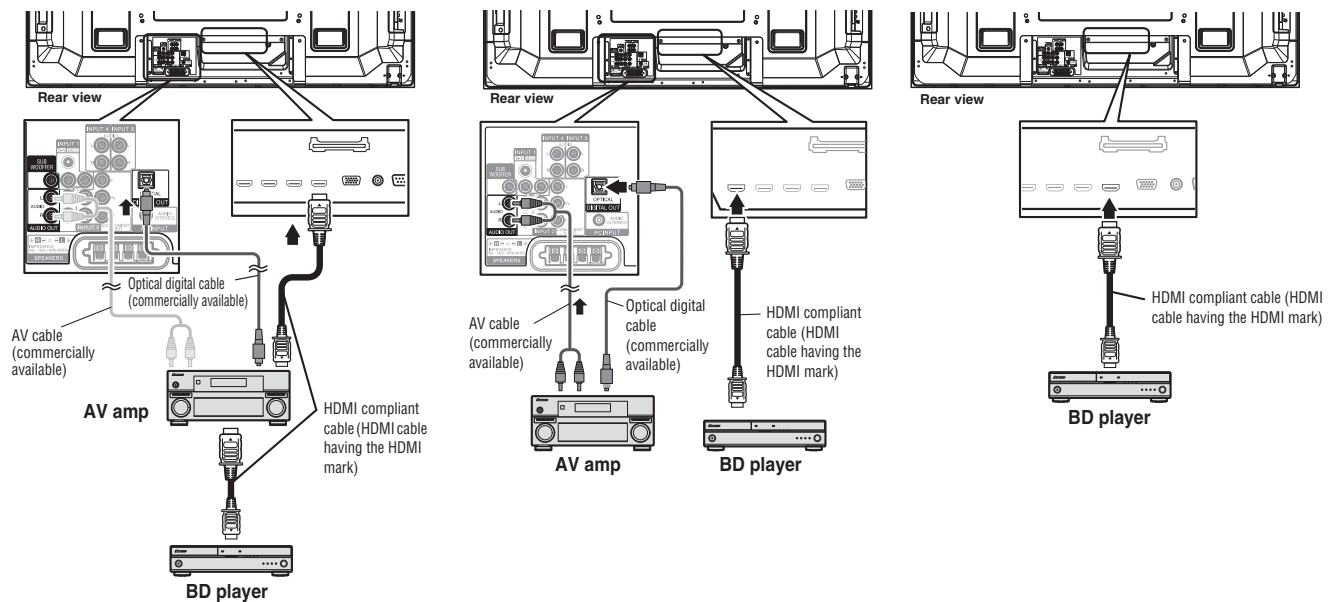

Example 1: When an AV amplifier that supports HDMI Control is connected

Example 2: When an AV amplifier that does not support HDMI Control is connected

Example 3: When an AV amplifier is not connected

Check that the following conditions are met:

- The connected equipment must support the HDMI Control function.
- The equipment must be connected to the INPUT connector that has been selected in "Input Setting" on the HDMI Control Setting menu.
- The connections must be made properly, as shown in the above figures (in a case where an AV device, such as an AV amplifier, and a DVD recorder/BD player are connected, in a case where only a DVD recorder/BD player is connected, and in a case where an AV device, such as an AV amplifier, which does not support HDMI-CEC, is connected).
- When an AV device that supports the HDMI Control function is connected, it must be connected between the PDP and a DVD recorder/BD player.
- The HDMI Control function must be activated on the connected equipment (DVD recorder, BD player, AV device [AV amplifier, etc.]). (Refer to the Operating instructions of the connected equipment.)

A

• Confirmation of the number of connected devices

Check that the number of connected devices does not exceed the maximum number for guaranteed operations.

Equipment	Maximum Number
DVD recorder	2
BD player	2
AV System	1

B

• Confirmation of settings

Check that the settings for the HDMI Control function are properly made. (For details, refer to "Setting the HDMI Control" in the Operating instructions.)

Check that the following conditions are met:

- "Input Setting" on the HDMI Control Setting menu must be set to the same input as that to which the equipment that supports the HDMI Control function is connected.
- When Power Off Control, Power-On Ready, or Hold Sound Status are to be used, their settings must be On.

C

• Confirmation of operations

Check that the HDMI Control function works properly.

- (1) Connect a device that supports the HDMI Control function.
- (2) Perform the procedures that are required after changing connections, which are described in "Making the HDMI Control connections" in the Operating instructions.
 - 1 Turn on the plasma television and all the connected devices.
 - 2 Confirm that the setting in "Input Setting" for "HDMI Control Setting" is properly entered according to the connected devices. Also confirm the HDMI Control related settings in the connected devices.
 - 3 Switch to the HDMI input terminals to which the devices are connected to check if audio and video images are properly output and displayed.
 - 4 Try turning off the plasma television, then turn the power back on to the plasma television.
- (3) Perform "Power On Test" or "Power Off Test" on the HDMI Control Setting menu. (For details, refer to "Power On/Off Test" in the Operating instructions.)

E

If the following occurs even if the operation check is performed properly, a failure, such as breakage of the HDMI cable, problems on the side of the connected device, and problems with the MAIN Assy, may be suspected:

- "Power On Test" or "Power Off Test" cannot be selected (the items are grayed)
- The connected device cannot be turned on/off.

In some cases, an operation check using another HDMI input connector may be required in order to narrow down the cause.

F

5.5.2 FUNCTION OF DECREASING THE BRIGHTNESS LEVEL

■ High-temperature protection function 1

If the panel temperature (TEMP1) reaches 80 °C, the limit for the maximum count of plasma discharge will be gradually decreased to lower the temperature of the panel.

- This function is activated based on the TEMP1 temperature.
- The limit for the maximum count of plasma discharge will be decreased 8 per 5 seconds.
- The lowest limit for the maximum count of plasma discharge is about 700.
- The maximum count of plasma discharge will begin to increase gradually if the panel temperature falls to the specified temperature.

■ High-temperature protection function 2

If the panel temperature (TEMP1) reaches 55 °C, the plasma-discharge count that is determined based on the input APL will be decreased. In actual operation, the ABL adjustment value will be offset.

- This function is activated based on the TEMP1 temperature.
- The ABL adjustment value will be decreased by one step per 30 seconds.
- The ABL adjustment value will begin to increase gradually if the panel temperature falls to the specified temperature.

■ Panel protection function 1 (protection against still picture)

If a still picture is displayed for 3 minutes or more, the limit for the maximum count of plasma discharge will be gradually decreased to minimize the effects of phosphor burn.

- This function is activated after detection if the displayed picture is still (the picture will be considered to be still if only the mouse cursor is moved).
- The limit for the maximum count of plasma discharge will be decreased 8 per 5 seconds.
- The lowest limit for the maximum count of plasma discharge is about 700 (it takes about 15 minutes to reach the lowest limit, although the required time varies depending on the displayed picture).
- The maximum count of plasma discharge will begin to increase gradually if the displayed picture is changed to animated picture.

Note: How to decrease the brightness level in this function is the same as in high-temperature protection function 1.

■ Panel protection function 2 (SCAN IC protection)

 
If a particular load is applied to the SCAN IC, the limit for the maximum count of plasma discharge will be gradually decreased.

Note: How to decrease the brightness level in this function is the same as in high-temperature protection function 1.

■ Panel protection function 3 (protection against panel cracking)

A bright window, as shown in the figure on the right, on the screen increases the heat of the panel. If such a pattern is recognized on the screen, the limit for the maximum count of plasma discharge will be gradually decreased.


Note: How to decrease the brightness level in this function is the same as in high-temperature protection function 1.



Detection example: SCAN IC protection



Detection example: Protection against panel cracking

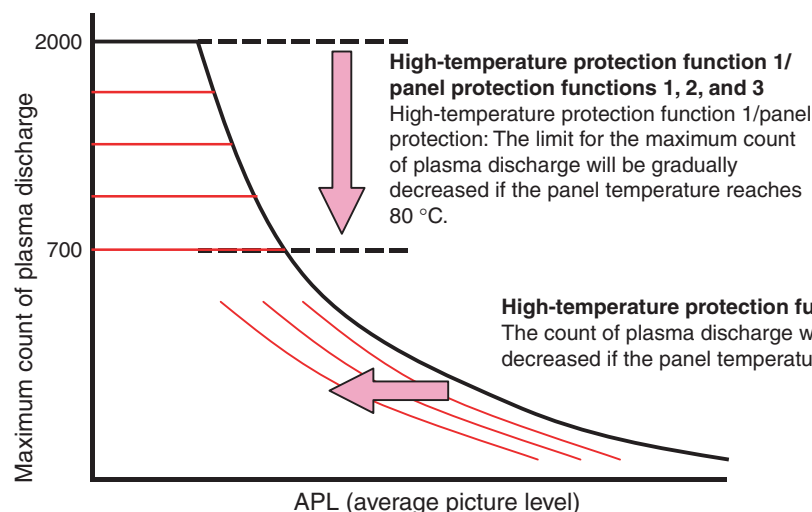

5.6 OUTLINE OF THE OPERATION

5.6.1 PANEL DRIVE-POWER ON / OFF FUNCTION

Function:

It is an operational mode where the digital signal processing performs circuit operation but the power is not supplied to the panel driving system (Vsus, VAddress) in order to avoid a power down (PD).

Application:

1. When it is necessary to check whether the signal output is correctly reaching the drive system in a repairing activity etc.
2. In the case of a PD, to determine whether the problem is with the panel drive-power supply or with the other system power supply.

Method:



1. Short-circuit between the specified location of the POWER SUPPLY Unit and GND (Multi base section recommended), using a jumper with alligator clips (refer to the photos below).
2. Execute [DRV S00] by RS-232C command. ([DRV S01] for release)

Supplemental explanation:

- When the panel drive-power is in OFF state, there will be no PD, except PS_PD, as the PD signal has been muted.
- If the clip is removed in the OFF state of the panel drive-power, PD will take place at the instance of clip removal. Therefore, be sure to remove the clip after turning the power OFF.
- Under RS-232C command control, [DRV S01] (release) is possible during power ON. However, there is a possibility of damaging the set. Therefore, make this operation only after turning the power OFF.
- Command [DRV S00/S01] is effective even during standby.
- When the main power switch is set to OFF, no command is accepted.
- When the AC power cord is unplugged, the panel drive-power OFF state established by the [DRV S00] command is canceled. (The panel drive-power OFF state remains in effect even if the main power switch is set to OFF after that command is sent.)

When the panel drive-power is ON


When the panel drive-power is OFF

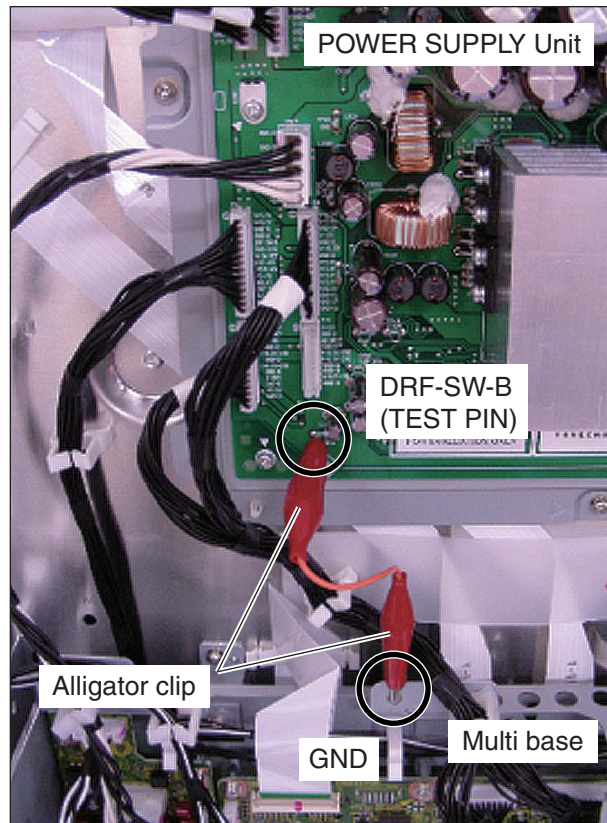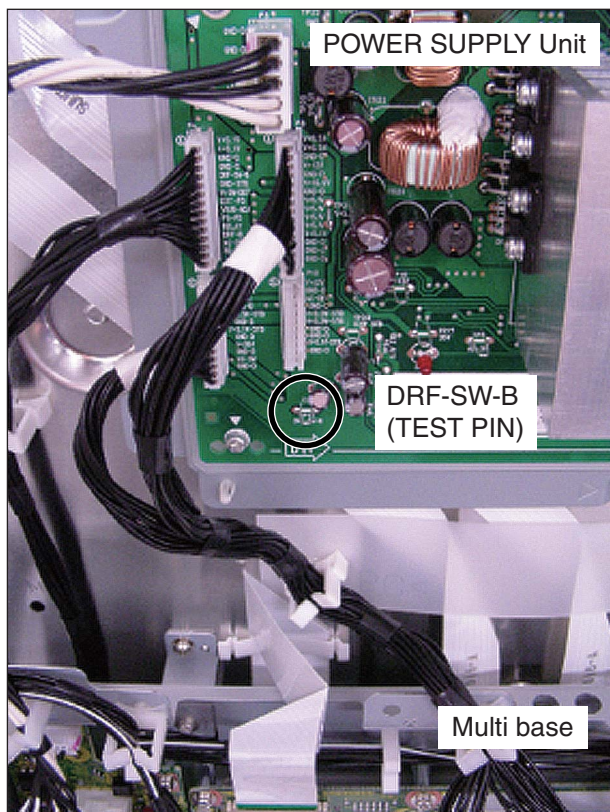


5.6.2 SPECIFICATION OF THE FAN CONTROL

■ Block diagram

The internal fan cools down the MTB and Power blocks.
The external fans cool down the whole unit.

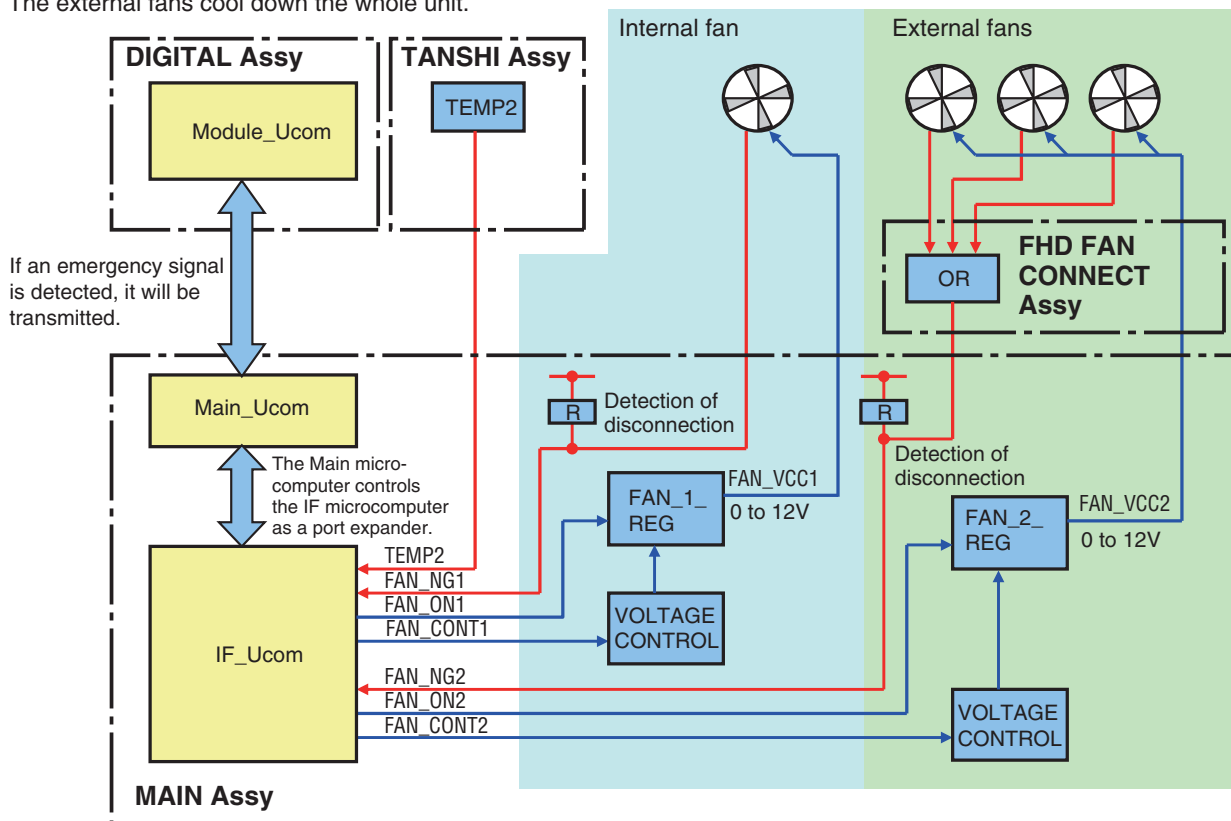

■ Operation specifications

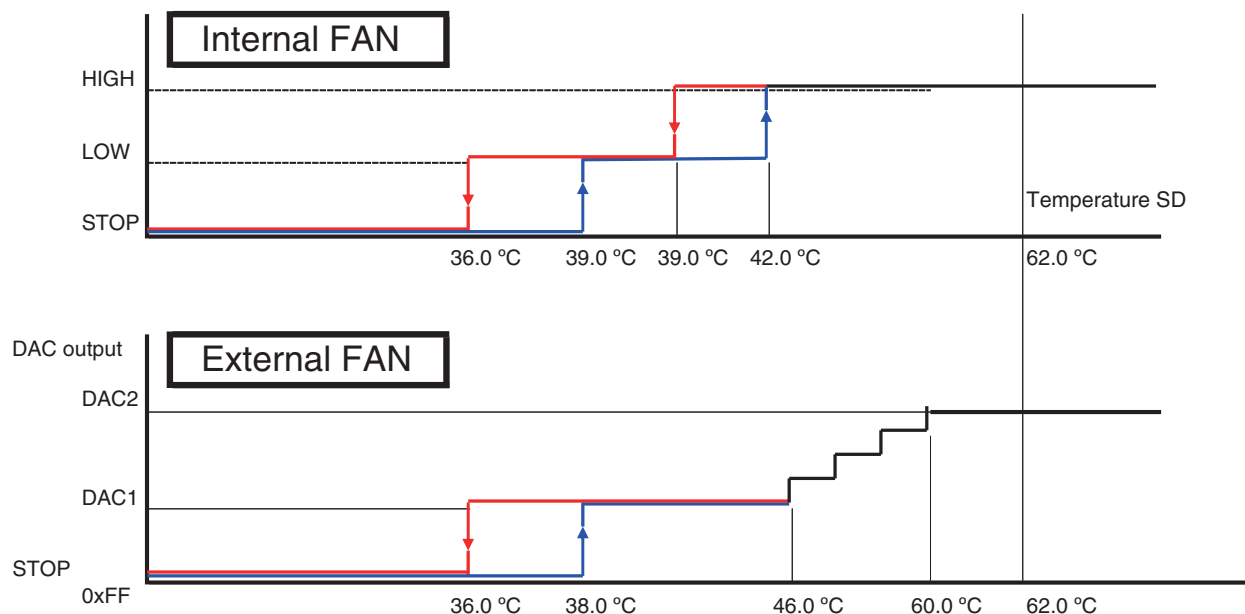


Notes:

- The operating temperature of the fan is higher than the ambient temperature, because the sensor temperature is read by the microcomputer.
- If the critical values for signals are displayed in the address circuit, the fan may be activated or be rotated at higher speed in response to values lower than the set temperature values shown above.
- When the temperature rises, the sensor voltage of TEMP2 decreases.
- When the voltage of the DAC output for external FAN decreases, rotation speed of FAN rises.

5.6.3 PROCESSING IN ABNORMALITY

Protection of the Power Amplifier

● Circuit configuration

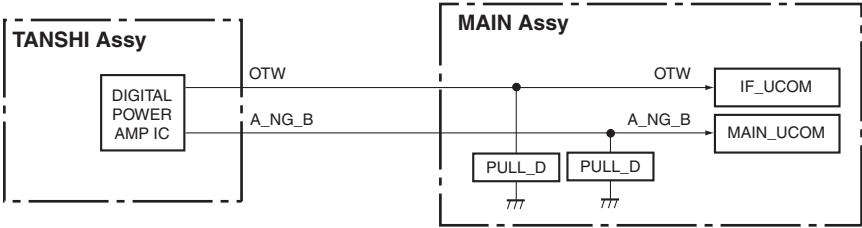

● Specifications for port monitoring

Port Name	SD/PD Indication	Active	Monitoring conditions	Operation
A_NG_B	AUDIO	Shutdown occurs when the signal is "L." 30 mS * 3 times	RST4 = "H" (always) (Monitoring starts 2 sec after the above conditions are established.)	The main CPU operations described below will be performed when either "A_NG_B = L" or "OTW = L" is detected (established) under the monitoring conditions.
OTW	AUDIO	Shutdown occurs when the signal is "L." 130 mS * 3 times		

● Operation specifications of the main CPU

- (1) When a shutdown decision is made by the main CPU
 - After a warning indication is displayed for 5 sec, a shutdown is generated (the blue LED flashes 5 times).
 - A warning indication is displayed for all input-signal types.
 - Example of a warning indication: "The speaker terminals are short-circuited. After reconnection, turn the unit on again."
(For 50-inch models) (For 42-inch models, an indication declaring a forced power-off is displayed.)

- (2) Display conditions
 - When the panel is on: A warning indication is displayed immediately.
 - When the panel is off: A warning indication is not displayed immediately but is displayed when the panel is turned on.


Note: A warning indication is displayed each time the panel is turned on if the conditions for a shutdown persist.

● Conditions for resetting the circuits

The circuits will be reset upon Standby ON/OFF.

Power supply and DC-DC converter

● Circuit configuration

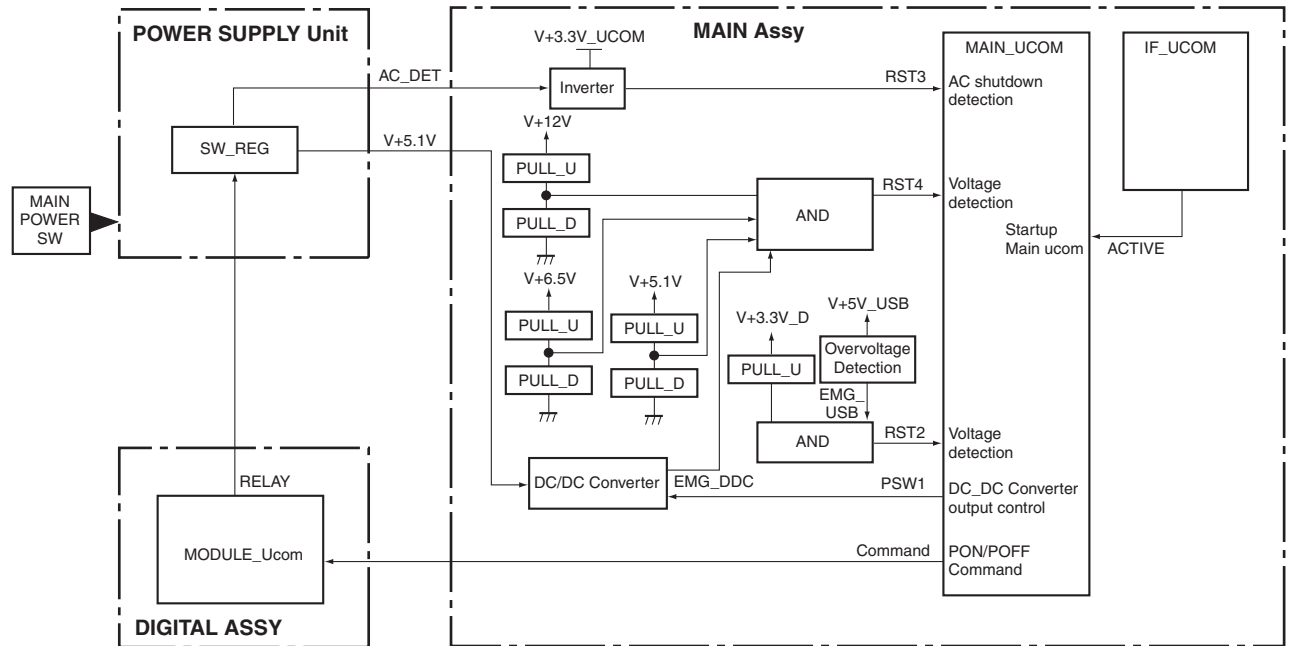


● Specifications for port monitoring

Port Name	SD/PD Indication	Active	Monitoring conditions	Operation
RST2	ASIC power (M-DCDC)	Shutdown occurs when the signal is "L." for 5 sec after PSW1 is ON. or for 2 sec while the unit is ON.	<ul style="list-style-type: none"> Panel ON (RST4 = H and PSW1 = L) While awaiting restoration of RST2 (RST2 = L) 	<p>The SD timer starts when "RST2 = L" is detected under monitoring conditions. If "RST3 = H," "M_SW_DET_B = H," or "RST4 = L" is detected, or if a power-down or shutdown in the module microcomputer system is not generated, the unit waits for 30 mS. Then, if the SD timer continues to count for 2 sec or more, a shutdown is determined, and a shutdown process starts. A specific LED flash pattern (blue LED, 13 times) starts. The next PON operation is valid, and the flag is cleared upon the next power-on.</p> <p>If RST2 is H, a restoration process starts according to the latest power-on/off status.</p>
RST3	AC power	AC_OFF when the signal is "H."	<ul style="list-style-type: none"> Active STB (including SD/PD statuses) Functional STB Panel ON (Areas other than North America) While the main power switch is set to OFF (M_SW_DET_B = H) (North America) While the main power switch is set to OFF (M_SW_DET_B = H) While awaiting restoration of AC power (RST3 = H) While awaiting restoration of RST2 (RST2 = L) While awaiting restoration of RST4 (RST4 = L) 	<p>If "RST3 = H" (AC_OFF) is detected under the monitoring conditions, a power-off process starts. Monitoring of the RST3 port is continued, while monitoring of other ports is interrupted. Communication is controlled only by the IF microcomputer. The port outputs are set as specified. If the signal at the RST3 port continues to be H after 30 mS of waiting, monitoring is continued. If RST3 is L, a restoration process starts according to the latest power-on/off status.</p>
RST4	MAIN power (RELAY)	Shutdown occurs if the signal is "L." for 5 sec after RELAY is ON. or for 2 sec while the unit is ON or in Functional STB.	<ul style="list-style-type: none"> Functional STB Panel ON (Areas other than North America) While the main power switch is set to OFF (M_SW_DET_B = H) While awaiting restoration of RST2 (RST2 = L) While awaiting restoration of RST4 (RST4 = L) 	<p>The SD timer starts when "RST4 = L" (power-off of devices in the functional STB system) is detected under monitoring conditions. The RST4 initialization process starts, and input monitoring, communication setting, and output-terminal setting are performed. The RST4-SD timer starts. If either "RST3 = H" or "M_SW_DET_B = H" is detected, or if a power-down or shutdown in the module microcomputer system is not generated, the unit waits for 30 mS. Then, if the SD timer continues to count for 2 sec or more, a shutdown is determined, and a shutdown process starts. A specific LED flash pattern (blue LED, 13 times) starts. The next PON operation is valid, and the flag is cleared upon the next power-on. If RST4 is H, a restoration process starts according to the latest power-on/off status.</p>

Fan and temperature sensor

● Circuit configuration

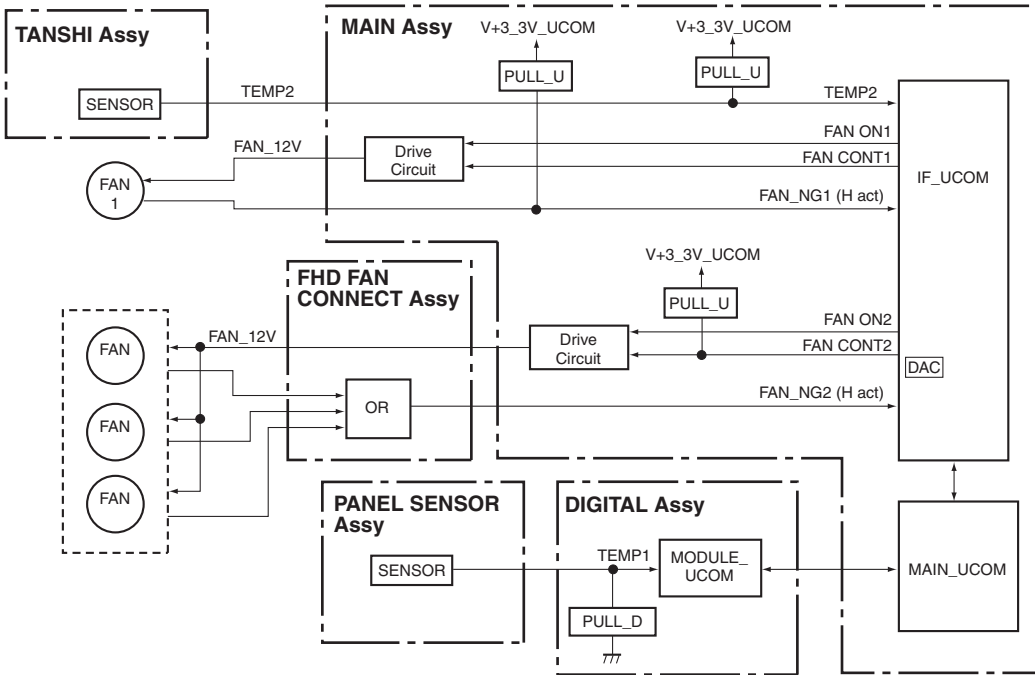

● Specifications for port monitoring

Port Name	SD/PD Indication	Active	Monitoring conditions	Operation
FAN_NG1	FAN1	Shutdown occurs when the signal is "H." 1 S * 3 times	RST4 = H and FAN_ON1 = H (Monitoring starts 3 sec after the above conditions are established.)	If FAN_NG1 (for details on detection logic, see "File of fan-control specifications") is detected (established) under the monitoring conditions, a shutdown process starts. A specific LED flash pattern (blue LED, 10 times) starts. The next PON operation is valid, and the flag is cleared upon the next power-on.
FAN_NG2	FAN	Shutdown occurs when the signal is "H." 1 S * 3 times	RST4 = H and FAN_ON2 = H (Monitoring starts 3 sec after the above conditions are established.)	If FAN_NG2 (for details on detection logic, see "File of fan-control specifications") is detected (established) under the monitoring conditions, a shutdown process starts. A specific LED flash pattern (blue LED, 10 times) starts. The next PON operation is valid, and the flag is cleared upon the next power-on.
TEMP2	High temperature at MTB	Shutdown occurs if any values equal to or greater than minimum to require a shutdown are detected. 1 S * 3 times	RST4 = H (Monitoring starts 1 sec after the above conditions are established.)	If any values equal to or greater than minimum to require a shutdown are detected (established) under the monitoring conditions, a warning indication will be displayed for 30 sec, after which a shutdown process starts. A specific LED flash pattern (blue LED, 11 times) starts. The next PON operation is valid, and the flag is cleared upon the next power-on.
TMP_NG	High temperature in the drive circuits	Shutdown occurs if any values equal to or greater than minimum to require a shutdown are detected. 200 mS * 5 times (average)	Digital video RST2 = H	If any values equal to or greater than minimum to require a shutdown is detected (established) under the monitoring conditions, those changes in status will be transmitted to the main microcomputer via the UART. Upon receiving the data, a warning indication will be displayed for 30 sec, after which a shutdown process starts. The main microcomputer orders a specific LED flash pattern (blue LED, 4 times). The next PON operation is valid, and the flag is cleared upon the next power-on.
	Low temperature in the drive circuits			If any values equal to or greater than minimum to require a shutdown is detected (established) under the monitoring conditions, those changes in status will be transmitted to the main microcomputer via the UART. Upon receiving the data, the main microcomputer orders a specific LED flash pattern (blue LED, 4 times). The next PON operation is valid, and the flag is cleared upon the next power-on.


5.6.4 TRAP SWITCH

● Outline and Notes

For video data transmission inside this Plasma Display, digital signals are used. Therefore, this unit adopts the HDCP (High-bandwidth Digital Content Protection) system for copyright protection. This unit is also provided with a detection switch (TRAP switch) that will prohibit the unit from being turned on again "if the rear case of the unit is accidentally opened," in order to prevent the panel technology from being leaked out.

The TRAP switch is disabled while the unit is turned off.

When performing internal diagnosis of the PDP, fix the switch to the OFF position using adhesive tape before turning on the unit. After servicing, be sure to remove the adhesive tape.

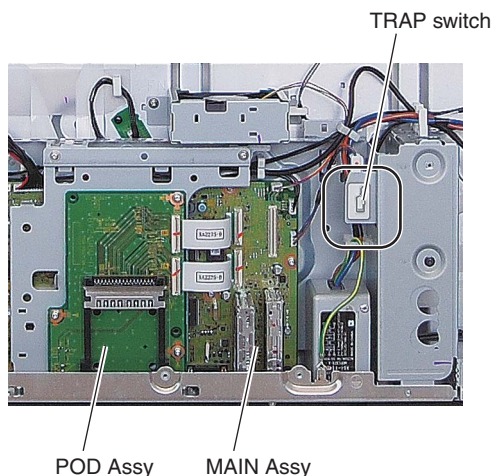

WHEN THE TRAP SWITCH IS ACTIVATED

When the TRAP switch is activated, the red and blue LEDs will light.

In order to deactivate the TRAP switch, close the upper plate of the unit or fix the TRAP switch to the OFF position in the manner described above.

Then, follow procedures (1) or (2) below:

(1) Deactivating with the remote control unit

- Enter Factory mode.
- Proceed to the INITIALIZE layer of Factory mode. Hold the DISPLAY key pressed for more than 5 seconds.

(2) Deactivating with the RS-232C command


- Send the CTM (cancel) command.

6. SERVICE FACTORY MODE

6.1 OUTLINE OF THE SERVICE FACTORY MODE

A Operations during Service Factory mode are described here.

6.1.1 SERVICE FACTORY MODE TRANSITION CHART

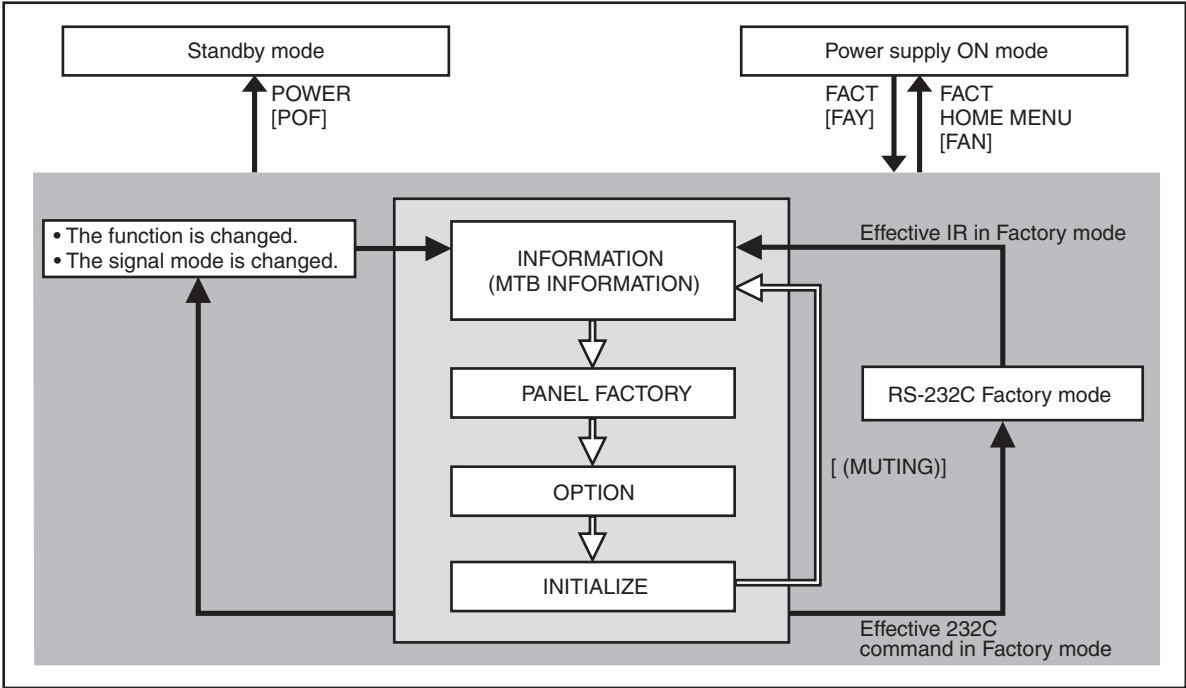

6.1.2 HOW TO ENTER/EXIT SERVICE FACTORY MODE

■ How to enter Service Factory Mode

By using a PDP service remote control)

- PDP service remote control : Press [FACTORY] key.

By issuing RS-232C commands)

- During normal Standby mode : Issue [PON] then [FAY].
- During normal operation mode : Issue [FAY].

■ How to exit Service Factory Mode

By using a PDP service remote control)

- PDP service remote control : press [FACTORY] key.
- Supplied remote control unit : press [HOME MENU] key.

By issuing RS-232C commands)

- Issue [FAN].

■ How to enter Service Factory Mode by Using the supplied Remote Control Unit

- Same as previous model. Please refer to the technical document (Service Know-how).

6.1.3 FUNCTIONS WHEN ENTERING THE SERVICE FACTORY MODE

■ Functions whose setting are set to OFF

The settings for the following functions are set to OFF when Service Factory mode is entered (including when the “FAY” command is received) :

Function	Remarks
2-Screen Operation	Input function set on the main side is selected.
FREEZE	
Auto size, Side Mask	It is not performed during Factory mode.
ORBITER, Mask control	Central value operation (ORBITER)
Sleep Timer	Cancel the operation.
Room light sensor	Turn off the detecting operation (Setting data will be retained.)
Blue LED dimmer	Turn off the operation (Setting data will be retained.)
Detection of the TRAP switch	The detection operation is stopped.
TRAP history	To a possible turning on though the memory is maintained.
Display of TV guide	Finish the TV-GUIDE function.
Setting of Parental Control	When this is turned off, the block of the screen is released.
Power Control	Turn off the operation (However, the setting maintains it.)
Image Position	Central value operation

Note: Enter the factory after cancelling ACI because the ACI operation setting OFF and not done.

■ User data

User data will be treated as follows :

- User data on picture-quality and audio-quality adjustments are not reflected, and factory-preset data are output (user data will be retained in memory). When the unit enters Service Factory mode, the current audio-quality adjustment data will be still be retained in memory.
- User-setting data will be applied to the various settings (items on the menus), signal formats, and the items that are associated with path change (HDMI settings, etc.).
- Data on screen (i.e., screen position; meaning clock dividers, and not including data on screen size). Are reset to the default values (data stored in memory will be retained).
Screen size will be retained.

1 2 3 4

6.1.4 REMOTE CONTROL CODE IN SERVICE FACTORY MODE

Remote Control Keys	Basic Functions	Remarks
MUTING	Switching the main items.	Shifting to the next main item (top).
↓ (DOWN)	Switching the subtitled items.	Shifting downward to the next subtitled item.
↑ (UP)	Switching the subtitled items.	Shifting upward to the next upper layer.
← (LEFT)	Decreasing the adjustment value.	Decreasing the adjustment value.
→ (RIGHT)	Increasing the adjustment value.	Increasing the adjustment value.
ENTER/SET	Switching the layers.	Shifting downward or upward to the next lower or upper layer.
INPUT	Selecting INPUT.	Shifting the INPUT to the next function.
INPUTxx	Selecting INPUT.	Switching the INPUT to xx. (xx=1 to 7 etc)
CH+/P+	Increasing the channel number.	
CH-/P-	Decreasing the channel number.	
Numeric Keys	Function: TV	Function: TV (previously selected channel number is selected)
POWER	Power OFF.	Turning the power off.
FACTORY	Factory OFF (Factory mode)	In Factory mode, turning Factory mode off.
	Factory ON (Non-Factory mode).	In Non-Factory mode, turn Factory mode on.
HOME MENU	Menu ON.	In Factory mode, turn Factory mode off.
VOLUME+	Volume UP.	Increasing 10 the adjustment value. (PANEL FACTORY)
VOLUME-	Volume DOWN.	Decreasing 10 the adjustment value. (PANEL FACTORY)
DRIVE OFF (Note1)	Drive Mode OFF.	Turning Drive mode off.
INTEGRATOR	INTEGRATOR MENU ON.	Enter INTEGRATOR MODE.

(Note 1) When ten seconds have passed since the [DRIVE OFF] key was pressed at the standby, it becomes invalid.
Please press [POWER] key from the [DRIVE OFF] key pressing within ten seconds when you do power supply ON while driven OFF.



PDP service
remote control




PDP-6010FD



6.1.5 PDP SERVICE REMOTE CONTROL

- The keys labeled with the same names on the service remote control unit have the same functions as those of the supplied remote control unit. (See "2.3 PANEL FACILITIES.")
- For the keys not provided on the supplied remote control unit, see the explanations below:

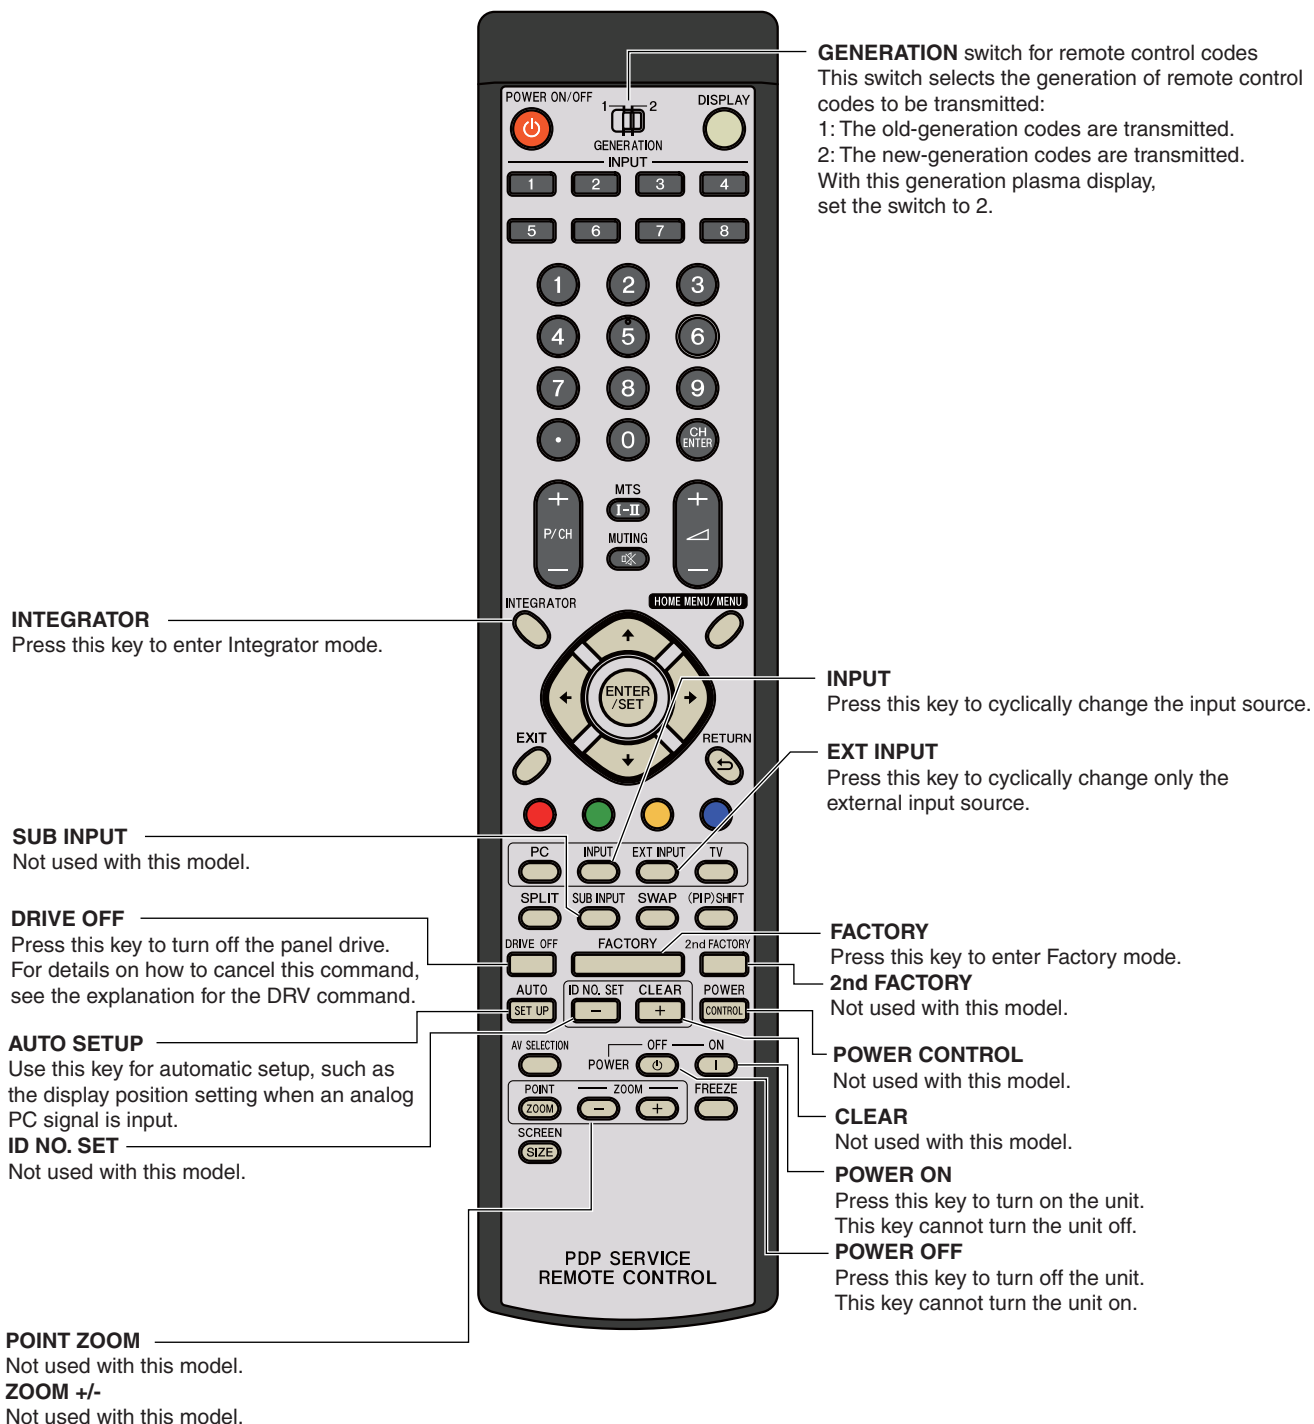


6.1.6 FACTORY HIERARCHICAL TABLE

Large Item	Middle Item		Variable / Adjustment Range	Remarks	
		Small Item			
6.2.1 INFORMATION					
	6.2.1.1	VERSION (1)			
	6.2.1.2	VERSION (2)			
	6.2.1.3	VERSION (3)			
	6.2.1.4	MAIN NG	CLEAR <=>	NO <=> YES	
	6.2.1.5	TEMPERATURE			
	6.2.1.6	HOUR METER	MTB HOUR METER CLEAR	NO <=> YES	
	6.2.1.7	HDMI SIGNAL INFO 1			
	6.2.1.8	HDMI SIGNAL INFO 2			
	6.2.1.9	VDEC SIGNAL INFO 1			
	6.2.1.10	VDEC SIGNAL INFO 2			
	6.2.1.11	DTV TUNING STATUS 1			
	6.2.1.12	DTV TUNING STATUS 2			
	6.2.1.13	DTV TUNING STATUS 3			
	6.2.1.14	DTV TV-GUIDE BER		for the technical analysis	
	6.2.1.15	DEBUG INFO		for the technical analysis	
6.2.2 PANEL FACTORY (+)					
	6.2.2.1	PANEL INFORMATION			
	6.2.2.2	PANEL WORKS			
	6.2.2.3	POWER DOWN			
	6.2.2.4	SHUT DOWN			
	6.2.2.5	PANEL-1 ADJ (+)	VOL SUS <=>	000 to 255	Equivalent to VSU (Setting value: Factory adjustment value)
			VOL OFFSET <=>	000 to 255	Equivalent to VOF (Setting value: Factory adjustment value)
			VOL RST P <=>	000 to 255	Equivalent to VRP (Setting value: Factory adjustment value)
			VOL XPOFS1 <=>	000 to 255	Equivalent to VX1 (Setting value: Factory adjustment value)
			VOL XPOFS2 <=>	000 to 255	Equivalent to VX2 (Setting value: Factory adjustment value)
			VOL YNOFS1 <=>	000 to 255	Equivalent to VY1 (Setting value: Factory adjustment value)
			VOL YNOFS3 <=>	000 to 255	Equivalent to VY3 (Setting value: Factory adjustment value)
			VOL YNOFS4 <=>	000 to 255	Equivalent to VY4 (Setting value: Factory adjustment value)
			RESET1ST_KSB <=>	112 to 144	Equivalent to R1K (Setting value: 128 fixed)
			RESET2ND_KSB <=>	112 to 144	Equivalent to R2K (Setting value: 128 fixed)
			YSTL_1SF_KSB <=>	112 to 144	Equivalent to Y1K (Setting value: 128 fixed)
			YSTL_1SF_HZ <=>	112 to 144	Equivalent to Y1Z (Setting value: 128 fixed)
			XSUS_1ST_B <=>	112 to 144	Equivalent to X1B (Setting value: 128 fixed)
			YSUS_2ND_B <=>	112 to 144	Equivalent to Y2B (Setting value: 128 fixed)
			XSUS_3RD_B <=>	112 to 144	Equivalent to X3B (Setting value: 128 fixed)
			YSUS_B <=>	112 to 144	Equivalent to YSB (Setting value: 128 fixed)
			XSUS_B <=>	112 to 144	Equivalent to XSB (Setting value: 128 fixed)
			YSTL_KSB <=>	112 to 144	Equivalent to YTK (Setting value: 128 fixed)
			YSTL_HZ <=>	112 to 144	Equivalent to YTZ (Setting value: 128 fixed)
			YSTL_2SF_KSB <=>	112 to 144	Equivalent to Y2K (Setting value: 128 fixed)
	YSTL_2SF_HZ <=>	112 to 144	Equivalent to Y2Z (Setting value: 128 fixed)		
	YSTL_FMR_KSB <=>	112 to 144	Equivalent to YNK (Setting value: 128 fixed)		
	YSTL_FMR_HZ <=>	112 to 144	Equivalent to YNZ (Setting value: 128 fixed)		
	SUS FREQ. <=>	MODE 1 to MODE 8	Equivalent to SFR (Setting value: MODE1)		
	6.2.2.6	PANEL-2 ADJ (+)	R-HIGH <=>	000 to 511	Equivalent to PRH (Setting value: Factory adjustment value)
			G-HIGH <=>	000 to 511	Equivalent to PGH (Setting value: Factory adjustment value)
			B-HIGH <=>	000 to 511	Equivalent to PBH (Setting value: Factory adjustment value)
			R-LOW <=>	000 to 999	Equivalent to PRL (Setting value: 512 fixed)
			G-LOW <=>	000 to 999	Equivalent to PGL (Setting value: 512 fixed)
B-LOW <=>			000 to 999	Equivalent to PBL (Setting value: 512 fixed)	
	ABL <=>	000 to 255	Equivalent to ABL (Setting value: Factory adjustment value)		
6.2.2.7	PANEL FUNCTION (+)	R-LEVEL <=>	LV-0 to LV-7	Equivalent to RRL (Setting value: Lv-2)	
		G-LEVEL <=>	LV-0 to LV-7	Equivalent to RGL (Setting value: Lv-1)	
		B-LEVEL <=>	LV-0 to LV-7	Equivalent to RBL (Setting value: Lv-0)	
		ADDRESS L1 <=>	PH0 to PH9	Equivalent to AP0S* (Setting value: PH0)	
		ADDRESS L2 <=>	PH0 to PH9	Equivalent to AP0S* (Setting value: PH1)	
		ADDRESS L3 <=>	PH0 to PH9	Equivalent to AP1S* (Setting value: PH2)	
		ADDRESS L4 <=>	PH0 to PH9	Equivalent to AP1S* (Setting value: PH0)	
		ADDRESS U1 <=>	PH0 to PH9	Equivalent to AP2S* (Setting value: PH0)	
		ADDRESS U2 <=>	PH0 to PH9	Equivalent to AP2S* (Setting value: PH1)	
		ADDRESS U3 <=>	PH0 to PH9	Equivalent to AP3S* (Setting value: PH2)	
		ADDRESS U4 <=>	PH0 to PH9	Equivalent to AP3S* (Setting value: PH0)	
		STK MODE <=>	OFF <=> MODE1 to MODE8 <=>	SKM S00 to S07	


*: Setting value

Large Item			Variable / Adjustment Range	Remarks
	Middle Item	Small Item		
6.2.2 PANEL FACTORY (+)				
	6.2.2.8 ETC. (+)	BACKUP DATA <=>	NO OPRT <=> TRANSFER or ERR	Equivalent to BCP
		DIGITAL EEPROM <=>	NO OPRT <=> DELETE/REPAIR	Equivalent to FAJ/UAJ
		PD INFO. <=>	NO OPRT <=> CLEAR	Equivalent to CPD
		SD INFO. <=>	NO OPRT <=> CLEAR	Equivalent to CSD
		HR-MTR INFO. <=>	NO OPRT <=> CLEAR	Equivalent to CHM
		PM/B1-B5 <=>	NO OPRT <=> CLEAR	Equivalent to CPM
		P COUNT INFO. <=>	NO OPRT <=> CLEAR	Equivalent to CPC
		MAX TEMP. <=>	NO OPRT <=> CLEAR	Equivalent to CMT
	6.2.2.9 RASTER MASK SETUP (+)	MASK OFF	<=> 48V <=> 50V <=> 60V <=> 72V <=> 75V <=> 60P <=>	Equivalent to MKS+S00
		RST MASK 01 <=>		Equivalent to MKS+S51
	
		RST MASK 25 <=>		Equivalent to MKS+S75
	6.2.2.10 PATTERN MASK SETUP (+)	MASK OFF	<=> 48V <=> 50V <=> 60V <=> 72V <=> 75V <=> 60P <=>	Equivalent to MKS+S00
		PTN MASK 01 <=>		Equivalent to MKS+S01
	
		PTN MASK 49 <=>		Equivalent to MKS+S49
	6.2.2.11 COMBI MASK SETUP (+)	MASK OFF	<=> 48V <=> 50V <=> 60V <=> 72V <=> 75V <=> 60P <=>	Equivalent to MKC+S00
		CMB MASK 01 <=>		Equivalent to MKC+S01
	
		CMB MASK 17 <=>		Equivalent to MKC+S17
6.2.3 OPTION				
	6.2.3.1 EDID WRITE MODE <=>		DISABLE <=> ENABLE	Exclusively used for production line
	6.2.3.2 ANTENNA MODE <=>		CABLE <=> AIR	
	6.2.3.3 AFT <=>		DISABLE <=> ENABLE	
	6.2.3.4 SYNC DET (+)			for the technical analysis
	6.2.3.5 CC (+)			for the technical analysis
6.2.4 INITIALIZE				
	6.2.4.1 SIDE MASK LEVEL (+)	SIDE MASK LEVEL <=>		
	6.2.4.2 FINAL SETUP	DATA RESET <=>	NO <=> YES	
	6.2.4.3 HMG/HG SERVICE MODE	MODE SHIFT <=>	NO <=> YES	
	6.2.4.4 Wide XGA AUTO <=>		DISABLE <=> ENABLE	Exclusively used for technical analysis (details omitted)

6.1.7 INDICATIONS IN SERVICE FACTORY MODE

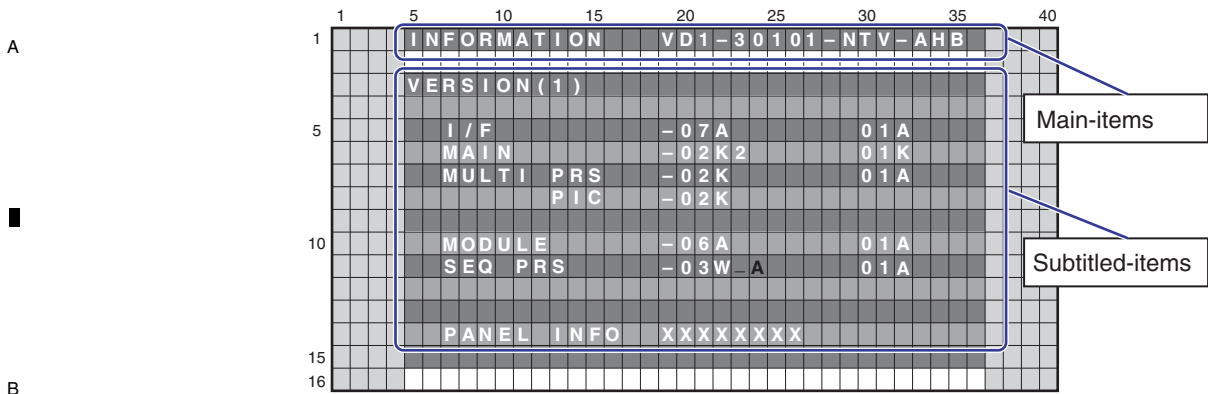

Main-item indications

 

- ① ② ③ ④

① Input function

Input Functions		OSD
VIDEO 1 to 7		VD 1 to 7
Terrestrial Wave A		ARA
Terrestrial Wave B		ARB
Cable A		CBA
Cable B		CBB
Home Gallery (Regular model only)		HG
Home Media Gallery (ELITE model only)		HMG
PC		PC

② SIG mode and Screen size

Note: See SIG-Mode Tables. (See next page.)

③ Color system and Signal type

Color System and Signal Type		OSD
NTSC	Composite input	NTV
	S-connector input	NTS
Y/CB/CR		CBR
Y/PB/PR		PBR
RGB		RGB
Digital Video signal		DIG

④ Option (Destination, Panel Generation, etc.)

Options	OSD
Regular model	ATB
ELITE model	AHB

② SIG Mode and Screen size (by User is displayed)

1st and 2nd characters : Resolution of the input signal

3rd and 4th characters : Refresh rate of the input signal

5th character : Selection of the screen size

■ Input signal mode table for video signals (resolutions and V frequencies)

1st to 4th Character		Signal Type	Fv (Hz)	Fh (kHz)
10	60	SDTV*525i	60.000	15.750
20	60	SDTV*525p	60.000	31.500
30	60	HDTV*1125i	60.000	33.750
40	60	HDTV*750p	60.000	45.000
50	24	HDTV*1125p	24.000	27.000
50	60	HDTV*1125p	60.000	67.500

Fv: Vertical Frequency, Fh: Horizontal Frequency

■ Input signal mode table for PC signals (resolutions and V frequencies)

1st to 4th Character		Signal Type	Fv (Hz)	Fh (kHz)
C1	70	720 x 400	70.087	31.469
C2	60	640 x 480	59.940	31.469
C4	60	800 x 600	60.317	37.879
C6	60	1280 x 720	60.000	44.800
C7	60	1024 x 768	60.004	48.363
C9	60	1360 x 768	60.015	47.712
D6	60	1280 x 1024	60.000	64.000

Fv: Vertical Frequency, Fh: Horizontal Frequency

■ Current selection of the screen size

5th Character	GUI Notation	VIDEO	PC	Remarks
0	DOT BY DOT	● (*)	—	
1	4:3	●	●	
2	FULL	●	●	
3	ZOOM	●	—	
4	CINEMA	●	—	
5	WIDE	●	—	

●: supported, —: unsupported

Note (*): It is effective only with models having the Full HD panel.

1 2 3 4

6.2 DETAILS OF FACTORY MENU

6.2.1 INFORMATION

A

■ Operation items

No.	Function/Display	Context	RS-232C Command
6.2.1.1	VERSION (1)	The Flash memory versions for each device are displayed. (Common part)	QS1
6.2.1.2	VERSION (2)	The Flash memory versions for each device are displayed. (Individual part)	QSE
6.2.1.3	VERSION (3)		
6.2.1.4	MAIN NG	The Shutdown Message ID/Event Times in Main Microcomputer are displayed.	QNG
6.2.1.5	TEMPERATURE	The Temperature/FAN rotating status in Main Microcomputer are displayed.	QMT
6.2.1.6	HOURL METER	The HOURL METER/P-COUNT information are displayed.	QS3
6.2.1.7	HDMI SIGNAL INFO 1	The Information of HDMI information files are displayed.	-
6.2.1.8	HDMI SIGNAL INFO 2		
6.2.1.9	VDEC SIGNAL INFO 1	Display the Signal Information on VDEC.	-
6.2.1.10	VDEC SIGNAL INFO 2		
6.2.1.11	DTV TUNING STATUS 1	Digital broadcast information and status is displayed upon receiving digital broadcast signal.	-
6.2.1.12	DTV TUNING STATUS 2		
6.2.1.13	DTV TUNING STATUS 3		
6.2.1.14	DTV TV-GUIDE BER	TV-Guide Bit Error Rate information	-
6.2.1.15	DEBUG INFO	Debug information	-

C

6.2.1.1 VERSION (1)

	1	5	10	15	20	25	30	35	40	
1			INFORMATION			VD1-30101-NTV-AHB				
		VERSION(1)								
5		I / F			- 07A			01A		
		MAIN			- 02K2			01K		
		MULTI PRS			- 02K			01A		
		PIC			- 02K					
10		MODULE			- 06A			01A		
		SEQ PRS			- 03W_A			01A		
		PANEL INFO			XXXXXXXXXX					
15										
16										

E

Microcomputer	Item Name	Display Example (Execution program block)	Display Example (Boot block)
I/F microcomputer	I/F	-07A	01A
Main microcomputer	MAIN	-02K2	01K
Multi processor	MULTI PRS	-02K	01A
Multi processor	MULTI PIC	-02K	
Module microcomputer	MODULE	-06A	01A
Sequence processor	SEQ PRS	-03W_A	01A

Note: In the 29-32 rows, the Boot version information on each device is displayed.
In the 19-24 rows, the version of the execution program is displayed.

• **PANEL INFO:** It displays the generation of the panel, inchage and the type of the panel. For details on display values and settings, see "10: Panel Information" in "9.3.1. QS1 (PANEL STATUS)."

6.2.1.2 VERSION (2)

	1	5	10	15	20	25	30	35	40
1									
5									
10									
15									
16									

Meaning	Item Name	Display Example
DTV Hardware Version	HARDWARE	XXXXXXXX
DTV Hardware Serial	SERIAL	01234567
DTV Runtime Version	RUNTIME	HHHHHHHH
CFE Version	CFE	HHHHHHHH
KERNEL Version	KERNEL	HHHHHHHH
ROOTS Version	ROOTS	HHHHHHHH
FLAGS	FLAGS	H/W (Y)
		DVR (Y) FONTS(Y)
		DFAST(Y) PLOG (Y)

6.2.1.3 VERSION (3)

	1	5	10	15	20	25	30	35	40
1									
5									
10									
15									
16									

Meaning	Item Name	Display Example
HMG/HG module Version	HMG/HG	01234567
User Password	PASSWORD	1234

6.2.1.4 MAIN NG

	1			5			10			15			20			25			30			35			40								
1				INFORMATION										VD1-30601-NTV-AHB																			
				MAIN NG																													
				MAIN					SUB					00151H21M																			
5																																	
				1	MA-IIC					FE1					00031H50M																		
				2	MA-IIC					AV-SW					00013H03M																		
				3	MA-3L					IF					00002H52M																		
				4	MAIN					-----					00001H58M																		
10				5	TEMP2					-----					00000H07M																		
				6																													
				7																													
				8																													
15																																	
16																																	

MTB side's Shutdown NG information

OSD: MAIN	OSD: SUB	Cause of Shutdown
AUDIO	----	Short-circuit of the speaker terminal or failure of audio amplifier.
MODULE	----	Failure of communication to Module microcomputer.
MA-3L		3-wire Serial Communication of Main microcomputer.
	IF	Communication failure of IF microcomputer
	MULTI	Multi Processor communication failure
MA-IIC		IIC Communication failure of Main microcomputer
	FE1	Analog Tuner 1
	FE2	Analog Tuner 2
	MSPMAP	MSP/MAP
	AV-SW	AV Switch
	RGB-SW	RGB Switch
	VDEC	VDEC
	SDRAM	VDEC - SDRAM
	ADC	AD/PLL
	HDMI	HDMI
	US-MSP	MSP
MAIN		Communication failure of Main microcomputer
FAN	FAN1	Fan stopped
	FAN2	Fan stopped (Only with models having the Full HD panel)
TEMP2		Abnormally high temperature at MTB.
DTUNER		Failure of Digital Tuner
	PS/RST	Failure to DTV Starting
	RETRY	DTV communication error
	DE-BCM	Abnormally in BCM7038
	DE-FE	Tuner 1 or 2
	DE-CAS	Card I/F IC
	DE-VBI	VBI Slicer
	DE-EPI	EEPROM
	TV-G	TV-Guide Error
	HOME-G	Failure at Home Gallery
	DTVMID	Middleware
	DTVAPP	Application
RST-MA	M-DCDC	Abnormally in RST2 of MAIN Assy. (power decrease of DC-DC converter)
	RELAY	Abnormally in RST4 of MAIN Assy. (power decrease of Relay power)
HMG		Failure at Home Media Gallery
	HMG	Home Media Gallery startup error
MA-EEP		IIC communication line between EEPROM and MAIN.

	1	5	10	15	20	25	30	35	40	
1										
5										
10										
15										
16										

Operation:

Even if [←] key or [→] key is pressed, {CLEAR <=> :YES} ⇔ {CLEAR <=> :NO} is repeated.
 If the [ENTER/SET] key is kept on pressing for 5 second when the status of this menu is <YES>, clear process will begin.

6.2.1.5 TEMPERATURE

A present temperature and the FAN rotation are displayed.
If either [←] key or [→] key is pressed, the display data is refreshed.

	1	5	10	15	20	25	30	35	40
1									
5									
10									
15									
16									

• Display/Meaning

TEMP1 : The temperature of the sensor on the panel side is displayed by the Fahrenheit (F).

TEMP2 : The temperature conversion display is done with 10 bit the A/D input value of IF uCOM 90 pin (AN4). It is displayed by both the Fahrenheit (F) and 8 bit A/D value.

(Remark:When temperature (F) of the sensor becomes more than a specified temperature, the shutdown start of processing.)

FAN1 : The value of the FAN rotating state is displayed.

STOP: stopped, LOW: slow speed, HIGH: high speed.

FAN2 : The value of the rotation state of FAN is displayed.

During a rotation of FAN, 8bit D/A value output from 2 pin (DA0) of IF uCOM is displayed.

It is displayed with OFF during a stop (only for the FHD model).

B-SENSOR : The value that indicated the degree of brightness input into an Room light sensor is displayed.

AD value when the output of the Room light sensor was input into 89 pin (AN5) of IF uCOM is displayed.

6.2.1.6 HOUR METER

1	5	10	15	20	25	30	35	40
1								
5								
10								
15								
16								

• Display/Meaning

Meaning	Item Name	Display Example	Corresponding RS-232C Command
HOUR METER (PANEL)	PANEL	00151H 21M	QS3
HOUR METER (MTB)	MTB	00151H 21M	QS3
POWER ON COUNTER	P-COUNT	00000095 TIMES	QS3
SYSTEM SERIAL	SERIAL		QS3

Note: The PANEL-side's HOUR METER/P-COUNT acquires information from the PANEL-side.

• MTB HOUR METER

In HOUR METER screen on Factory Menu, press the [ENTER] key, and then it moves to the screen to clear MTB HOUR METER. (MTB HOUR METER is cleared only.)


1	5	10	15	20	25	30	35	40
1								
5								
10								
15								
16								

Operation:

Even if [←] key or [→] key is pressed, {CLEAR <=> :YES} ⇔ {CLEAR <=> :NO} is repeated.
 If the [ENTER/SET] key is kept on pressing for 5 second when the status of this menu is <YES>, clear process will begin.
 MTB HOUR METER is cleared only. PANEL HOUR METER is not cleared.

6.2.1.7 HDMI SIGNAL INFO 1

A

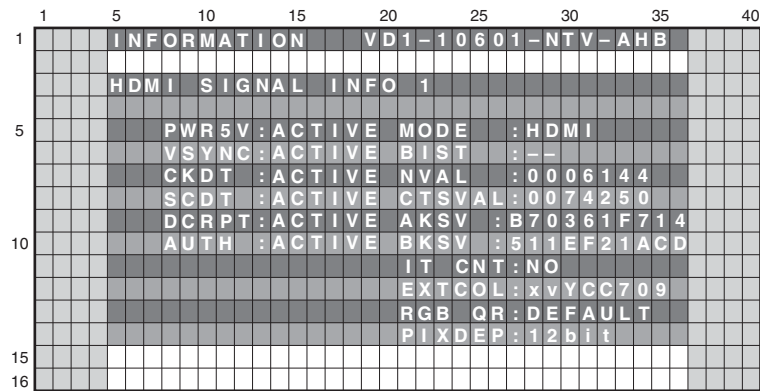

B

Displays the input signal information of HDMI terminal

Item	Meaning
PWR5V	+5 V power detection (18 pin of HDMI terminal)
VSYNC	VSYNC detection
CKDT	Clock detection
SCDT	SYNC detection
DCRPT	HDCP decryption status
AUTHEN	HDCP authentication status
MODE	HDMI mode status
BIST	----
NVAL	N value
CTSVAL	CTS value
AKSV	Shadow AKSV value
BKSV	Shadow BKSV value
IT CNT	IT content (AVI info)
EXTCOL	Extension calorimetry (AVI info)
RGV QR	RGB range (AVI info)
PIXDEP	Number of pixel/bit


C

D

E

F

6.2.1.8 HDMI SIGNAL INFO 2

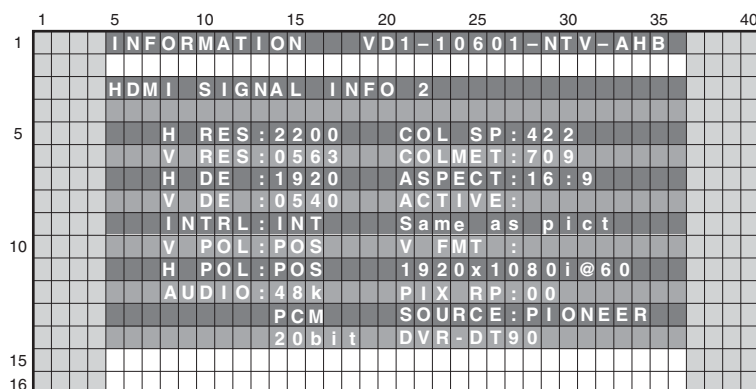

Displays input signal status of HDMI terminal

Display Item	Meaning
H RES	Number of horizontal pixels (decimal)
V RES	Number of vertical lines (decimal)
H DE	Number of effectively horizontal pixels (decimal)
V DE	Number of effectively vertical lines (decimal)
INTRL	Interlace (=INT) or progressive (=PRG)
V POL	VSYNC polarity
H POL	HSYNC polarity
AUDIO (first line)	Sampling frequency. (ex. DVD: 48kHz, CD: 44.1kHz) *1
AUDIO (second line)	PCM (PCM) or No PCM (=no PCM)
AUDIO (third line)	Quantization bit
COL SP	Color space (AVI Info) (422 or 444 or RGB) *2
COLMET	N/A
ASPECT	Aspect (AVI Info)
ACTIVE	Video active format (AVI Info)
V FMT	Video identification code (AVI Info)
PIX RP	N/A
SOURCE (first line)	Vendor name of the emission device
SOURCE (second line)	Model name of the emission device

*1: Confirm if this item is displayed when the audio is not outputted.

*2: If may not match to the state of source devices when the color is abnormal.

Display of HDMI FACTORY and correspondence of resolution

Please confirm the following 5 items when the picture doesn't come out.

Input Signal	FACTORY Display				
	H RES	V RES	H DE	V DE	V FMT
480i (525i) @ 60	858	262 or 263	720	240	720x480i @ 60
480p (525p) @ 60	858	525	720	480	720x480p @60
1080i (1125i) @ 60	2200	562 or 563	1920	540	1920x1080i @ 60
720p (750p) @ 60	1650	750	1280	720	1280x720p @ 60
1080p (1125p) @ 60	2200	1125	1920	1080	1920x1080p @ 60
1080p (1125p) @ 24	2750	1125	1920	1080	1920x1080p @ 24

6.2.1.9 VDEC SIGNAL INFO 1

A

		1		5		10		15		20		25		30		35		40
1																		
							</											

Displays signal status that is input to VDEC.

Device	Sub Address (Main screen)	Sub Address (Sub screen)	Meaning
VDEC	000h	400h	Line system distinction result
	001h	401h	VTR distinction result
	094h	494h	Slot number
	095h	495h	Color system distinction result
	096h	496h	ACC coefficient
	098h	---	3D YC flag
	1B5h	5B5h	MV detection 1
	1B6h	5B6h	MV detection 2
	1B7h	5B7h	MV detection 3

6.2.1.10 VDEC SIGNAL INFO 2

		1		5		10		15		20		25		30		35		40
D	1																	
		</																

Displays signal status that is input to VDEC.

Device	Sub Address (Main screen)	Sub Address (Sub screen)	Meaning
VDEC	205h	605h	CC detection 1
	208h	608h	CC detection 2
	20Bh	60Bh	CC-CRI detection
	20Ch	60Ch	XDS content advisor 0
	20Dh	60Dh	XDS content advisor 1

1234

6.2.2 PANEL FACTORY (+)

A

■ Operation Items

This is the menu screen for the adjustment of the panel. Data acquisition and value adjustment can be performed for the following items:

No.	Indication	Description of functions
6.2.2.1	PANEL INFORMATION	Data, such as the version of the microcomputer of the panel, product serial number, and statuses of memories for adjustment values for the main unit and for backup, are displayed.
6.2.2.2	PANEL WORKS	Operation data, such as accumulated pulse-meter count, accumulated hour-meter count, accumulated power-on count, and the temperature detected by the sensor, are displayed.
6.2.2.3	POWER DOWN	The power-down history is displayed, with the hour-meter values that indicate the hour values when power-downs occurred.
6.2.2.4	SHUT DOWN	The shutdown history is displayed, with the hour-meter values that indicate the hour values when shutdowns occurred.
6.2.2.5	PANEL-1 ADJ (+)	Settings of the driving pulse timing and driving voltage can be performed.
6.2.2.6	PANEL-2 ADJ (+)	White balance and ABL (power consumption) for the panel can be set.
6.2.2.7	PANEL FUNCTION (+)	Perform panel-degradation correction-level setting, phase adjustment of the address, and the streaking-correction setting.
6.2.2.8	ETC. (+)	Copying of backup data and clearance of various data can be performed.
6.2.2.9	RASTER MASK SETUP (+)	The mask indication (RASTER) can be set and indicated.
6.2.2.10	PATTERN MASK SETUP (+)	The mask indication (PATTERN) can be set and indicated.
6.2.2.11	COMBI MASK SETUP (+)	The mask indication (COMBI) can be set and indicated.

■ Details of indications in each layer

- In the following examples, GUI images for a 50-inch and 60-inch models are indicated.

6.2.2.1 PANEL INFORMATION

- Data, such as the version of the microcomputer of the panel, product serial number, and statuses of memories for adjustment values for the main unit and for backup, are displayed. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1		PANEL INFORMATION					
	2		MODULE	= 02 F		05 F		
5	3		-PRG	= 02 F				
	4		-DAT	= 02 F				
	5		SEQ-PRS	= 04 Y		04 F		
	6		-PRQ	= 04				
	7		-PIC	= 03 Y				
10	8		-SEQ	620Y				
	9							
	A		SERIAL					
	B		DIG.EEP	ADJUSTED				
	C		BACKUP	ADJUSTED				
15	D							
16	E							

■ Key operation

- <DOWN> : Shifting to PANEL WORKS
- <UP> : Shifting to COMBI MASK SETUP (+)
- <L/R> : Updating displayed information

■ Display items:

- MODULE : The version of data written in the Module microcomputer (IC3601) is indicated.
- PRG : The program version of the Module microcomputer is indicated.
- DAT : The data version of the Module microcomputer is indicated.
- SEQ-PRS : The version of data written in the Sequence LSI (IC3301) is indicated.
- PRG : The program version of the Sequence LSI is indicated.
- PIC : The Picture-data version of the Sequence LSI is indicated.
- SEQ : The sequence-data version of the Sequence LSI is indicated.
- SERIAL : The serial number of the module is indicated.
- DIG.EEP : The adjusted status of the EEPROM that is mounted on the DIGITAL Assy is indicated.
- BACKUP : The adjusted status of the EEPROM for backup that is mounted on the SENSOR Assy is indicated.

6.2.2.2 PANEL WORKS

- Data on operations, such as the accumulated pulse-meter counts, hour-meter count, power-on count, and temperature detected by the sensor, are sent back. No other layers are nested below this layer, and there are no adjustment items.

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1		PANEL WORKS					
	2							
5	3		PM-B1	00001057M				
	4		PM-B2	00001062M				
	5		PM-B3	00001185M				
	6		PM-B4	00000688M				
	7		PM-B5	00000926M				
10	8							
	9		HR-MTR	000028H 02M				
	A		P-COUNT	0000082 TIMES				
	B		TEMP1	+33.8 / +75.1				
	C							
15	D							
16	E							

■ Key operation

- <DOWN> : Shifting to POWER DOWN
- <UP> : Shifting to PANEL INFORMATION
- <L/R> : Updating displayed information

← Temperature unit is " °C (Centigrade) ".

■ Contents of the Display item

- PM-B1 to B5: The accumulated pulse-meter counts for the 5 blocks on the screen are indicated. (the lowest-order digit represents millions of pulses.)
- HR-MTR: The hour-meter value (accumulated power-on hours) is indicated.
- P-COUNT: The accumulated power-on count is indicated.
- TEMP1: The current panel temperature and the historical maximum temperature recorded in memory are indicated. The range of temperature indication is from -50.0 to +99.9. (The temperature unit is " °C (Centigrade) ".)

6.2.2.3 POWER DOWN

- The power-down history is displayed. The last most 8 power-down histories are displayed with the hour-meter values that indicate the hours when power-downs occurred. No other layers are nested below this layer, and there are no adjustment items.

		1	5	10	15	20	25	30	32
1		PANEL	FACT.		VD1-10605-NTV-ATB				
	1	POWER	DOWN						
2		1ST		2ND		000328H	04M		
3									
4	1	X-DRV				000177H	16M		
5	2	Y-SUS	SCAN			000041H	44M		
6	3	SCAN				000041H	32M		
7	4	POWER	SCAN			000041H	29M		
8	5	ADRS				000013H	42M		
9	6	SCAN5V	X-DCDC			000012H	11M		
A	7	Y-DCDC				000000H	51M		
B	8								
C									
D									
E									

Key operation

- <DOWN> : Shifting to SHUT DOWN
- <UP> : Shifting to PANEL WORKS
- <L/R> : Updating displayed information

<Causes of power-down and corresponding OSD indications>

Cause of power-down	OSD Indication	Cause of power-down	OSD Indication
POWER SUPPLY Unit	P-PWR	ADDRESS Assy	ADRS
SCAN Assy	SCAN	X DRIVE Assy	XDRV
5 V power for SCAN Assy	SCAN5V	DC/DC converter for X drive	X-DCDC
Y DRIVE Assy	Y-DRV	X-drive SUS circuit	X-SUS
DC/DC converter for Y drive	Y-DCDC	Digital DC/DC converter	D-DCDC
Y-drive SUS circuit	Y-SUS	Unknown	UNKNOWN

- * When power-down is confirmed, the factor is displayed as "1st", "2nd", according to the accuracy order.
- * The power-down history is not recorded when the power-down occurred at the same place and same time.

6.2.2.4 SHUT DOWN

- The shutdown history is displayed. The last most 8 shutdown histories are displayed with the hour-meter values that indicate the hours when shutdowns occurred. No other layers are nested below this layer, and there are no adjustment items.

		1	5	10	15	20	25	30	32
1		PANEL	FACT.		VD1-10605-NTV-ATB				
	1	SHUT	DOWN						
2		MAIN		SUB		000328H	04M		
3									
4	1	TMP-NG	TEMP-H			000177H	16M		
5	2	SQ-LSI	BUSY			000041H	44M		
6	3	MD-IIC	DAC1			000041H	32M		
7	4	SQ-LSI	VER-HS			000041H	29M		
8	5	MD-IIC	BACKUP			000013H	42M		
9	6	SQ-LSI	BUSY			000012H	11M		
A	7								
B	8								
C									
D									
E									

Key operation

- <DOWN> : Shifting to PANEL-1 ADJ (+)
- <UP> : Shifting to POWER DOWN
- <L/R> : Updating displayed information

- * When there is detail information when shutdown occurred, the possible defective part is displayed as Sub information.

<Cause of shut-down and corresponding OSD Indication >

Cause of shut-down (MAIN)		Cause of shut-down (SUB)	
Item	OSD Indication	Item	OSD Indication
Drive Processing IC	SQ_LSI	Communication Error	RTRY
		Drive Stop	SQ-NON
		Communication Busy	BUSY
		Version mismatching (H/S) (M/S)	VER-HS, VER-MS
MDU-IIC	MD-IIC	MAIN EEPROM Communication Error	EEPROM
		BACKUP EEPROM Communication Error	BACKUP
		DAC1 Communication Error	DAC1
		DAC2 Communication Error	DAC2
Abnormally in RST2 power supply	RST2	-	-
Panel temperature	TMP-NG	High temperature of the panel	TEMP-H
		Low temperature of the panel	TEMP-L

A

- 1

1

C

-

- F

1

- 1

- White balance can be adjusted by adjusting R, G, and B gain. Pressing the ENTER/SET key shifts the screen to the next nested layer below for item selection.

[illegible]

■ Key operation

- <DOWN> : Shifting to PANEL FUNCTION (+)
<UP> : Shifting to PANEL-1 ADJ (+)
<SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1	PANEL FACT.			VD1-10605-NTV-ATB				
	1	PANEL-2 ADJ			[TBL1 / 60VS]			
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15	D	R-HIGH <=>			: 254			
16	E							

■ Key operation

- <DOWN> : Shifting to the next item
<UP> : Shifting to the previous item
<RIGHT> : Adding by one to the adjustment/
setting value
<LEFT> : Subtracting by one from the
adjustment/setting value
<VOL+> : Adding by 10 to the adjustment/
setting value
<VOL-> : Subtracting by 10 from the
adjustment/setting value
<SET> : Determining the adjustment/setting
value and shifting to the upper layer

The ABL/WB adjustment values are grouped into up to four tables, depending on the drive sequences. The adjustment value for the actually driven table is displayed. The number of the adjustment table and the drive sequence currently selected are displayed on the right side of the third line as the On-Screen display.

Drive sequence and adjustment table

Sequence Name	Video50	Video60	Video72	Video75	PC60
Adjustment Value Table	TBL2	TBL1	TBL1	TBL3	TBL4

6.2.2.7 PANEL FUNCTION (+)

- A setting for panel degradation correction can be made. Pressing the ENTER/SET key shifts the screen to the next nested layer below for item selection.

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1							[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15	D		PANEL FUNCTION (+)					
16	E							

■ Key operation

- <DOWN> : Shifting to ETC.(+)
- <UP> : Shifting to PANEL-2 ADJ (+)
- <SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1		PANEL FUNCTION					[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15	D		R-LEVEL <=>					: LV - 3
16	E							

■ Key operation

- <DOWN> : Shifting to the next item
- <UP> : Shifting to the previous item
- <RIGHT> : Adding by one to the adjustment/setting value
- <LEFT> : Subtracting by one from the adjustment/setting value
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

6.2.2.8 ETC. (+)

- The setting about the backup of panel adjusting value and various data on panel operational information can be cleared. Pressing the ENTER/SET key shifts the screen to the next nested layer below for item selection.

		1	5	10	15	20	25	30	32
1		PANEL FACT.			VD1-10605-NTV-ATB				
	1	[TBL1 / 60VS]							
	2								
5	3								
	4								
	5								
	6								
	7								
10	8								
	9								
	A								
	B								
	C								
15	D	ETC (+)							
16	E								

■ Key operation

<DOWN> : Shifting to RASTER MASK SETUP
(+)

<UP> : Shifting to PANEL FUNCTION (+)

<SET> : Shifting to the next nested layer

[illegible]

■ Key operation

<DOWN> : Shifting to the next item

<UP> : Shifting to the previous item

<RIGHT> : Adding by one to the adjustment/
setting value

<LEFT> : Subtracting by one from the adjustment/setting value

<SET> : Determining the adjustment/setting value and shifting to the upper layer

6.2.2.9 RASTER MASK SETUP (+)

- This menu set the RASTER MASK and the drive sequence at RASTER MASK state. Pressing the ENTER/SET key shifts the screen to the next nested layer below for item selection.

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1							[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15			DRASTER MASK SETUP (+)					
16	E							

■ Key operation

- <DOWN> : Shifting to PATTERN MASK SETUP (+)
- <UP> : Shifting to ETC. (+)
- <SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1		RASTER MASK SETUP					[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15			DRST MASK 01					: 60V
16	E							

■ Key operation

- <DOWN> : Shifting to the next MASK
- <UP> : Shifting to the previous MASK
- <RIGHT> : Changing MASK sequence (+)
- <LEFT> : Changing MASK sequence (-)
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

- The MASK indication sequence can be changed among 48V, 50V, 60V, 72V, 75V and 60P using the Right or Left key. The selected sequence and the ABL/WB table are retained until the mask is turned off.

6.2.2.11 COMBI MASK SETUP (+)

- This menu set the COMBI MASK and the drive sequence at COMBI MASK state. Pressing the ENTER/SET key shifts the screen to the next nested layer below for item selection.

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1							[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15	D		COMBI MASK SETUP (+)					
16	E							

■ Key operation

- <DOWN> : Shifting to PANEL INFORMATION
- <UP> : Shifting to PATTERN MASK SETUP (+)
- <SET> : Shifting to the next nested layer

	1	5	10	15	20	25	30	32
1			PANEL FACT.		VD1-10605-NTV-ATB			
	1		COMBI MASK SETUP					[TBL1/60VS]
	2							
5	3							
	4							
	5							
	6							
	7							
10	8							
	9							
	A							
	B							
	C							
15	D		CMB MASK 01					: 60V
16	E							

■ Key operation

- <DOWN> : Shifting to the next MASK
- <UP> : Shifting to the previous MASK
- <RIGHT> : Changing MASK sequence (+)
- <LEFT> : Changing MASK sequence (-)
- <SET> : Determining the adjustment/setting value and shifting to the upper layer

- The MASK indication sequence can be changed among 48V, 50V, 60V, 72V, 75V and 60P using the Right or Left key. The selected sequence and the ABL/WB table are retained until the mask is turned off.

6.2.3 OPTION

Operation item

No.	Function	Content	RS-232C
6.2.3.1	EDID WRITE MODE <=>	DISABLE <=> ENABLE	----
6.2.3.2	ANTENNA MODE <=>	CABLE <=> AIR	----
6.2.3.3	AFT <=>	OFF <=> ON (Controls AFT action)	----
6.2.3.4	SYNC DET (+)	Exclusively used for technical analysis	----
6.2.3.5	CC (+)	Exclusively used for technical analysis	----

6.2.3.1 EDID WRITE MODE <=>

Exclusively used for production line.

6.2.3.2 ANTENNA MODE <=>

Exclusively used for production line.

6.2.3.3 AFT <=>

Exclusively used for production line.

6.2.3.4 SYNC DET (+)

Exclusively used for technical analysis (details omitted).

6.2.3.5 CC (+)

Exclusively used for technical analysis (details omitted).

6.2.4 INITIALIZE

Operation item

No.	Function	Content	RS-232C
6.2.4.1	SIDE MASK LEVEL (+)	Configure the color of the side mask.	SML
6.2.4.2	FINAL SETUP (+)	Initialize flash memorys on virgin product status	FST
6.2.4.3	HMG/HG SERVICE MODE	Enter HMG/HG SERVICE MODE	----
6.2.4.4	Wide XGA AUTO <=>	Exclusively used for technical analysis.	----

Note: When there is an altered history due to an open TRAP SW, if the "DISPLAY" key is held for at least 5 seconds on the above menu, the altered history will be cleared and the unit will be back to normal.

6.2.4.1 SIDE MASK LEVEL (+)

	1	5	10	15	20	25	30	35	40																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
1			INITIALIZE													VD1-30601-NTV-AHB																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												</

To configure sidemask level (To adjust the values, input signal is required).

Display	Content	RS-232C
SIDE MASK LEVEL <=>	Adjust Side Mask level (Adjustable range: 000 to 255)	SML

6.2.4.2 FINAL SETUP (+)

	1		5		10		15		20		25		30		35		40
1																	
					</												

- To reset each memory values to factory default values. Factory command is "FST".
- When the configuration is set to <NO> and the [ENTER/SET] key is pressed, no action is taken and the menu returns to previous screen.
- When the configuration is set to <YES> and the [ENTER/SET] key is pressed for 5 seconds, the reset action executes.

Be sure to disconnect and connect the AC cable after FINAL SETUP.

When replacing the MAIN Assy, the FINAL SETUP is required.

(3) Each item explanation (Example)

```

① ① PTP Support : Disabled
② ② T: Bus=03 Lev=01 Prnt=01 Port=00 Cnt=01 Dev#= 2 Spd=480 MxCh= 0
③ ③ D: Ver= 2.00 Cls=00(>ifc ) Sub=00 Prot=00 MxPS=64 #Cfgs= 1
④ ④ P: Vendor=0dda ProdID=2026 Rev= 1.4f
⑤ ⑤ S: Manufacturer=ICSI
⑥ ⑥ S: Product=USB2.0 Card Reader
⑦ ⑦ S: SerialNumber=0000001
⑧ ⑧ C:* #Ifs= 1 Cfg#= 1 Atr=80 MxPwr=500mA
⑨ ⑨ I: If#= 0 Alt= 0 #EPs= 2 Cls=08(stor.) Sub=06 Prot=50 Driver=usb-storage
⑩ ⑩ E: Ad=82(I) Atr=02(Bulk) MxPS= 512 Ivl=0ms
⑪ ⑪ E: Ad=01(O) Atr=02(Bulk) MxPS= 512 Ivl=0ms

```

① PTP Support

Disable	PTP Non-Support	String
Enable	PTP Support	String

② T (Topology info)

Bus	Bus Number	Decimal
Lev	Level in topology for this bus	Decimal
Prnt	Parent Device Number	Decimal
Port	Connector/Port on Parent for this device	Decimal

Cnt	Count of devices at this level	Decimal
Dev#	Device Number	Decimal
Spd	Device Speed in Mbps	Decimal
MxCh	Max Children	Decimal

③ D (Device descriptor info)

Ver	Device USB version	Hexadecimal
Cls	Device Class	Hexadecimal
Sub	Device Sub Class	Hexadecimal
Prot	Device Protocol	Hexadecimal
MxPS	Max Packet Size of Default Endpoint	Decimal
#Cfgs	Number Configurations	Decimal

④ P (Product ID info)

Vendor	Vendor ID code	Hexadecimal
ProdID	Product ID code	Hexadecimal
Rev	Product revision number	Hexadecimal

⑤ S (String descriptor info - 1)

Manufacturer	String
--------------	--------

⑥ S (String descriptor info - 2)

Product	String
---------	--------

⑦ S (String descriptor info - 3)

SerialNumber	String
--------------	--------

⑧ C (Configuration descriptor info)

#Ifs	Number of Interfaces	Decimal
#Cfg	Configuration Number	Decimal
Atr	Attributes	Hexadecimal
MxPwr	MaxPower in mA	Decimal

⑨ I (Interface descriptor info)

If#	Interface Number	Decimal
Alt	Alternate Setting Number	Decimal
#Eps	Number of Endpoints	Decimal
Cls	Interface Class	Hexadecimal(String)
Sub	Interface Sub Class	Hexadecimal
Prot	Interface Protocol	Hexadecimal
Driver	Driver name	String

⑩ E (Endpoint descriptor info)

⑪ E (Endpoint descriptor info)

Ad	Endpoint Address (I=In, O=Out)	Hexadecimal(String)
Atr	Attributes	Hexadecimal(String)
MxPS	Endpoint Max Packet Size	Decimal
Ivl	Interval (max) between transfers	Decimal

2. End method

It is the same as the case that Home Gallery displays.

6.2.4.4 Wide XGA AUTO <=>

Exclusively used for technical analysis (details omitted).


7. DISASSEMBLY

7.1 FLOWCHART OF REMOVAL ORDER FOR THE MAIN PARTS AND BOARDS

Note: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

Flowchart of removal order for the main parts and boards


It is efficient to proceed with removal of the main parts and boards in the order shown in the chart below:

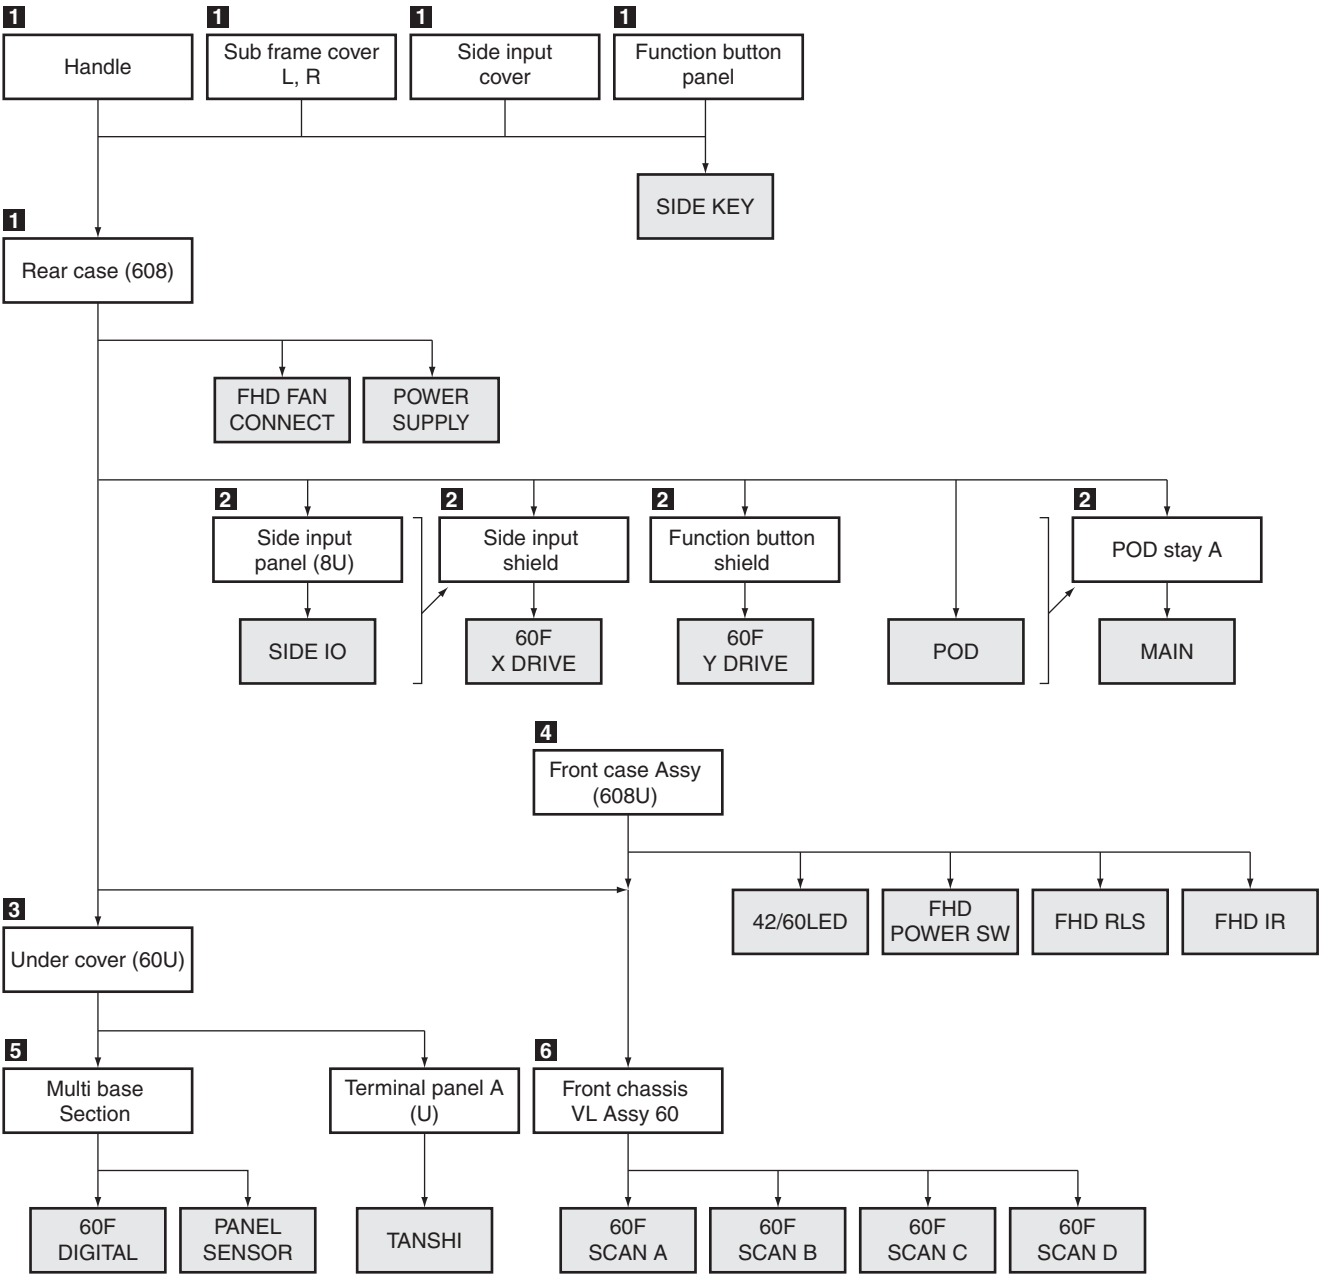

Disassembly

Speaker System

- ① Disconnect the speaker cables.
- ② Remove the four screws.
- ③ Remove the speaker system.
- ④ Remove the three brackets by removing the six screws.

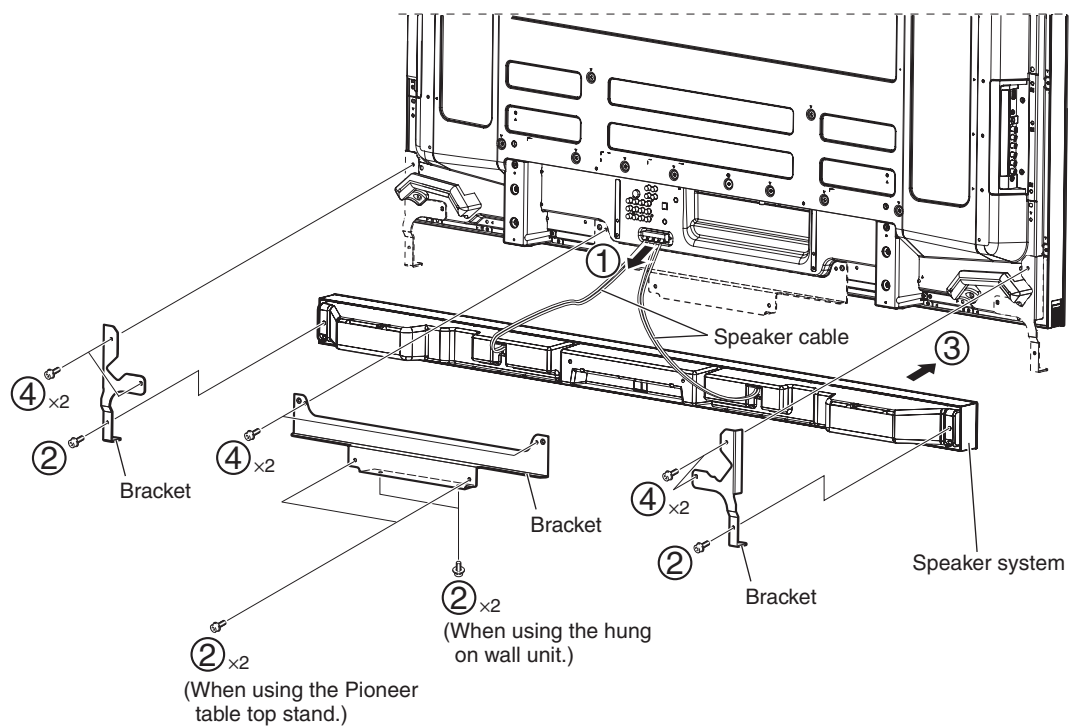

A

Disassembly




1 Rear Case (608)

● Function button panel

- ① Remove the two screws.
- ② Remove the function button panel.

● Side input cover

- ③ Remove the two screws.
- ④ Remove the side input cover.

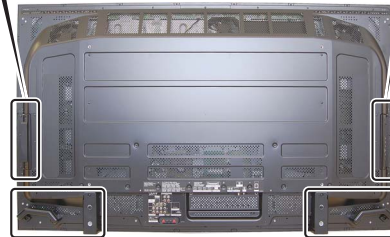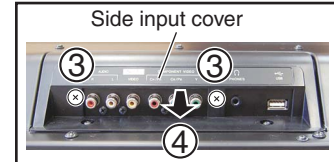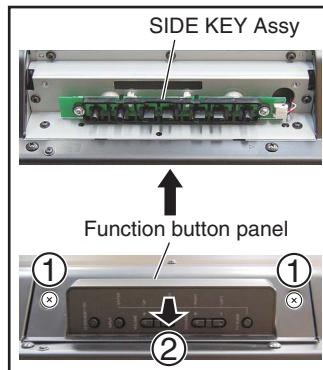


● Handle

- ⑤ Remove the four screws.
- ⑥ Remove the two handles.

● Sub frame cover L, R

- ⑦ Remove the six screws.
- ⑧ Remove the sub frame cover L and R.

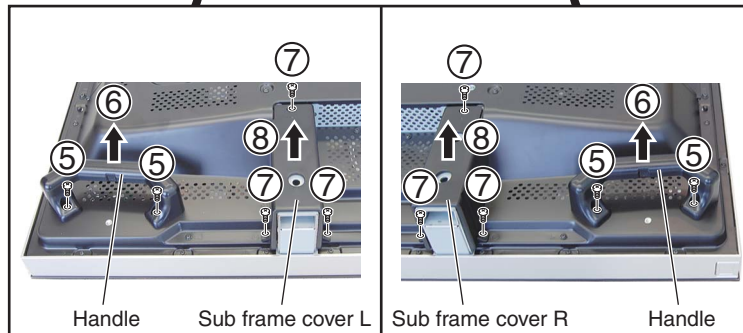

C


D

E

F

● Rear case (608)

- ① Remove the 18 screws. (APZ30P100FTB)

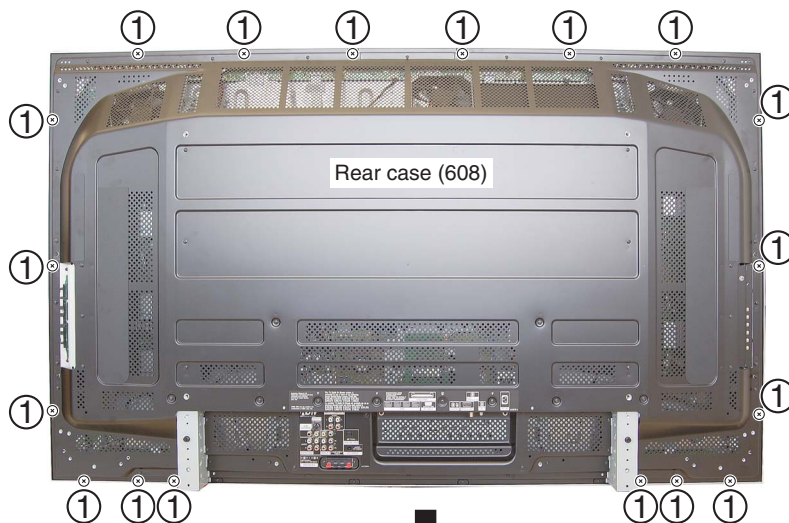


- ② Remove the 40 screws. (AMZ30P060FTB)

- ③ Remove the 6 screws. (APZ40P100FTB)

- ④ Remove the one screw. (ABA1341)


- ⑤ Remove the rear case (608).

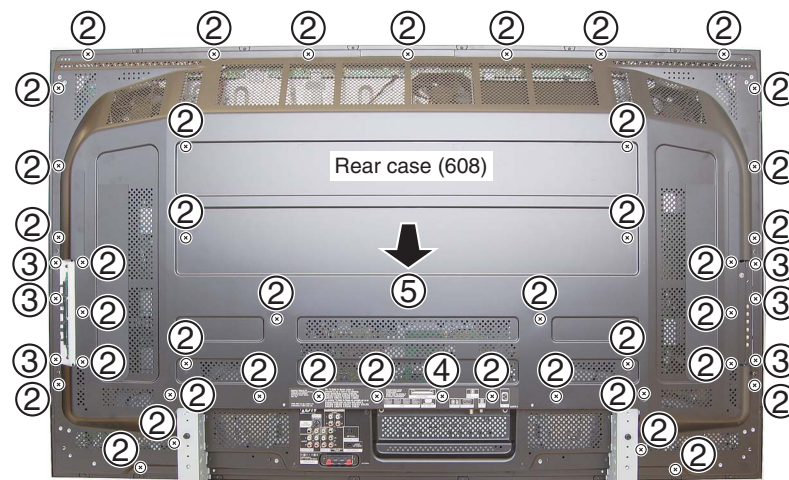

■ Tightening sequence for the screws when assembling

When assembling the Rear case (608), tighten the screws in the following sequence:

- ① Check that the two bosses for positioning are inserted.
- ② Tighten the one screw.
- ③ Tighten the one screw.
- ④ Tighten the one screw.
- ⑤ Tighten the six screws.
- ⑥ Secure the remaining screws, center ones first then the peripheral screws, to avoid an upward shift of the central part of the rear case.

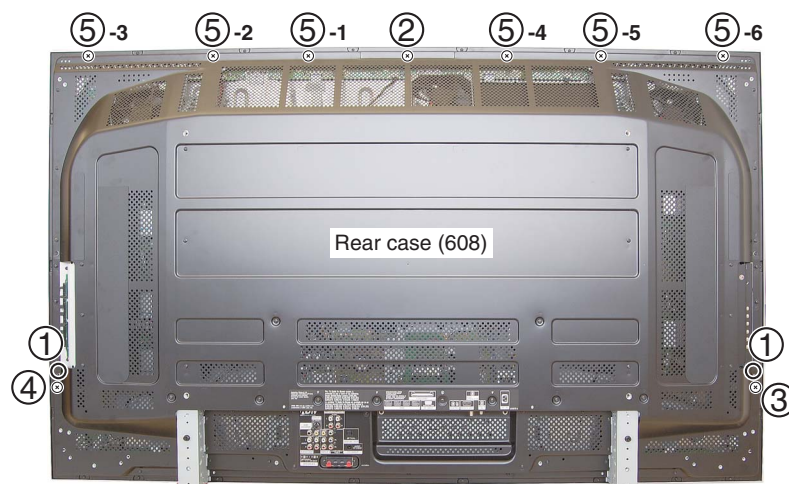


2 Access to PCB Assys


● SIDE IO Assy

- ① Remove the four screws.
- ② Remove the two screws.
- ③ Remove the four screws.
- ④ Remove the side input panel (8U).

• For 60F X DRIVE Assy

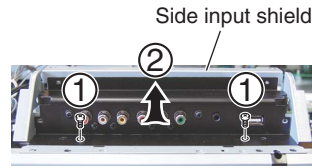

• For SIDE IO Assy

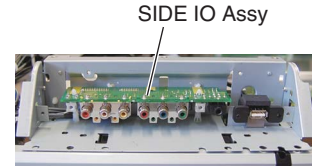

● 60F X DRIVE Assy

- ① Remove the two screws.
- ② Remove the side input shield with PCB.
- ③ Diagnose the 60F X DRIVE Assy.


• For 60F Y DRIVE Assy

Function button shield SIDE KEY Assy



● 60F Y DRIVE Assy


- ① Remove the two screws.
- ② Remove the function button shield with PCB.
- ③ Diagnose the 60F Y DRIVE Assy.

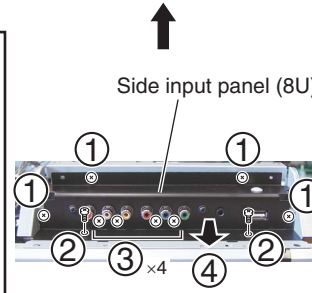


Note:

When removing the POWER SUPPLY Unit, be sure to remove not only the POWER SUPPLY Unit but entire PCB base.

PCB base POWER SUPPLY Unit

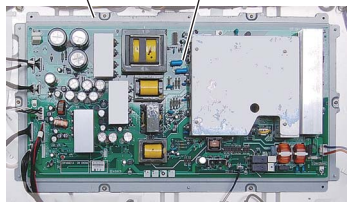

FHD FAN
CONNECT Assy

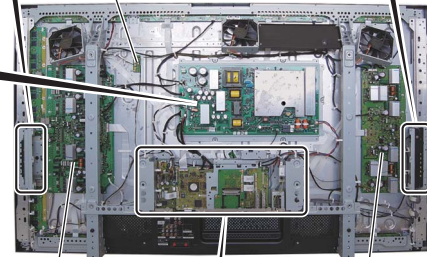

● MAIN Assy


- ① Disconnect cables, connectors, as required.
- ② Remove the two screws.
- ③ Remove the two screws.
- ④ Remove the POD cover.
- ⑤ Remove the POD stay A with PCB.

60F Y DRIVE Assy

60F X DRIVE Assy


■ How to remove the bridge connector connecting between the MAIN and TANSHI Assys

- (1) Grip the two short edges of the connector with longnose pliers.
- (2) Insert a finger between the longnose pliers and the board to protect the board and the mounted parts on the board from accidental damage by the pliers then, using your finger as a fulcrum and the pliers as a lever, pry the connector upward to remove it.

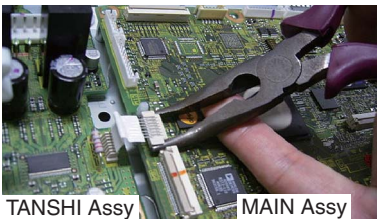

TANSHI Assy


MAIN Assy

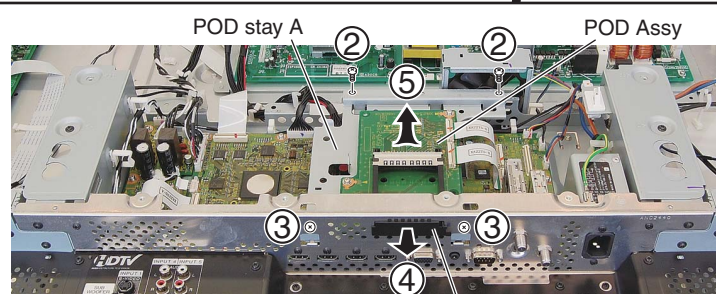

POD cover

TANSHI Assy

MAIN Assy

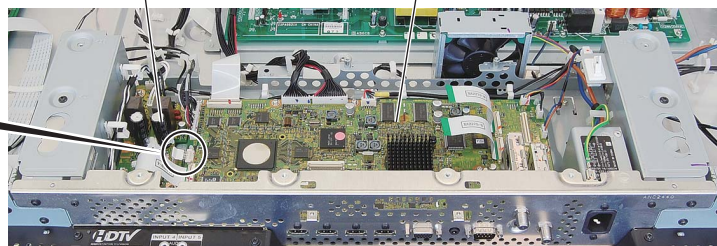


3 Under Cover (60U)

- ① Remove the four screws.
- ② Remove the two screws.
- ③ Remove the four screws.
- ④ Remove the 21 screws.
- ⑤ Remove the under cover (60U).

Note:


The wiring shown in the photo is different from the actual wiring, because the product in the photo is a prototype.
Upon servicing, be sure to restore the original wiring of the unit after repair work.

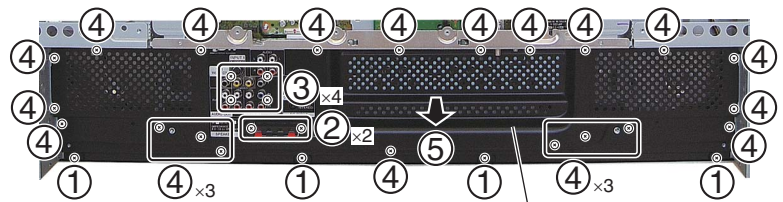

Under cover (60U)

TANSHI Assy


Terminal panel A (U)

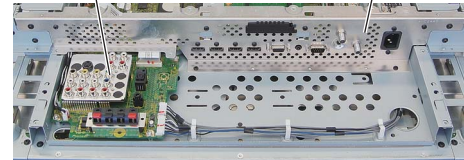

■ Tightening sequence for the screws when assembling


When assembling the under cover (60U), tighten the screws in the following sequence:

- ① Check that the two bosses for positioning are inserted.
- ② Tighten the two screws.
- ③ Tighten other screws.

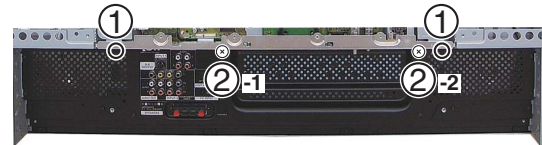

4 Front Case Assy (608U)

- ① Pull the lower part of the Front case Assy (608U) toward you and out.
- ② Remove the Front case Assy (608U), by pulling it upward.

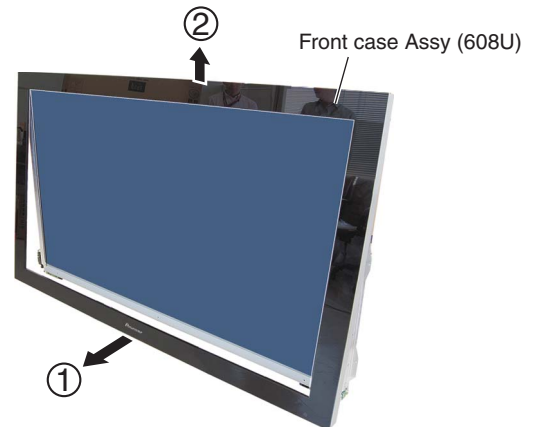


Front case Assy (608U)

■ Removal of only the Front Case Assy

If only the front case Assy must be removed, follow the procedure below:

- ① Remove the 22 screws.

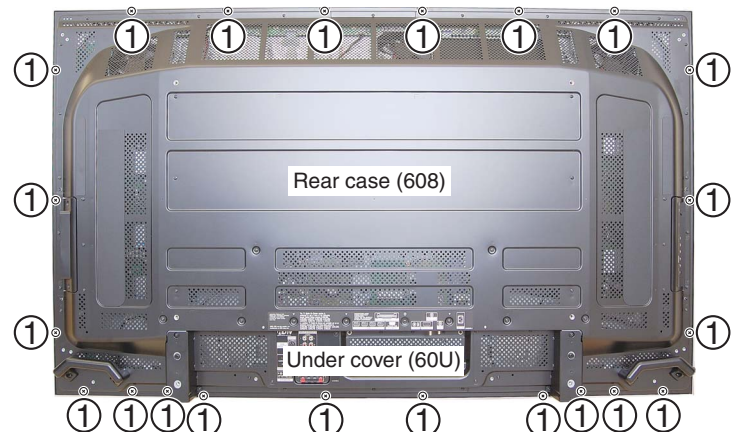


Rear case (608)

Under cover (60U)

5 Access to 60F DIGITAL Assy


- ① Disconnect the cable.
- ② Remove the two screws.
- ③ Remove the four screws.

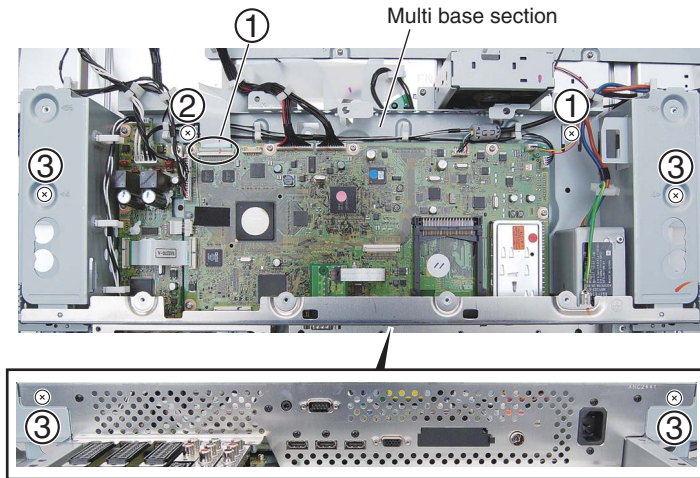

Diagnosis

- ④ Disconnect cables, connectors, as required.
- ⑤ Lift the Multi base section to the direction of the arrow.
- ⑥ Fix the multi base section to the product with two reuse wire saddles.


Reuse wire saddle

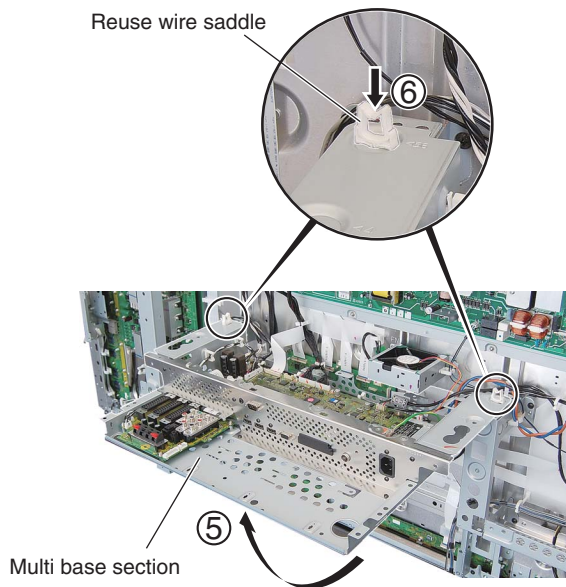

Exchange


- ④ Disconnect cables, connectors, as required.
- ⑤ Lift the Multi base section to the direction of the arrow.

Multi base section

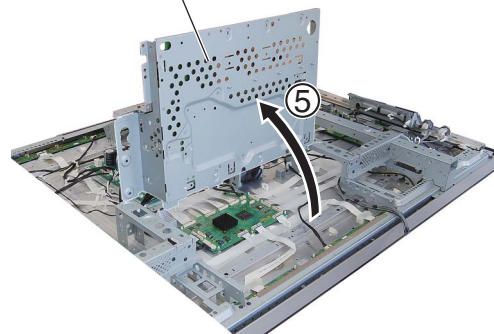


60F DIGITAL Assy

PANEL SENSOR Assy

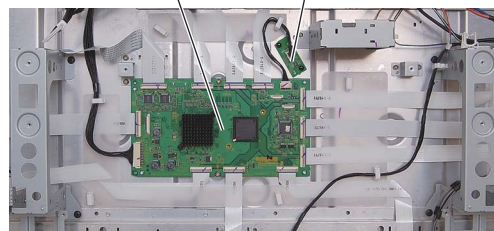


6 Exchange of SCAN IC


- ① Release the jumper wire.
- ② Remove the two screws.
- ③ Remove the side key section.

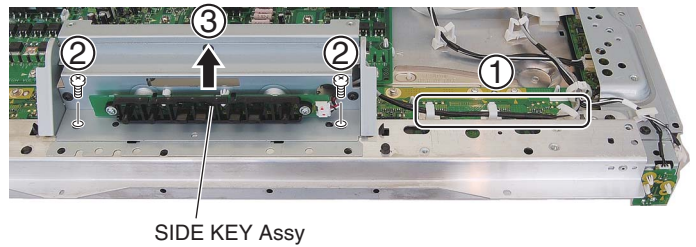

- ④ Remove the four screws.
- ⑤ Remove the two screws.
- ⑥ Remove the front chassis VL Assy 60.

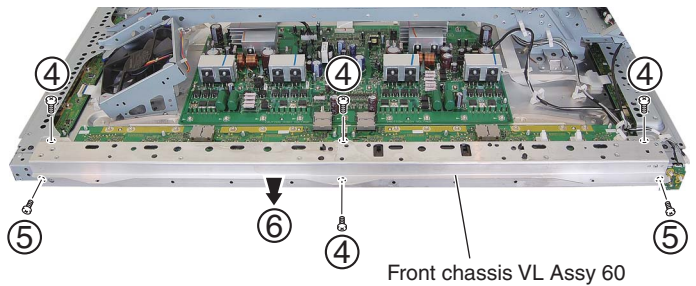


Exchange

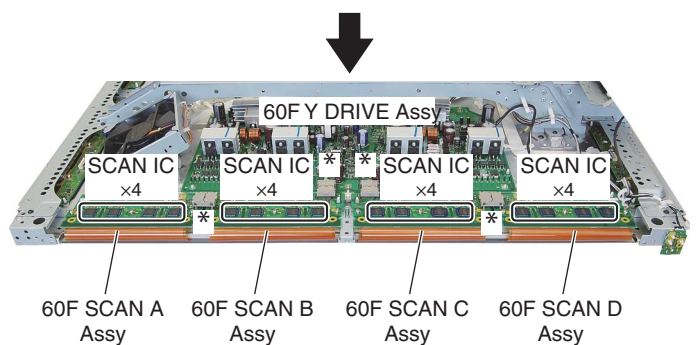


Notes for Three pieces connector 40P*

Three pieces connector 40P is a precision part. Pay attention to the handling.

Connecting Method

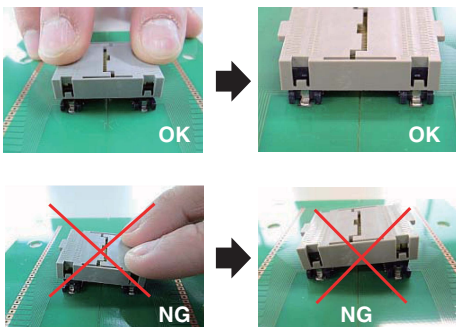

Disconnecting Method

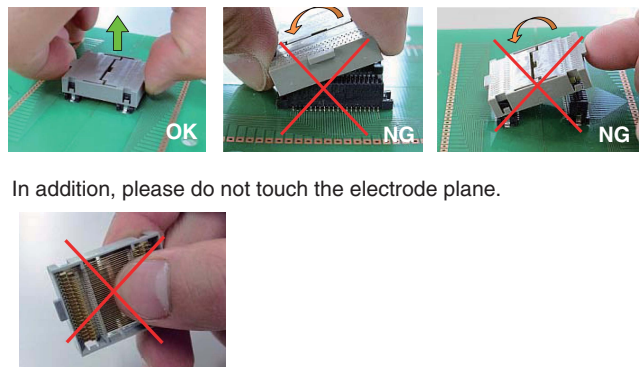

In addition, please do not touch the electrode plane.

7.3 DISASSEMBLY AND REASSEMBLY PRECAUTIONS FOR SPEAKER SYSTEM

SERVICE PRECAUTIONS

Be careful in handling this product, because scratches on cabinet coating are easily noticeable.
When working on this unit, be sure to place the cabinet on a piece of soft cloth for protection.

(1) Grille Assy


The Grille Assy is secured to the baffle plate with two-sided tape and bosses. When removing the Grille Assy, it is necessary to wear cotton gloves.

● Disassembly

1. Insert the tip of your gloved finger into the gap between the Grille Assy in front and the corner of the baffle plate so that the Grille Assy is slightly lifted.



2. Insert the gloved finger to the extent of the second joint into the gap between the cabinet and the Grille Assy.

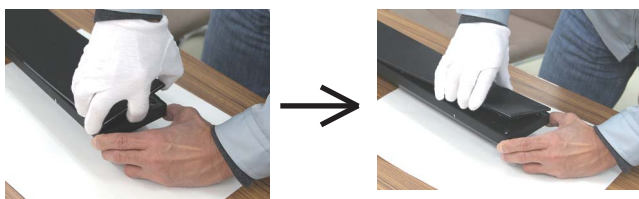

3. Alternately and gradually lift the left and right sides of the Grille Assy by about 5 cm, sliding gloved fingers along the cabinet. When lifting the Grille Assy, be sure to lift the left and right sides alternately, but not both sides simultaneously.




Note: Be careful not to bend the Grille Assy too far. Otherwise, it may be damaged.

OK: Good example **NG:** Bad example

OK



NG

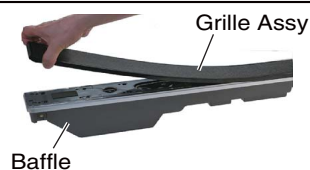

● Reassembly

Remove the old two-sided tape attached to the rear side of the Grille Assy and the front side of the baffle, and adhere new two-sided tape. Press the bosses into the baffle plate and press the entire grill into position.
(Press the bosses from the woofer frame.)

(2) Woofer (Disassembly)

The woofer is secured to the baffle plate with four screws from the inside. To remove the woofer, first remove the baffle plate.

● Reassembly

When reassembling the woofer, place it so that its ⊕ terminal is suitable for the inside. Tighten the screws to the baffle.

(3) Tweeter (Disassembly)


The tweeter is secured to the baffle plate with two screws from the inside. To remove the tweeter, first remove the baffle plate.

● Reassembly

When reassembling the tweeter, ⊕ terminal is in the topside.


Network Assy (Caution)

When removing the Network Assy, pull it out a little at a time from alternate sides, because it is seated tightly.

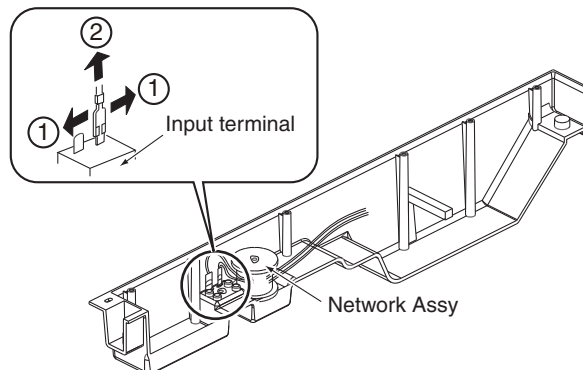

Baffle Assy (Caution)

When reassembling the cabinet and the baffle plate, secure the screws in the order shown in the figure below:

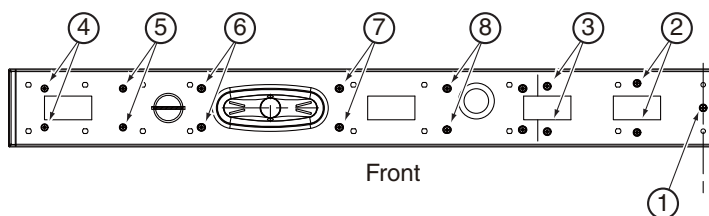

8. EACH SETTING AND ADJUSTMENT



1. At shipment, the unit is adjusted to its best conditions. Normally, it is not necessary to readjust even if an assembly is replaced. If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
2. Any value changed in Service/Factory mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
3. Use a stable AC power supply.

8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED

■ When any of the following assemblies is replaced

POWER SUPPLY Unit	➡	Refer to “8.3 HOW TO CLEAR HISTORY DATA” and “8.6 PRECAUTION ON REPLACEMENT OF THE POWER SUPPLY UNIT”.
DIGITAL Assy	➡	Writing of backup data is required. Refer to the “8.2 BACKUP OF THE EEPROM (DIGITAL ASSY)”.
X DRIVE Assy	➡	No adjustment required
Y DRIVE Assy	➡	No adjustment required
Service Panel Assy	➡	Refer to “8.3 HOW TO CLEAR HISTORY DATA” and “8.4 ADJUSTMENTS WHEN THE SERVICE PANEL ASSY IS REPLACED”.
MAIN Assy (*)	➡	No adjustment required
PANEL SENSOR Assy	➡	Writing of backup data is required. Refer to the “8.2 BACKUP OF THE EEPROM (DIGITAL ASSY)”.
Other assemblies	➡	No adjustment required

Note: Checking the Cable Card ID

The PDP has a slot for a cable card that is used for managing your information by the cable TV company. The following procedure allows you to check your Cable Card ID and the Host ID.

1. Press HOME MENU.
2. Select “Tuner Setup”. (↑/↓ then ENTER)
3. Select “Channel Setup”. (←/→ then ENTER)
4. Select “POD ID”. (↑/↓)
 - The Host ID and Cable Card ID appear.
5. Press HOME MENU to exit the menu.

(*) : When replacing the MAIN Assy, be sure to perform the FINAL SETUP.

A

Notes on replacing parts

For the parts described in the list below, replacement is required for the whole Assy, not only the defective part. If any part listed below is identified as defective and needs replacement, replace the whole Assy, and make necessary adjustments after replacement.

Reason: The whole Assy must be replaced, because adjustments and data rewriting for the Assy at the level of production line are required.

PCB Assy No.	Assy Name	Parts that Require Whole-Assy Replacement		
		Ref No.	Function Name	Part No.
AWV2457	MAIN Assy	IC4601	AV switch	R2S11006FT
		IC4701	RGB switch	R2S11001FT
		IC4703	EEPROM	BR24L01AFJ-W
		IC4801	MAIN VDEC	CM0048BF
		IC5001	A/D Converter	AD9985KSTZ-110
		IC5102	EEPROM	BR24L02FV-W
		IC5103	EEPROM	BR24L02FV-W
		IC5104	EEPROM	BR24L02FV-W
		IC5203	EEPROM	BR24L02FV-W
		IC6401	SYSTEM IC	BCM7038KPB1G-B2
		IC6602	DDR SDRAM	K4H561638H-UCB3
		IC6603	DDR SDRAM	K4H561638H-UCB3
		IC6604	DDR SDRAM	K4H561638H-UCB3
		IC6605	DDR SDRAM	K4H561638H-UCB3
		IC6902	Flash ROM	AGC1057
		IC8204	Flash ROM	AGC1049
		IC8301	Flash UCOM	AGC1037
		IC8602	Flash ROM	AGC1039
AWV2505	60F X DRIVE Assy	• Parts of X D-D CON BLOCK		
AWV2506	60F Y DRIVE Assy	• Parts of Y MAIN D-D CON BLOCK 1 • Parts of Y MAIN D-D CON BLOCK 2		

POWER SUPPLY Unit



The assembly must be replaced as a unit, and no part replacement is allowed.

MAIN Assy



No adjustment is required after replacement of parts other than those mentioned above.

DIGITAL Assy



No adjustment is required after replacement of parts other than those mentioned above.

X DRIVE Assy



No adjustment is required after replacement of parts other than those shown in "8.5 ADJUSTMENTS WHEN THE DRIVE ASSYS ARE REPLACED."

Y DRIVE Assy



No adjustment is required after replacement of parts other than those shown in "8.5 ADJUSTMENTS WHEN THE DRIVE ASSYS ARE REPLACED."

ADDRESS Assy



No adjustment required

PANEL SENSOR Assy



No adjustment is required after replacement of parts other than those mentioned above.

TANSHI Assy



No adjustment required

8.2 BACKUP OF THE EEPROM (DIGITAL ASSY)

■ Outline

Adjustment data are stored in the EEPROM (4K) on the DIGITAL Assy in the production process. Those adjustment data are also automatically stored in the EEPROM (for backup) on the PANEL SENSOR Assy.
If the DIGITAL Assy is replaced, those adjustment data for backup can be copied from the EEPROM on the PANEL SENSOR Assy to a new DIGITAL Assy.

■ Backed up data

- Drive voltage adjustment value
- Hour-meter count
- Pulse-meter count
- Panel white balance adjustment value
- Serial No.
- Drive waveform adjustment value
- P-ON counter value
- PD/SD histories

■ How to copy backup data


1. When the DIGITAL Assy is replaced with one for service (usual service)

Adjustment data can be restored by copying the data backed up in the PANEL SENSOR Assy to the EEPROM on a new DIGITAL Assy.

The EEPROM on the new DIGITAL Assy has no adjustment data, and the EEPROM for backup in the PANEL SENSOR Assy has adjustment data. After replacing the DIGITAL Assy, enter PANEL FACT. mode, display the PANEL INFORMATION page, then check if "NO DATA!" is set for "DIG. EEP" and "ADJUSTED" is set for "BACKUP". Then, proceed in the following steps:

(1) Copying, using the Factory menu

- ① Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.
- ② Turn on the power, using the remote control unit, then enter Panel Factory mode.
Copy the backup data, as shown in the figure below.

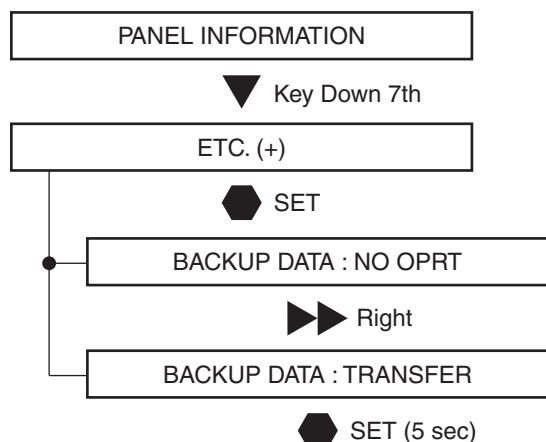

- ③ Turn the power off.
- After the DIGITAL Assy is replaced with one for service, be sure to check if "NO DATA!" is set for "DIG. EEP" on the PANEL INFORMATION page of the PANEL FACT. mode.
- If copying of the backup data fails in the above procedure, the red LED lights, and the blue LED flashes, as a warning that no backup data were copied.
- If both the DIGITAL and PANEL SENSOR Assys are to be replaced, first replace the PANEL SENSOR Assy, turn the unit on and back off again, then replace the DIGITAL Assy.

(2) Copying, using the RS-232C commands


- ① Turn on the unit, using the remote control unit or by issuing the PON command. Then issue the FAY command.
- ② Issue the BCP command to transfer the data stored in the EEPROM for backup.
- ③ Turn the power off.

2. When a secondhand DIGITAL Assy that had been mounted in another product is to be reused

As adjustment data for another product are already stored in the secondhand DIGITAL Assy, first delete those data then copy the backup data stored in the EEPROM on the PANEL SENSOR Assy.

(1) Copying, using the Factory menu

- ① Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.
- ② Turn on the power, using the remote control unit, then enter Panel Factory mode.
Copy the backup data, as shown in the figure below.

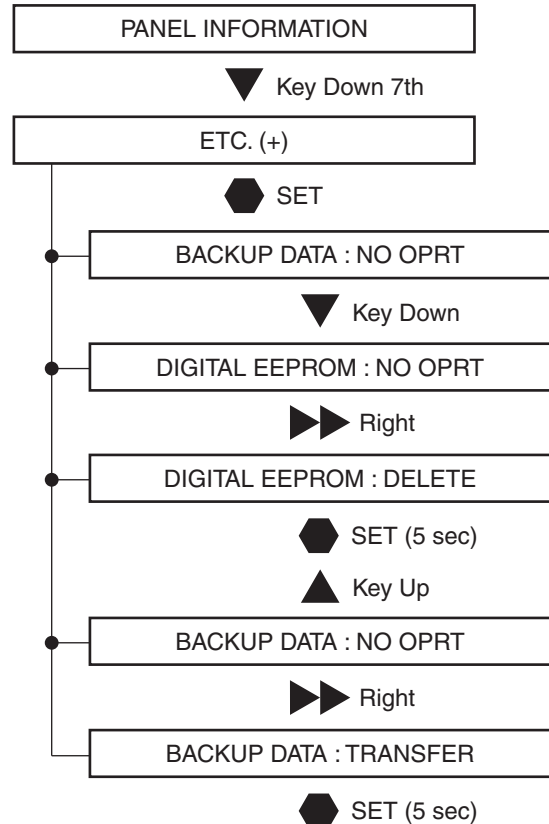

- ③ Turn the power off.

Note:

If the secondhand DIGITAL Assy is mounted in the product then the unit is turned on then back off again, the data in the EEPROM on the DIGITAL Assy are copied over the EEPROM in the PANEL SENSOR Assy. Thus the backup data can never be restored. During the first power-on after the DIGITAL Assy is replaced, be sure to enter Factory mode to copy the backup data. Or, before removing the secondhand DIGITAL Assy from the original product, delete the adjustment data on it, using the Factory mode (DIGITAL EEPROM: DELETE), mount it to the product to be repaired, then copy the data from the backup EEPROM.

(2) Copying, using the RS-232C commands


- ① Turn on the unit, using the remote control unit or by issuing the PON command. Then issue the FAY command.
- ② Issue the UAJ command to delete data stored in the EEPROM on the DIGITAL Assy.
- ③ Issue the BCP command to transfer the data stored in the EEPROM for backup.
- ④ Turn the power off.

3. In a case where normal backup data are not stored in the backup EEPROM because the EEPROM on the DIGITAL Assy is defective, etc., and where manually adjusted values are to be applied to the product

Note: In this section, it is assumed that settings for various items have been completed, using Factory menu or RS-232C commands.

(1) Method using the Factory menu

- ① Set various setting/adjustment values.
- ② Proceed in the following steps.

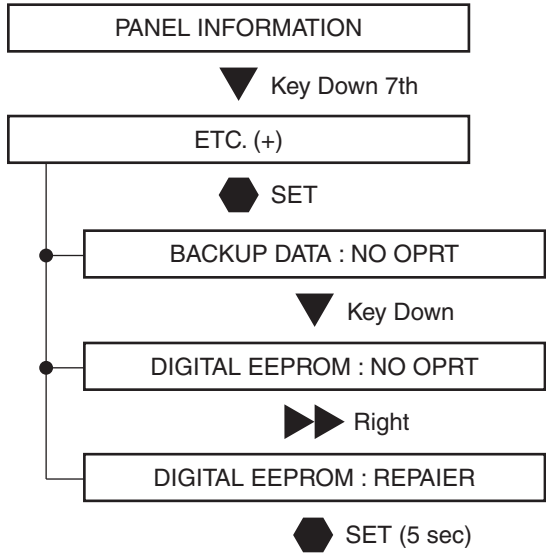

- ③ Turn the power off.

Note:

When a DIGITAL Assy with an EEPROM in which adjustment data are stored is mounted, this step is not required after manual adjustment. ("DIGITAL EEPROM: REPAIR" is not indicated.)

(2) Method using the RS-232C commands

Issue the FAJ command.

8.3 HOW TO CLEAR HISTORY DATA

■ Clearance of various logs after the Assys are replaced

Besides adjustment data, data on accumulated power-on time and logs on defective parts of the product are backed up. Some of those data must be cleared after the Assys are replaced for service.

(1) Clearance of logs, using the RS-232C commands

Item	Content	When the Panel is replaced	When the POWER SUPPLY Unit is replaced	When the Other parts is replaced	RS-232C Commands
Hour-meter	Accumulated power-on time	Must be cleared	No need to be cleared	No need to be cleared	CHM
Pulse-meter	Accumulated number of pulses emitted	Must be cleared (mandatory)	No need to be cleared	No need to be cleared	CPM
Shutdown history	Cause of an SD and hour-meter count	Must be cleared	No need to be cleared	No need to be cleared	CSD
Power-down history	Cause of an PD and hour-meter count	Must be cleared	No need to be cleared	No need to be cleared	CPD
Power-on counter	Relay-on count	No need to be cleared	Must be cleared (mandatory)	No need to be cleared	CPC
MAX TEMP	Historical max. temperature	Must be cleared	Must be cleared	Must be cleared	CMT

Notes:


- As the pulse-meter count is used for each correction function, it must be cleared when an Assy relevant to correction functions is replaced.
- When clearing logs, using the RS-232C commands, first enter Factory mode (by issuing FAY or PFY), then issue the corresponding command.

(2) Clearance of logs, using the Factory menu

① Plug in the AC cord, press the Power switch on the unit to set it to ON, then enter Standby mode.

② Turn on the power, using the remote control unit, then enter Panel Factory mode.

Delete various logs, as shown in the figure below.

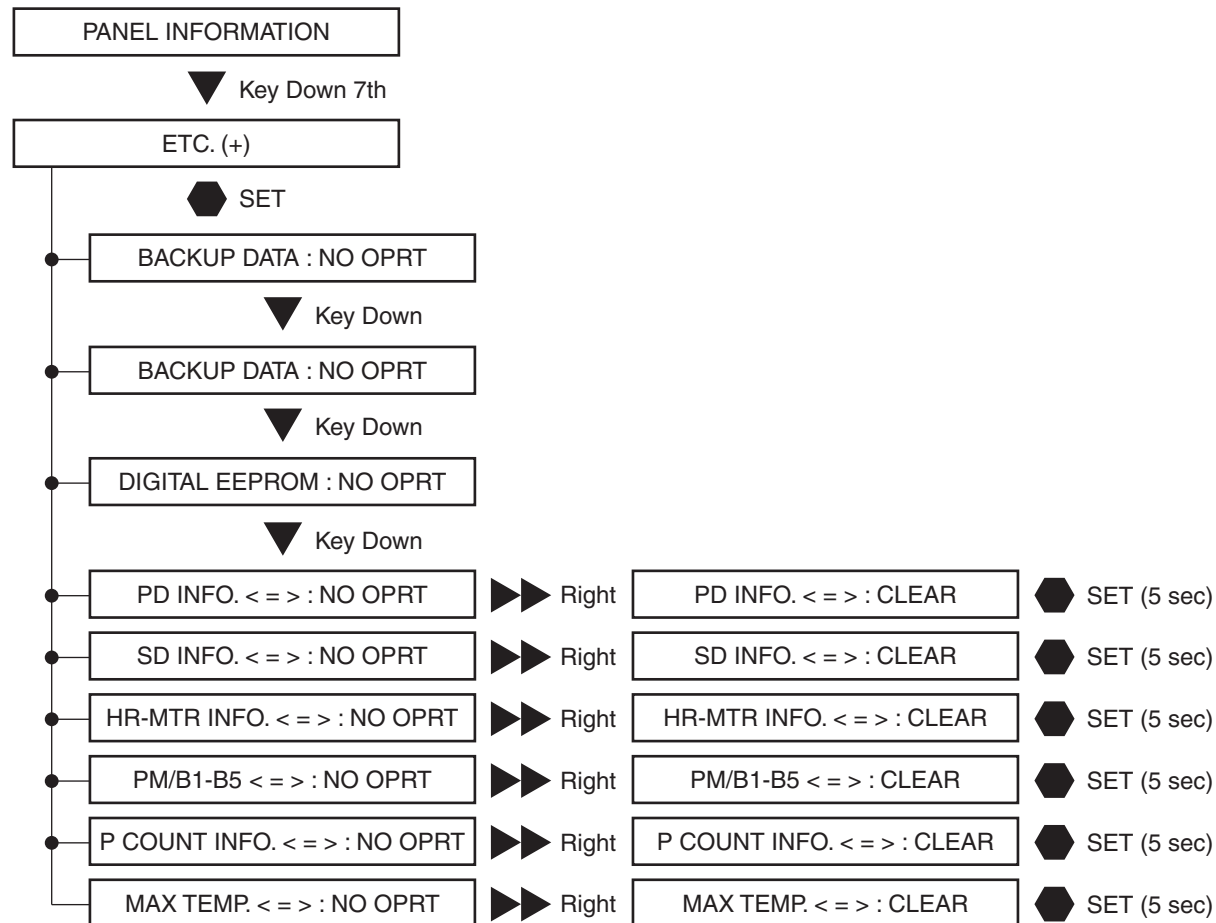

③ Turn the power off.

8.4 ADJUSTMENT WHEN THE SERVICE PANEL ASSY IS REPLACED

After the panel is replaced with one for service, voltage margin adjustment is required.


[Preparation]

Basically, voltage margin adjustment is performed using the Panel Factory menu.

After the panel is replaced and the unit is turned on, clear the pulse meter first.

For details on how to clear the pulse meter, see "8.3 HOW TO CLEAR HISTORY DATA".

- *1: As various corrections are made referring to the pulse-meter count to calculate how long the panel has been used, if adjustment of the panel for service is performed without clearing the pulse-meter count, proper adjustments will not be performed.
- *2: The drive sequence for 60-Hz video is used for adjustment. When adjustment is made using the Panel Factory menu, the current drive sequence is displayed on the screen, as shown in the figure below. Make sure that 60VS is always indicated during adjustment.

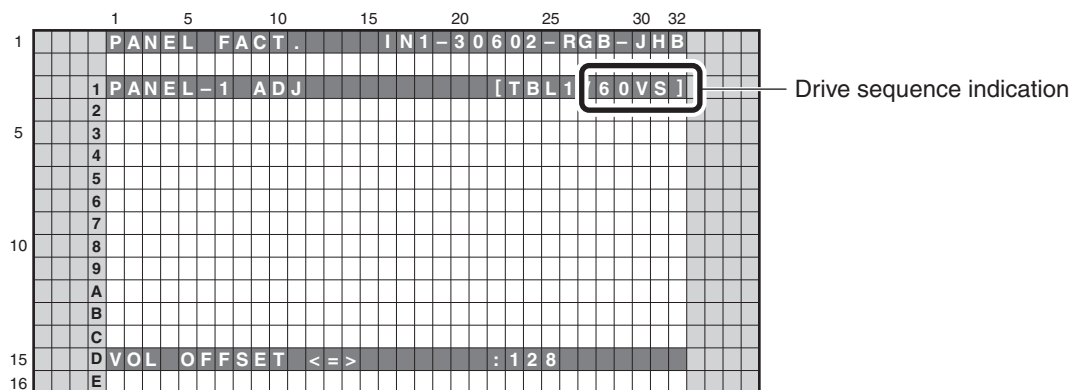

Example of the On-Screen display during Panel Factory mode

[Supplement]

In the "PANEL-1ADJ" layer, the Panel White Balance value is reset to default, Panel Gamma is set to Straight, Noise is set to OFF, LUT mode is set to ON and Reset active control is set to OFF.

In this case, "---/****" (**** represents the current drive sequence) is displayed on the third line of the On-Screen display during Panel Factory mode.

If adjustment is performed using RS-232C commands, the following commands must be transmitted for preparation:

- [PAV S00] : To set panel drive mode to Factory
- [VFQ S03] : To set Drive Sequence to Video 60-Hz
- [WBI S01] : To temporarily reset the Panel WB adjustment value to default (WBI S00 cancels this setting.)
- [PGR S00] : To set the gamma R value to that for Factory mode
- [PGG S00] : To set the gamma G value to that for Factory mode
- [PGB S00] : To set the gamma B value to that for Factory mode
- [DIZ S03] : Dither ON, L dither ON, noise OFF.
- [\$1800000001] : LUT mode ON
- [\$1000003F00] : Reset active control OFF.

*: If the unit is shut down during the above adjustment flow, resend the above commands from the beginning.

A

Overview

Preparation

Clearing of the hour meter and pulse meter
Aging with RST MASK 01 (White) displayed

B

Main flowchart (1) (VOL OFFSET check)

Checking VOL OFFSET (min)
(RST MASK 12: Light blue)

OK

Checking VOL OFFSET (min)
(RST MASK 10: Pink)

OK

Checking VOL OFFSET (max)
(RST MASK 02: Red)

OK

Checking VOL OFFSET (max)
(RST MASK 03: Green)

OK

C

Main flowchart (2) (VOL YNOFS check)

Checking VOL YNOFS3/4/1 (min)
(RST MASK 16: Green 1023+)

OK

Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)

OK

Checking VOL YNOFS3/4/1 (max)
(RST MASK 23: Magenta 3SF)

OK

D

E

Adjustment completed

F

Replacement with the parts for service

- Re-replacement of the panel
- Replacement of the DRIVE Assy

Recovery flowchart (1) (Changing the VOL OFFSET setting voltage)

(1-1)
Checking VOL OFFSET (min)
(RST MASK 12: Light blue)

NG

(1-2)
Checking VOL OFFSET (min)
(RST MASK 10: Pink)

NG

Checking VOL OFFSET (max)
(RST MASK 02: Red)

NG

Checking VOL OFFSET (max)
(RST MASK 03: Green)

NG

Checking VOL OFFSET (max)
(RST MASK 03: Green)

OK

Recovery flowchart (1) (Changing the VOL OFFSET setting voltage)

(1-3)
Checking VOL OFFSET (max)
(RST MASK 02: Red)

NG

(1-4)
Checking VOL OFFSET (max)
(RST MASK 03: Green)

NG

Checking VOL OFFSET (min)
(RST MASK 12: Light blue)

NG

Checking VOL OFFSET (min)
(RST MASK 10: Pink)

NG

Checking VOL OFFSET (min)
(RST MASK 10: Pink)

OK

Recovery flowchart (2) (Changing the VOL YNOFS setting voltage)

(2-1)
Checking VOL YNOFS3/4/1 (min)
(RST MASK 16: Green 1023+)

NG

Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)

NG

Checking VOL YNOFS3/4/1 (max)
(RST MASK 23: Magenta 3SF)

NG

Checking VOL YNOFS3/4/1 (max)
(RST MASK 23: Magenta 3SF)

OK

Recovery flowchart (2) (Changing the VOL YNOFS setting voltage)

(2-2)
Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)

NG

Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)

OK

Recovery flowchart (2) (Changing the VOL YNOFS setting voltage)

(2-3)
Checking VOL YNOFS3/4/1 (max)
(RST MASK 23: Magenta 3SF)

NG

Checking VOL YNOFS3/4/1 (min)
(RST MASK 16: Green 1023+)

NG

Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)

NG

Checking VOL YNOFS3/4/1 (min)
(RST MASK 15: Red 1023+)


OK

Note on voltage calculation

When calculating the setting voltage, round off to get rid of the fractional part.

Range of margin measuring

Read the voltage within the hysteresis (stricter value).

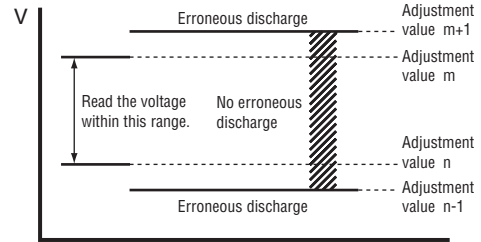

Definition of limits for the voltage margins (abnormal lit/dead cells)

Abnormal lit cells:

- Five or fewer abnormal cells on the whole screen
- Two or fewer abnormal cells within a radius of 1 cm

Abnormal dead cells

- Fifteen or fewer abnormal cells on the whole screen
- Two or fewer abnormal cells within a radius of 1 cm

*: Abnormal cells visually recognizable at a distance of 1 meter from the panel must be counted.

*: Cells displayed abnormally for less than one second are not counted as abnormal cells.


Definition of tones for the measuring signals

FHD signal (1920*1080)/Video 60-Hz sequence
/Dither: ON, L dither: ON, noise: OFF

White	RST MASK 01 (R 1023 /G 1023 /B 1023)
Red	RST MASK 02 (R 1023 /G 0 /B 0)
Green	RST MASK 03 (R 0 /G 1023 /B 0)
Pink	RST MASK 10 (R 908 /G 718 /B 908)
Light blue	RST MASK 12 (R 447 /G 812 /B 812)
Red 1023+	RST MASK 15 (R 1023 /G 120 /B 120)
Green 1023+	RST MASK 16 (R 120 /G 1023 /B 120)
Magenta 3SF	RST MASK 23 (R 169 /G 0 /B 169)

■ Preparation before adjustment

[Replacement with the panel for service is completed.]

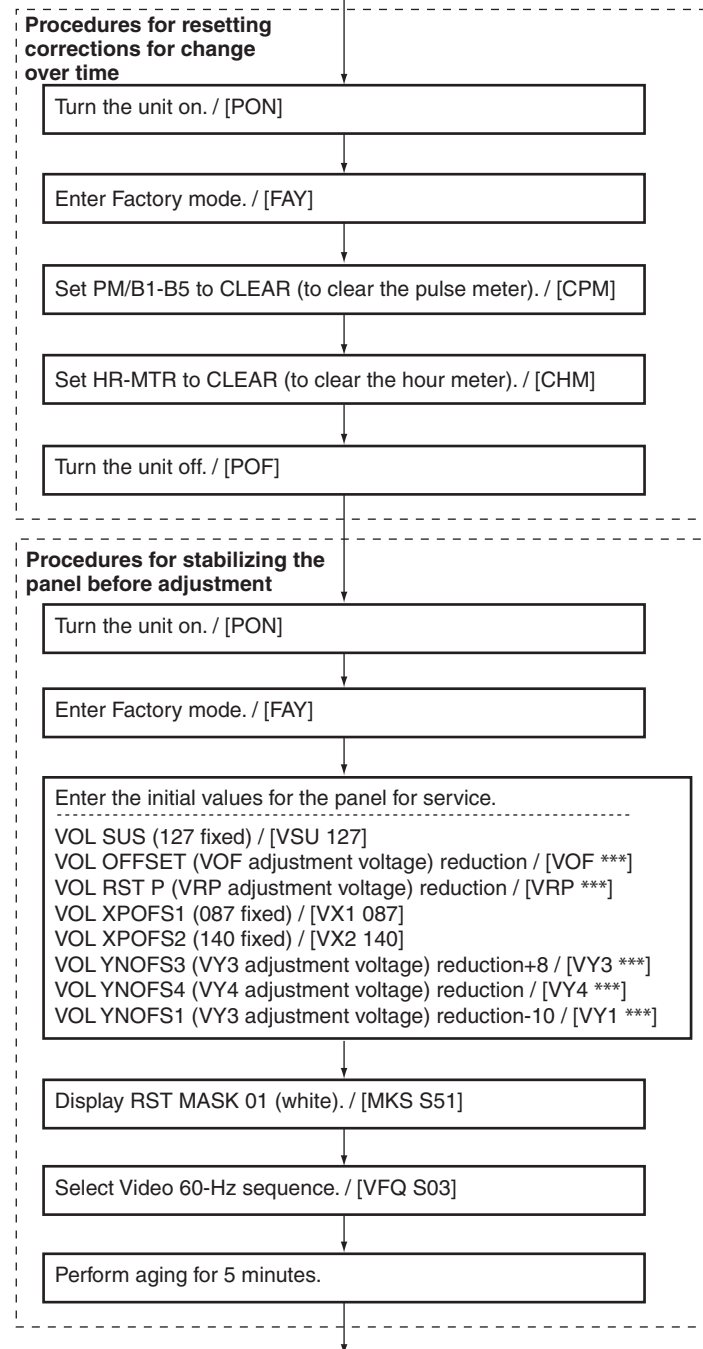

Indication example of the adjustment label of service panel

AWV9999- VOF=35V
VRP=175V VY3=190+α V VY4=209
Hour Meter_____H
 Data 07/05/24 Chassis CXX99999
 Time 18:27 PnI FTEST123456

Note: α V sets adjustment value to 8.

* To store the [VFQ S03] command in memory, transmit it after displaying the mask.


Note: If you perform the adjustment by RS-232C commands, the following commands must be added before going to the main flowchart (1):

[PAV S00] : To set panel drive mode to Factory
 [VFQ S03] : To set Drive Sequence to Video 60-Hz
 [WBI S01] : To temporarily reset the Panel WB adjustment value to default (WBI S00 cancels this setting.)
 [PGR S00] : To set the gamma R value to that for Factory mode
 [PGG S00] : To set the gamma G value to that for Factory mode
 [PGB S00] : To set the gamma B value to that for Factory mode
 [DIZ S03] : Dither ON, L dither ON, noise OFF.
 [\$1800000001] : LUT mode ON
 [\$1000003F00] : Reset active control OFF.

A


■ Main flowchart (1)...Checking VOL OFFSET

[From Preparation]

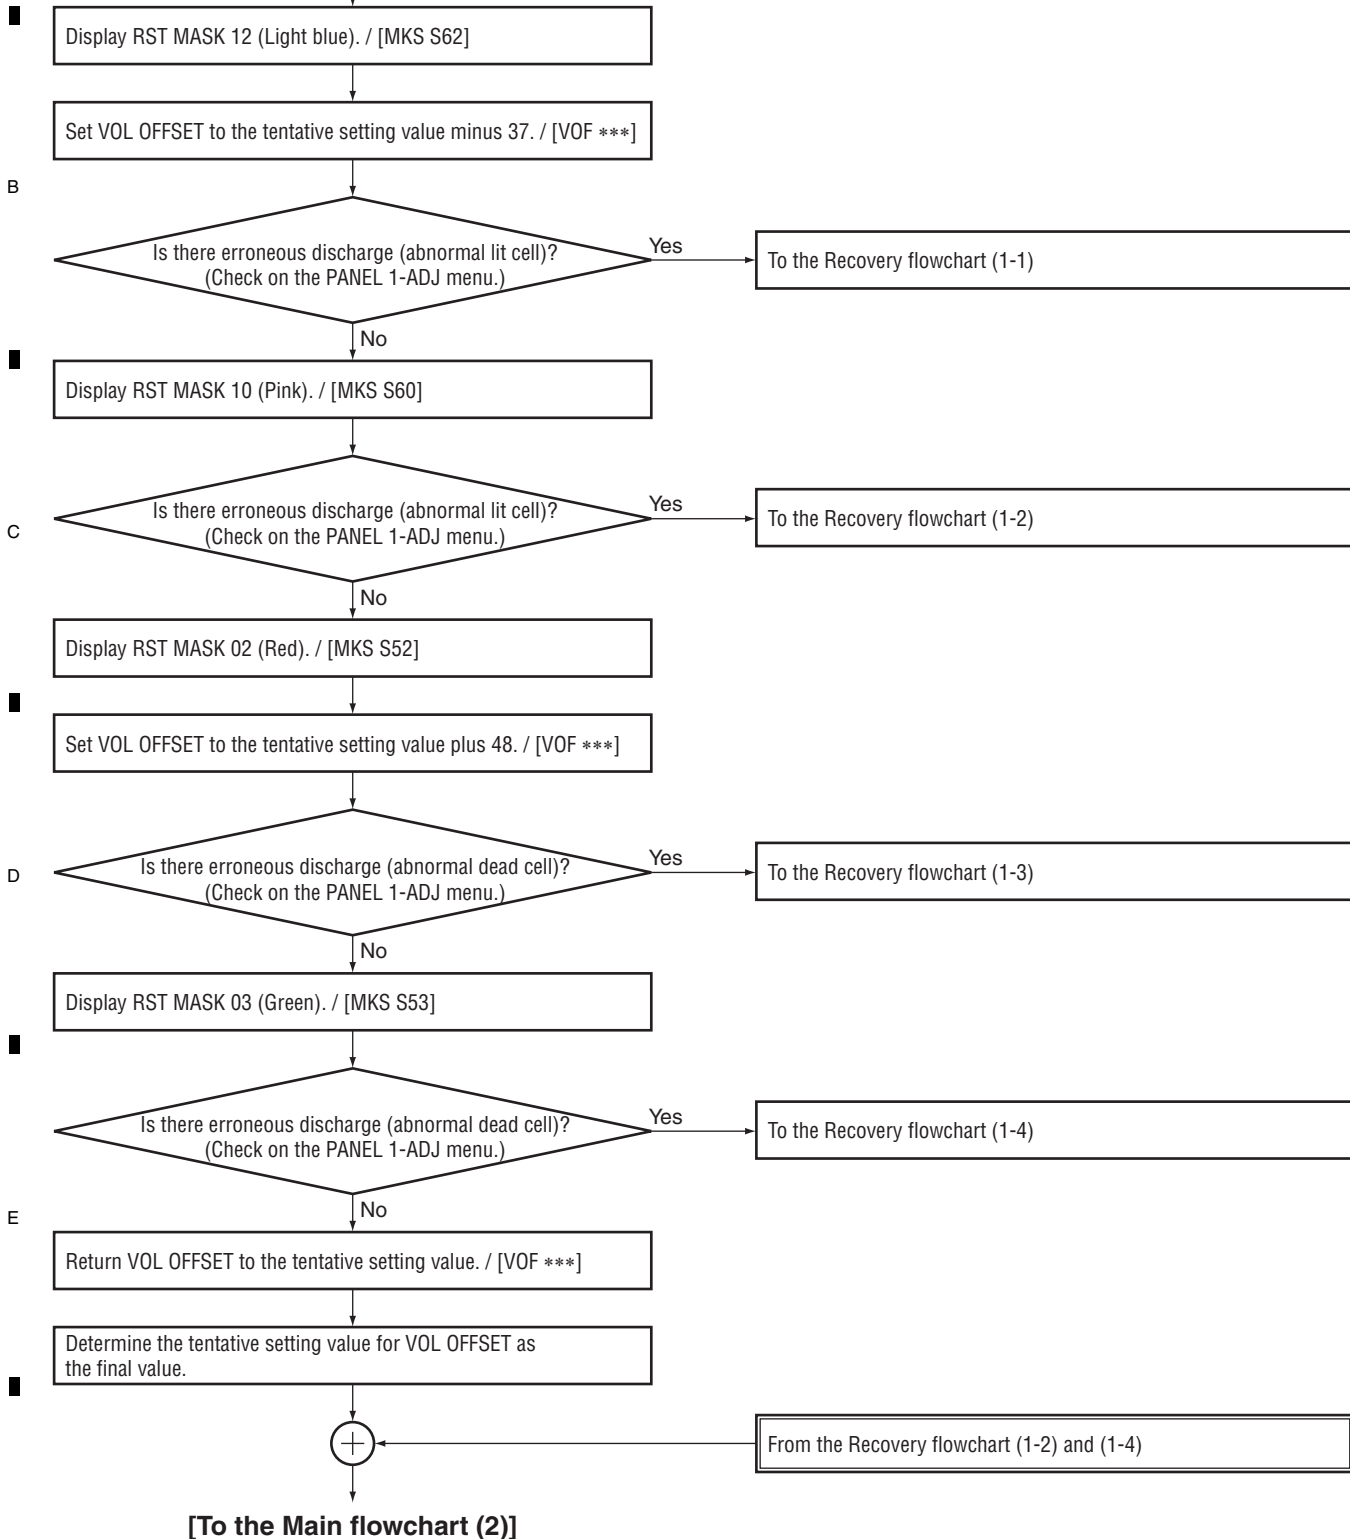

F

■ Main flowchart (2)...Checking VOL YNOFS3/4/1

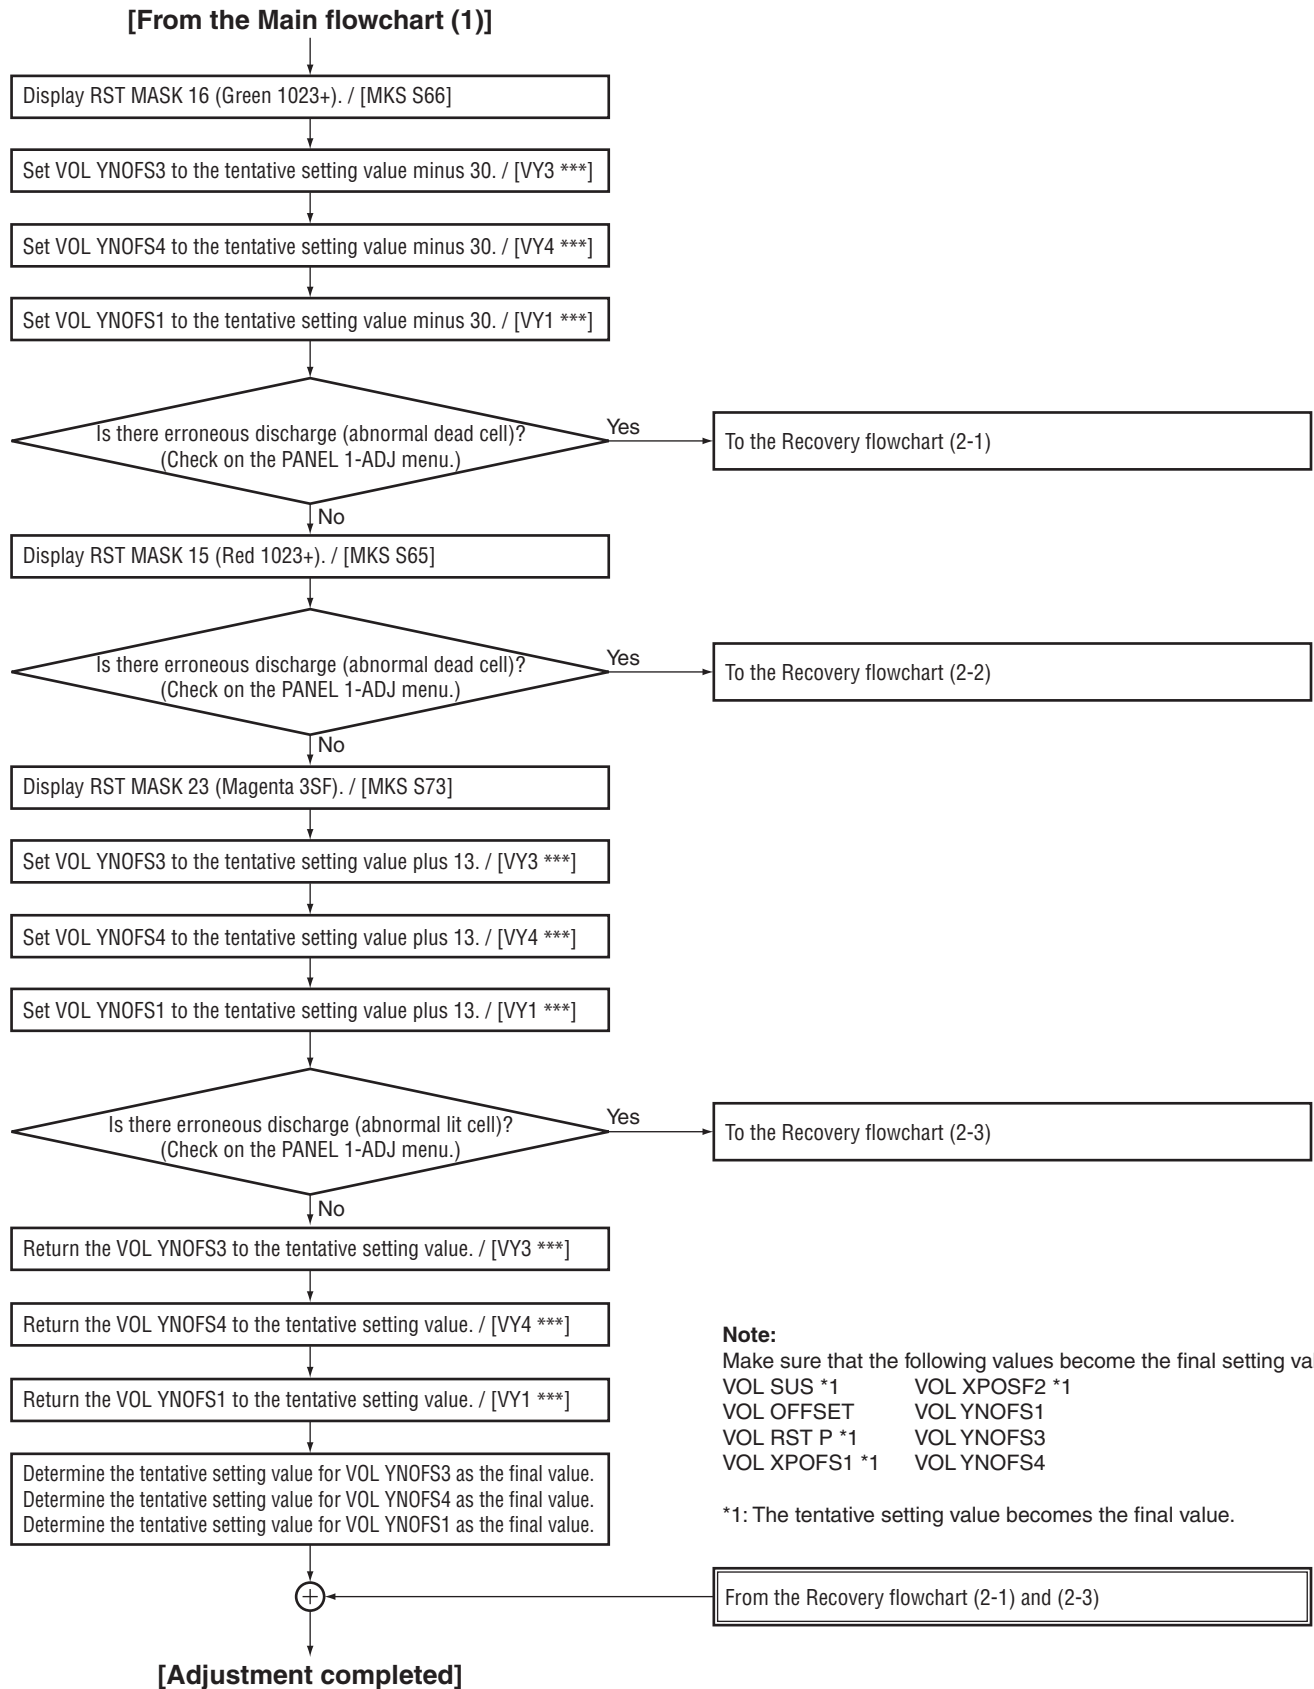

A

■ Recovery flowchart (1-1)...Changing the VOL OFFSET setting voltage

[From the Main flowchart (1)]

RST MASK 12 (Light blue)

Gradually increase the VOL OFFSET value until disappear the discharge (lit cell).
The VOL OFFSET value must be 101 or less.

Current VOL OFFSET > 101?

Yes

Replacement of abnormal circuits or
re-replacement of the panel required

No

Display RST MASK 10 (Pink). / [MKS S60]

[To the Recovery flowchart (1-2)]

C

■ Recovery flowchart (1-2)...Changing the VOL OFFSET setting voltage

[From the Main flowchart (1) / Recovery flowchart (1-1)]

RST MASK 10 (Pink)

Gradually increase the VOL OFFSET value until disappear the discharge (lit cell).
The VOL OFFSET value must be 101 or less.

Current VOL OFFSET > 101?

Yes

Replacement of abnormal circuits or
re-replacement of the panel required

No

Display RST MASK 02 (Red). / [MKS S52]

Set VOL OFFSET to the current setting value plus 85. / [VOF ***]

Is there erroneous discharge (abnormal dead cell)?
(Check on the PANEL 1-ADJ menu.)

Yes

Replacement of abnormal circuits or
re-replacement of the panel required


No

Ⓐ


D

E

F

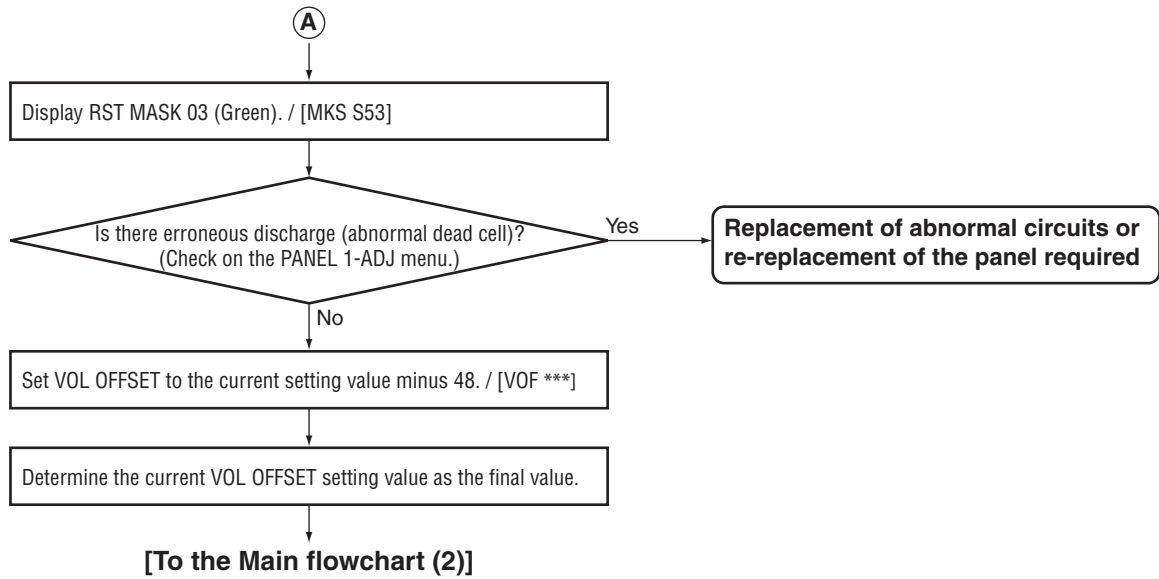

Recovery flowchart (1-3)...Changing the VOL OFFSET setting voltage

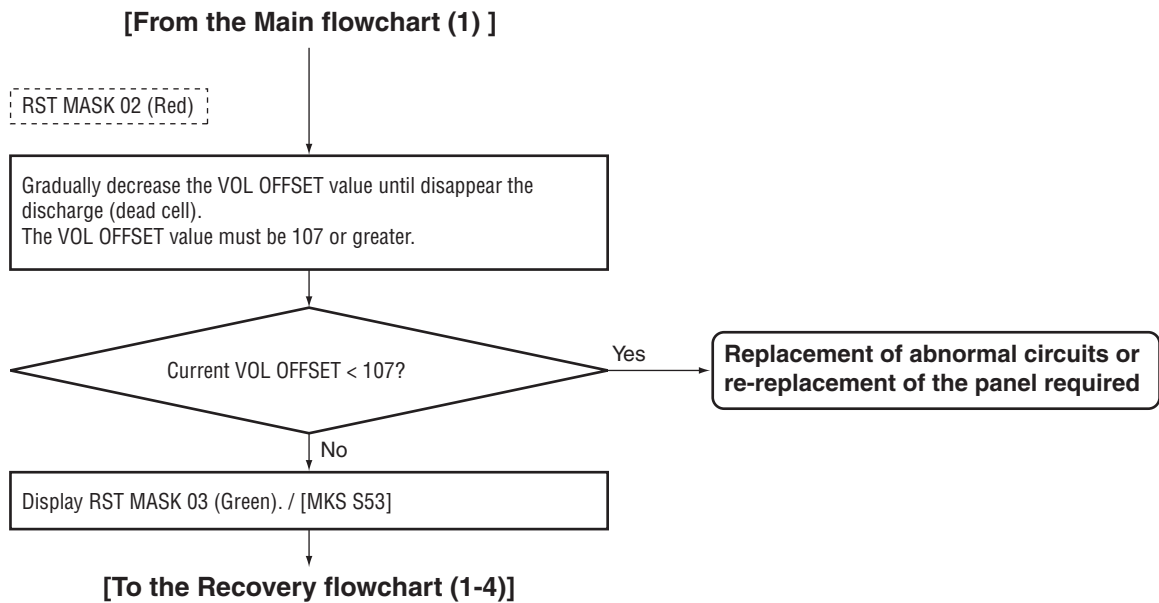

Recovery flowchart (1-4)...Changing the VOL OFFSET setting voltage

[From the Main flowchart (1) / Recovery flowchart (1-3)]

RST MASK 03 (Green)

Gradually decrease the VOL OFFSET value until disappear the discharge (dead cell).
The VOL OFFSET value must be 107 or greater.

Current VOL OFFSET < 107?

Yes

Replacement of abnormal circuits or
re-replacement of the panel required

No

Display RST MASK 12 (Light blue). / [MKS S62]

Set VOL OFFSET to the current setting value minus 85. / [VOF ***]

Is there erroneous discharge (abnormal dead cell)?
(Check on the PANEL 1-ADJ menu.)

Yes

Replacement of abnormal circuits or
re-replacement of the panel required

No

Display RST MASK 10 (Pink). / [MKS S60]

Is there erroneous discharge (abnormal dead cell)?
(Check on the PANEL 1-ADJ menu.)

Yes

Replacement of abnormal circuits or
re-replacement of the panel required


No

Set VOL OFFSET to the current setting value plus 37. / [VOF ***]

Determine the current VOL OFFSET setting value as the final value.

[To the Main flowchart (2)]

Recovery flowchart (2-1)...Changing the VOL YNOFS3/4/1 setting voltage

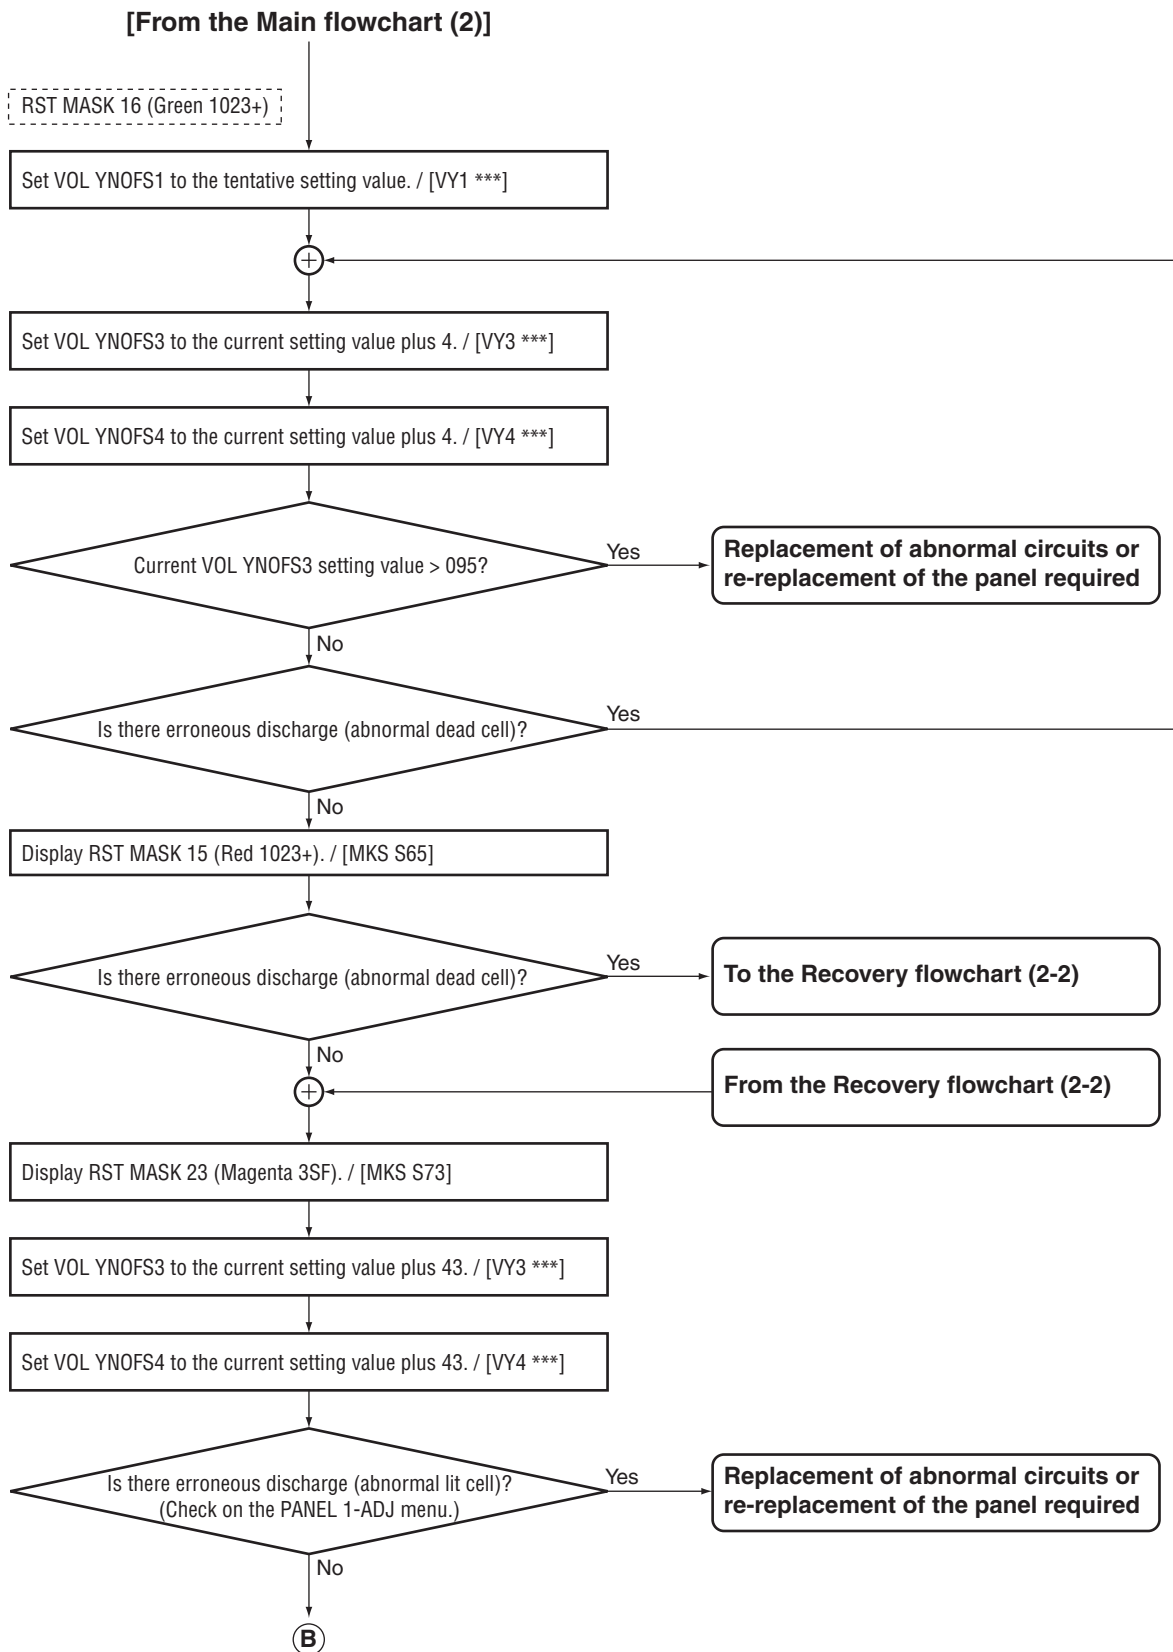

A

B

Set VOL YNOFS3 to the current setting value minus 13. / [VY3 ***]

Set VOL YNOFS4 to the current setting value minus 13. / [VY4 ***]

Determine the current setting value for VOL YNOFS3 as the final value.
Determine the current setting value for VOL YNOFS4 as the final value.

VOL YNOFS3 final setting value

Note:

Make a note of this VOL YNOFS3 value.

Set VOL YNOFS1 to the final setting value of YNOFS3 minus 18.
/ [VY1 ***]

Determine the current VOL YNOFS1 setting value as the final value.

[To the Main flowchart (2)]

C

Recovery flowchart (2-2)...Changing the VOL YNOFS3/4/1 setting voltage

[From the Main flowchart (2) / Recovery flowchart (2-1)]

RST MASK 15 (Red 1023+)

Set VOL YNOFS1 to the current setting value. / [VY1 ***]

No

+

Set VOL YNOFS3 to the current setting value plus 4. / [VY3 ***]

Set VOL YNOFS4 to the current setting value plus 4. / [VY4 ***]

Current VOL YNOFS3 setting value > 095?

Yes

**Replacement of abnormal circuits or
re-replacement of the panel required**

No

Is there erroneous discharge (abnormal dead cell)?


Yes

No

[To the Recovery flowchart (2-1)]

F

■ Recovery flowchart (2-3)...Changing the VOL YNOFS3/4/1 setting voltage

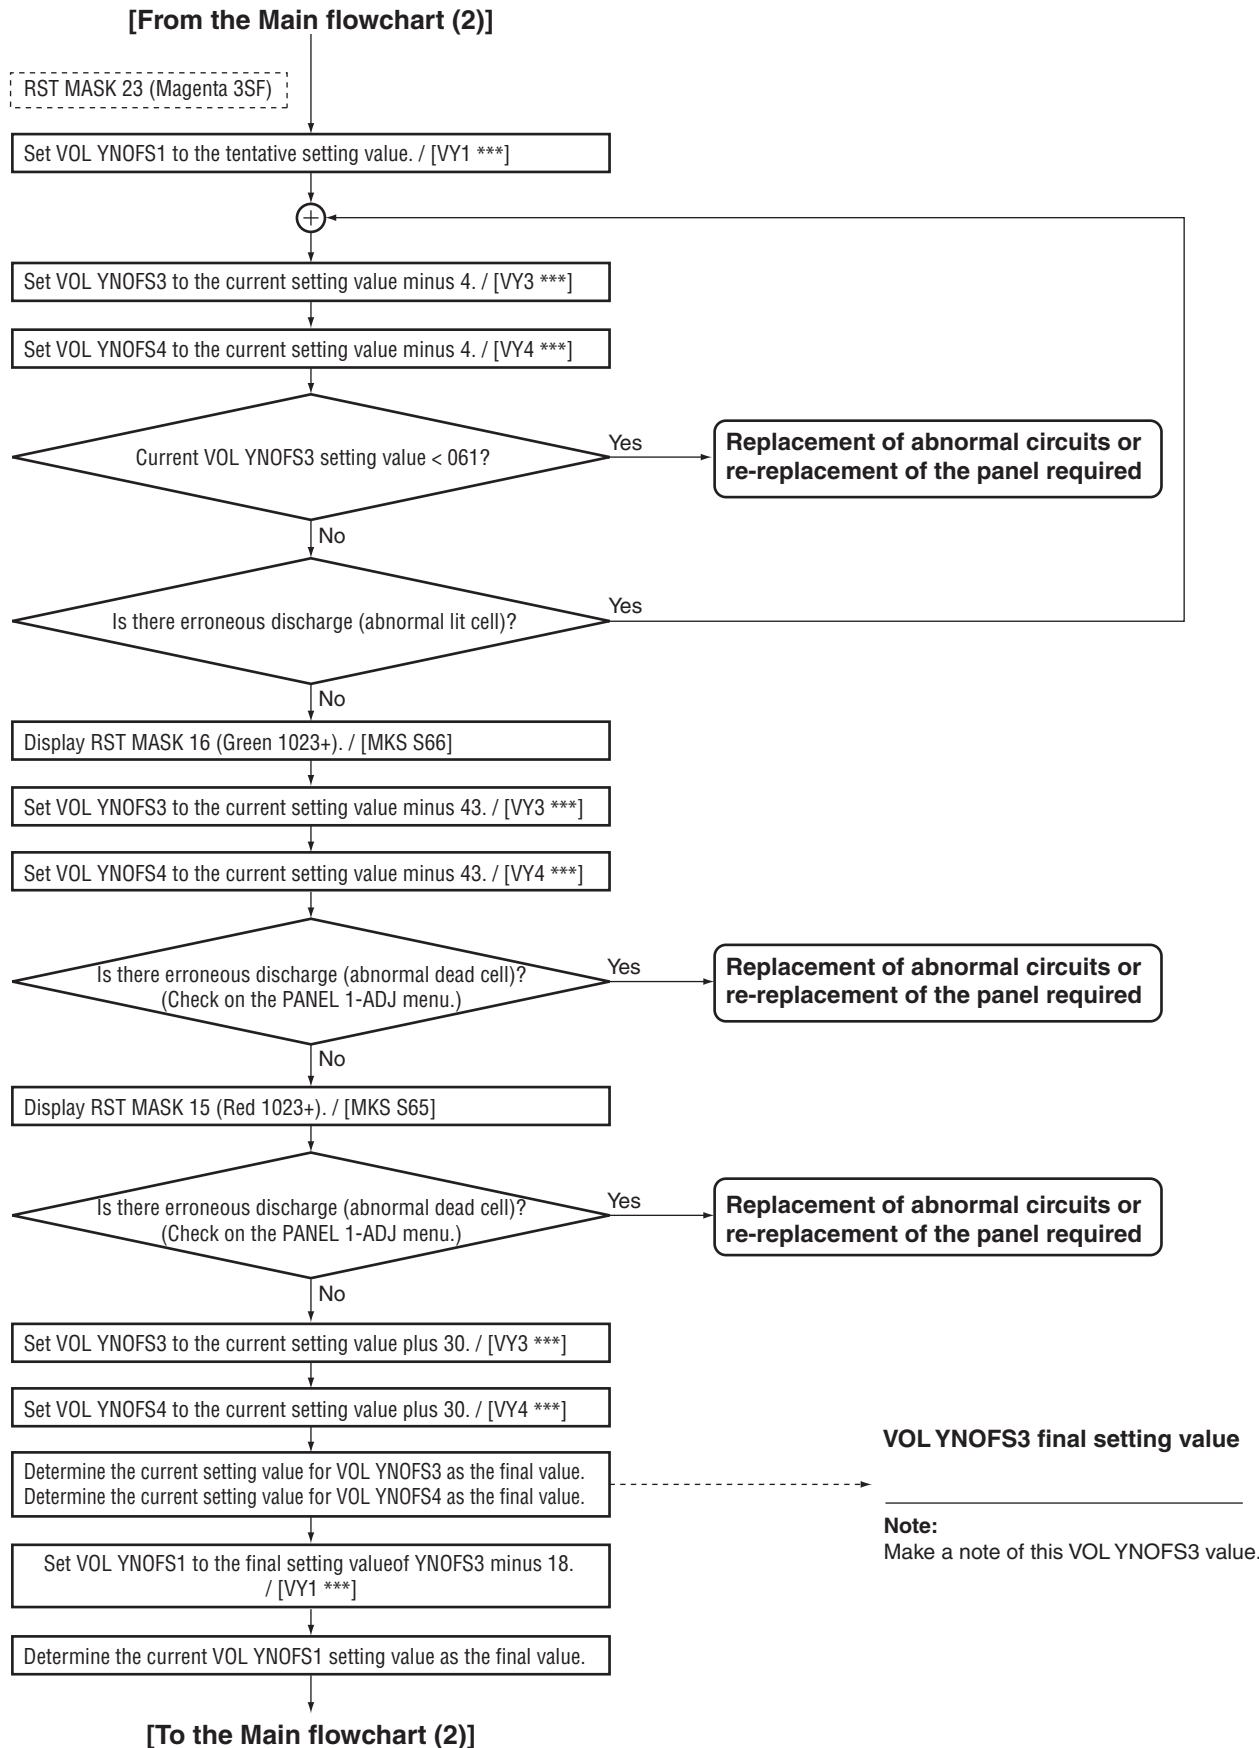

A

Setting Voltages

VOF		VRP		VY1		VY3		VY4	
Vysnofs (V)		Vyprst (V)		Vyknofs1,2 (V)		Vyknofs3 (V)		Vyknofs4 (V)	
14	000	146	002	161	001	151	001	151	001
15	005	147	003	162	003	152	003	152	003
16	011	148	005	163	005	153	005	153	005
17	016	149	007	164	008	154	008	154	008
18	021	150	009	165	010	155	010	155	010
19	027	151	011	166	012	156	012	156	012
20	032	152	013	167	014	157	014	157	014
21	037	153	014	168	016	158	016	158	016
22	043	154	016	169	018	159	018	159	018
23	048	155	018	170	020	160	020	160	020
24	053	156	020	171	022	161	022	161	022
25	059	157	022	172	025	162	025	162	025
26	064	158	024	173	027	163	027	163	027
27	069	159	025	174	029	164	029	164	029
28	075	160	027	175	031	165	031	165	031
29	080	161	029	176	033	166	033	166	033
30	085	162	031	177	035	167	035	167	035
31	091	163	033	178	037	168	037	168	037
32	096	164	035	179	040	169	040	169	040
33	101	165	036	180	042	170	042	170	042
34	107	166	038	181	044	171	044	171	044
35	112	167	040	182	046	172	046	172	046
36	117	168	042	183	048	173	048	173	048
37	123	169	044	184	050	174	050	174	050
38	128	170	046	185	052	175	052	175	052
39	133	171	047	186	054	176	054	176	054
40	139	172	049	187	057	177	057	177	057
41	144	173	051	188	059	178	059	178	059
42	149	174	053	189	061	179	061	179	061
43	155	175	055	190	063	180	063	180	063
44	160	176	057	191	065	181	065	181	065
45	165	177	058	192	067	182	067	182	067
46	171	178	060	193	069	183	069	183	069
47	176	179	062	194	072	184	072	184	072
48	181	180	064	195	074	185	074	185	074
49	187	181	066	196	076	186	076	186	076
50	192	182	068	197	078	187	078	187	078
51	197	183	069	198	080	188	080	188	080
52	203	184	071	199	082	189	082	189	082
53	208	185	073	200	084	190	084	190	084
54	213	186	075	201	086	191	086	191	086
55	219	187	077	202	089	192	089	192	089
56	224	188	079	203	091	193	091	193	091
57	229	189	080	204	093	194	093	194	093
58	235	190	082	205	095	195	095	195	095
59	240	191	084	206	097	196	097	196	097
60	245	192	086	207	099	197	099	197	099
61	251	193	088	208	101	198	101	198	101
62	255	194	090	209	104	199	104	199	104
		196	093	210	106	200	106	200	106
		197	095	211	108	201	108	201	108
		198	097	212	110	202	110	202	110
		199	099	213	112	203	112	203	112
		200	100	214	114	204	114	204	114
		201	102	215	116	205	116	205	116
		202	104	216	118	206	118	206	118
		203	106	217	121	207	121	207	121
		204	108	218	123	208	123	208	123
		205	110	219	125	209	125	209	125
		206	111	220	127	210	127	210	127
		207	113	221	129	211	129	211	129
		208	115	222	131	212	131	212	131
		209	117	223	133	213	133	213	133

F

■ Setting Voltages

VRP		VY1		VY3		VY4	
Vyprst (V)		Vyknofs1,2 (V)		Vyknofs3 (V)		Vyknofs4 (V)	
210	119	224	136	214	136	214	136
211	121	225	138	215	138	215	138
212	122	226	140	216	140	216	140
213	124	227	142	217	142	217	142
214	126	228	144	218	144	218	144
215	128	229	146	219	146	219	146
216	130	230	148	220	148	220	148
217	132	231	150	221	150	221	150
218	133	232	153	222	153	222	153
219	135	233	155	223	155	223	155
220	137	234	157	224	157	224	157
221	139	235	159	225	159	225	159
222	141	236	161	226	161	226	161
223	143	237	163	227	163	227	163
224	144	238	165	228	165	228	165
225	146	239	168	229	168	229	168
226	148	240	170	230	170	230	170
227	150	241	172	231	172	231	172
228	152	242	174	232	174	232	174
229	154	243	176	233	176	233	176
230	155	244	178	234	178	234	178
231	157	245	180	235	180	235	180
232	159	246	183	236	182	236	182
233	161	247	185	237	185	237	185
234	163	248	187	238	187	238	187
235	165	249	189	239	189	239	189
236	166	250	191	240	191	240	191
237	168	251	193	241	193	241	193
238	170	252	195	242	195	242	195
239	172	253	197	243	198	243	198
240	174	254	200	244	200	244	200
241	176	255	202	245	202	245	202
242	177	256	204	246	204	246	204
243	179	257	206	247	206	247	206
244	181	258	208	248	208	248	208
245	183	259	210	249	210	249	210
246	185	260	212	250	212	250	212
247	187	261	214	251	214	251	214
248	188	262	217	252	217	252	217
249	190	263	219	253	219	253	219
250	192	264	221	254	221	254	221
251	194	265	223	255	223	255	223
252	196	266	225	256	225	256	225
253	198	267	227	257	227	257	227
254	199	268	229	258	229	258	229
255	201	269	232	259	232	259	232
256	203	270	234	260	234	260	234
257	205	271	236	261	236	261	236
258	207	272	238	262	238	262	238
259	209	273	240	263	240	263	240
260	210	274	242	264	242	264	242
261	212	275	244	265	244	265	244
262	214	276	246	266	246	266	246
263	216	277	249	267	249	267	249
264	218	278	251	268	251	268	251
265	220	279	253	269	253	269	253
266	221	280	255	270	255	270	255

VRP	
Vyprst (V)	
267	223
268	225
269	227
270	229
271	231
272	232
273	234
274	236
275	238
276	240
277	242
278	243
279	245
280	247
281	249
282	251
283	253
284	254

8.5 ADJUSTMENT WHEN THE DRIVE ASSYS ARE REPLACED


■ **Waveform adjustments required when replacing the following parts of the X DRIVE and Y DRIVE Assys.**

Assy Name	Ref No.	Part Name	Part Category	Remarks
X DRIVE Assy	IC1101	PS9117AP	Photo Coupler	
	IC1104	TND307TD	FET Driver	
	IC1204	PS9117AP	Photo Coupler	
	IC1209	TND307TD	FET Driver	
Y DRIVE Assy	IC2101	PS9117AP	Photo Coupler	
	IC2103	TND307TD	FET Driver	
	IC2104	TND307TD	FET Driver	
	IC2201	PS9117AP	Photo Coupler	
	IC2203	TND307TD	FET Driver	

■ TIME LAG ADJUSTMENT OF THE CONTROL SIGNAL (SUS-B)

- ① Measure the time lag for the SUS-U signal to the SUS-B signal.
 - ② Check the time lag for the SUS-B Gate signal to the SUS-U Gate signal.
- Adjust the variable control so that the time lag of Gate becomes "time lag of input signal + $\alpha \pm 5$ nsec."

Note: For details on measuring points of waveform, see the figure below.

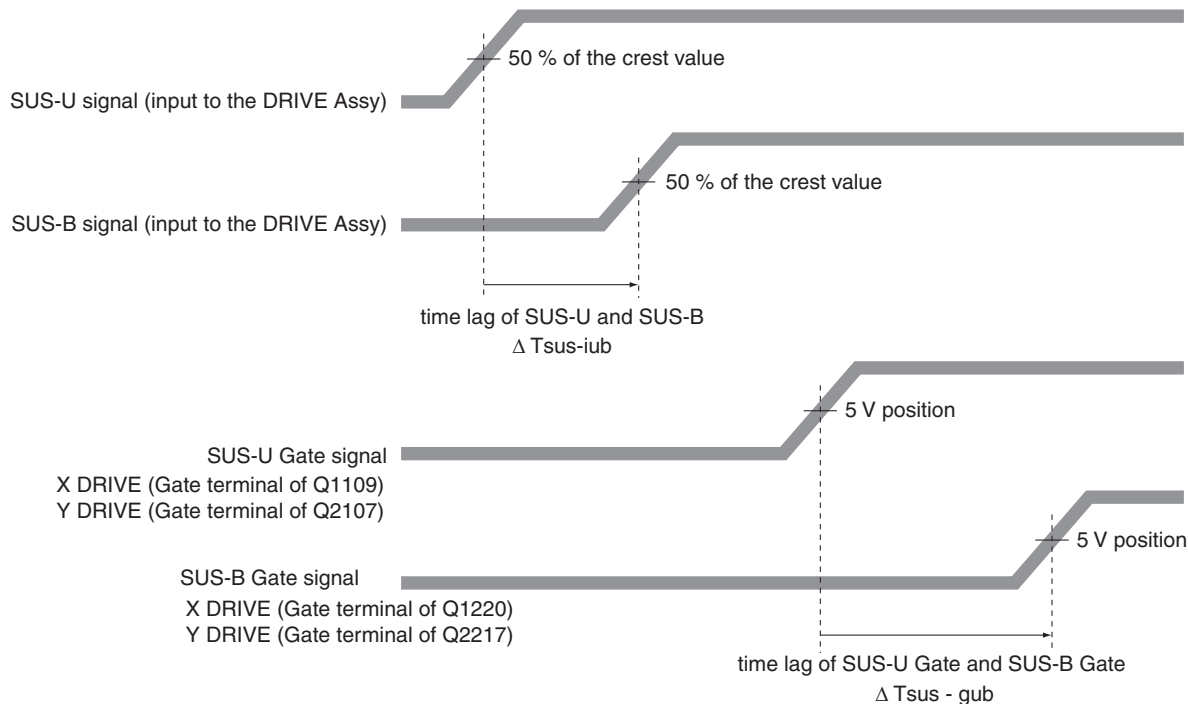

Time lag of SUS-U Gate and SUS-B Gate : $\Delta T_{sus-gub}$


Adjust so that " $\Delta T_{sus-gub} = \Delta T_{sus-iub} + \alpha \pm 5$ nsec," using the variable controls shown in the table below:

Assy	VR	Value of α
X DRIVE Assy	VR1002	70 nsec
Y DRIVE Assy	VR2002	60 nsec

■ DELAY ADJUSTMENT OF THE CONTROL SIGNAL (SUS-D)

- ① Measure the pulse width of the SUS-D signal.
- ② Check the pulse width of the SUS-D input signal (gate terminal of Q2111).
Adjust the variable control so that the pulse width of the SUS-D input signal (gate terminal of Q2111) becomes the same pulse width ± 5 nsec as the SUS-D signal.

Note: • Be sure to set the Drive to OFF for adjustment.
• For details on measuring points of waveform, see the figure below.

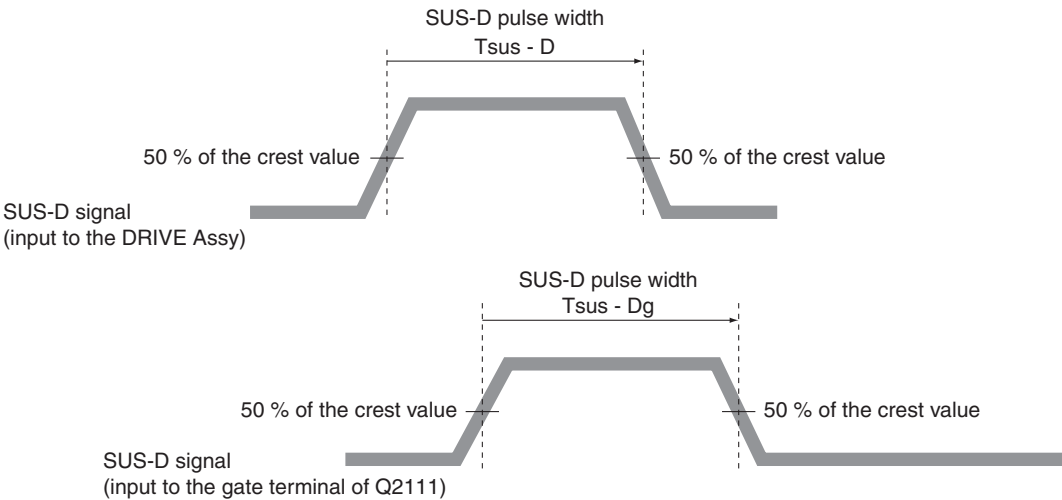

SUS-D pulse width: $T_{sus - Dg}$

Adjust so that " $T_{sus - Dg} = T_{sus - D} \pm 5$ nsec," using the variable control shown in the table below:

Assy	VR
Y DRIVE Assy	VR2001

A

SUS-B ADJUSTMENT

X DRIVE Assy

B

C

Y DRIVE Assy

D


E

SUS-D ADJUSTMENT


Y DRIVE Assy

F

① Measure the SUS-D pulse width ($T_{sus} - D$).

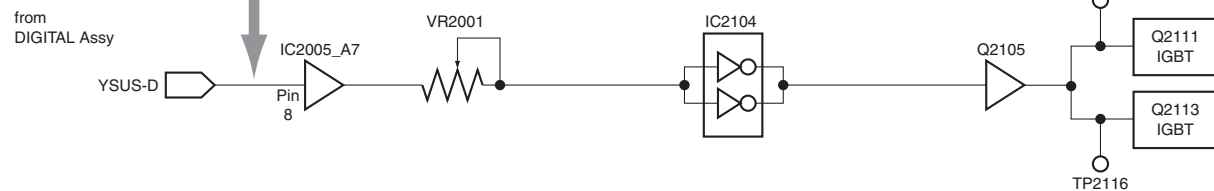

② Adjust the pulse width ($T_{sus} - D_g$) of the SUS-D input signal so that it becomes " $T_{sus} - D \pm 5 \text{ nsec.}$ "

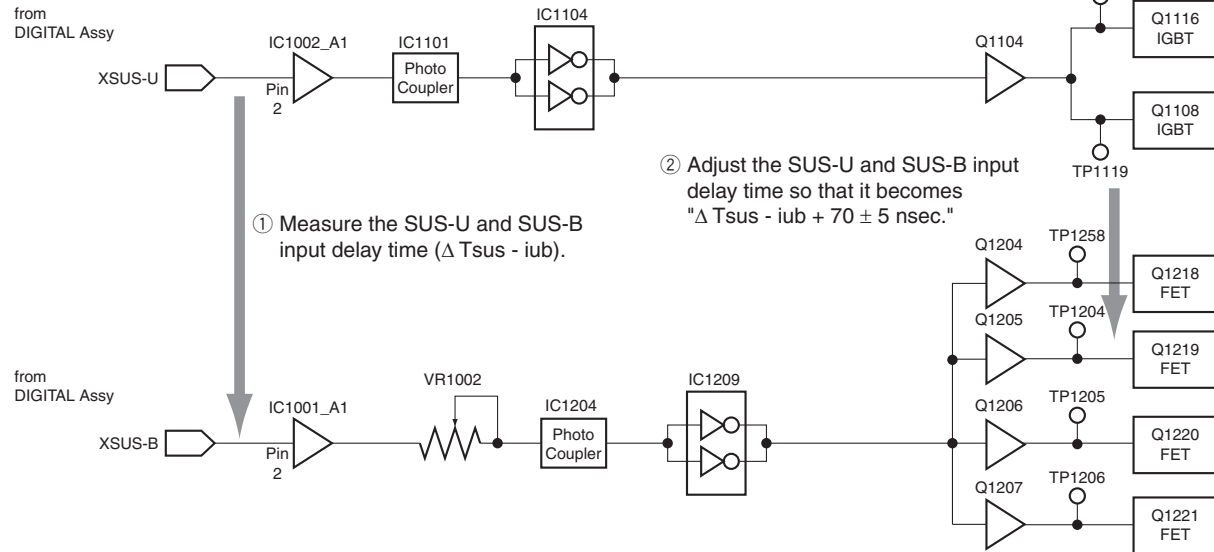


① Measure the SUS-U and SUS-B input delay time ($\Delta T_{sus} - i_{ub}$).

② Adjust the SUS-U and SUS-B input delay time so that it becomes " $\Delta T_{sus} - i_{ub} + 70 \pm 5 \text{ nsec.}$ "

① Measure the SUS-U and SUS-B input delay time ($\Delta T_{sus} - i_{ub}$).

② Adjust the SUS-U and SUS-B input delay time so that it becomes " $\Delta T_{sus} - i_{ub} + 60 \pm 5 \text{ nsec.}$ "

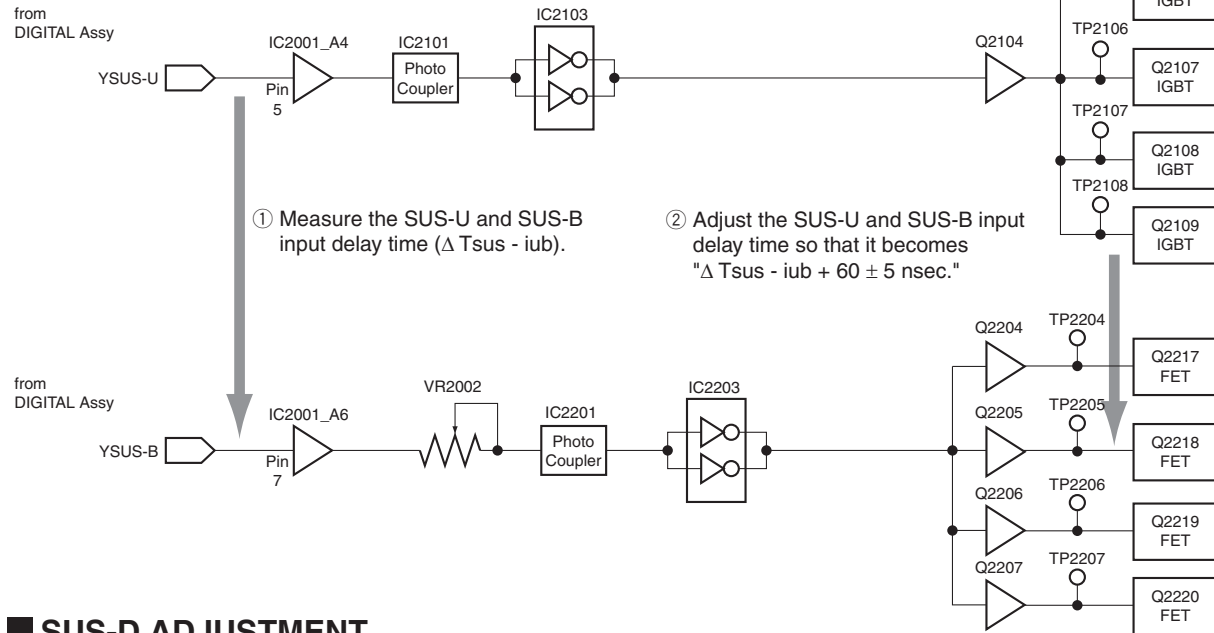

8.6 PRECAUTION ON REPLACEMENT OF THE POWER SUPPLY UNIT

■ Attachment of the housing wire


The housing wire (J126) is attached to the P11 terminal of the POWER SUPPLY unit. As the housing wire is not provided with the POWER SUPPLY unit for service, when replacing the POWER SUPPLY unit, remove the housing wire (J126) from the old one and attach it to the new one.

NEVER turn on the unit before replacement, as doing so may damage the PC boards or the product.

Note:


The wiring shown in the photo is different from the actual power supply unit, because the product in the photo is a prototype.

POWER SUPPLY unit

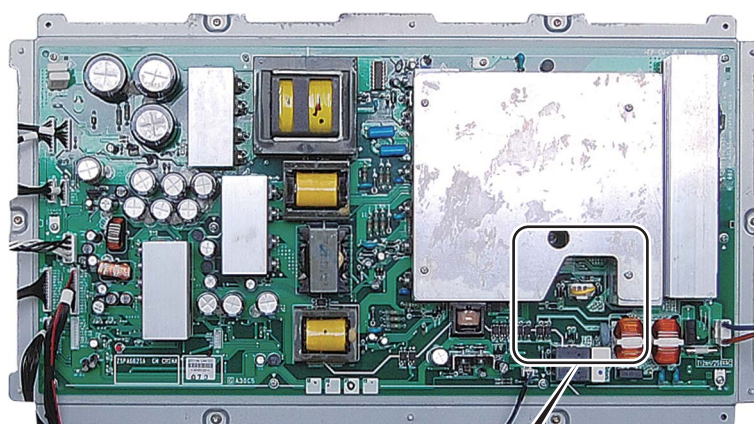


① Disconnect the housing wire (J126) from the P11 terminal on the old POWER SUPPLY Unit.

② Connect the housing wire (J126) to the P11 terminal on the new POWER SUPPLY Unit.

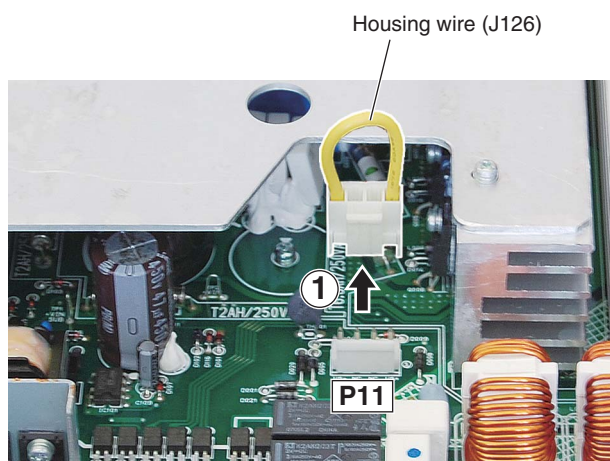

POWER SUPPLY unit (old)

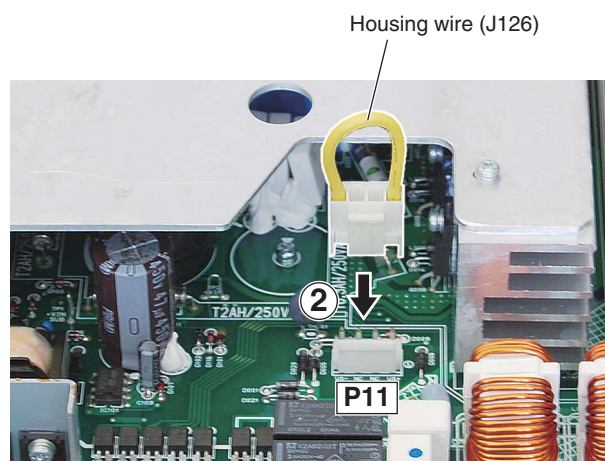

POWER SUPPLY unit (new)

9. RS-232C

9.1 OUTLINE OF RS-232C COMMAND

9.1.1 PREPARED TOOLS

A

- It is necessary to prepare the following one to use 232C command.
- PC
 - Application for control
 - 232C cable (straight)
- * The setting of the Com port cannot be communicated if it doesn't do correctly.
(Please follow a set explanation of PC in the Com port)

B

9.1.2 USING RS-232C COMMANDS

■

Individual ports are provided for RS-232C and SR+ connectors with this model. Therefore, unlike the case of previous models, which required switching of exclusive operation between these connectors on the Integrator menu, switching is no longer required.

C

■

D

■

E

■

F

9.2 LIST OF RS-232C COMMANDS

RS-232C commands can be used in Service Factory mode. Before using RS-232C commands, it is necessary to change the factory presetting. See "9.1 OUTLINE OF RS-232C COMMAND".

[Note ; If you want to see version information (ex. QS1, QSE, Factory, Menu), Please see 10 seconds after starting.]

■ RS-232C command list

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
A							
ABL	***	Adjusting the upper limit of the power	●		Mod	●	
AMT	S00	Audio mute OFF		●			
	S01	Audio mute ON		●			
AP0	S**	ADDRESS L1, L2 setting	●		Mod	●	
AP1	S**	ADDRESS L3, L4 setting	●		Mod	●	
AP2	S**	ADDRESS U1, U2 setting	●		Mod	●	
AP3	S**	ADDRESS U3, U4 setting	●		Mod	●	
APN	***	1V average pulse number setting	●		Mod	●	UP*/DN* is not effective
APW	S00	APL interlocked function: OFF	●			●	
	S01	APL interlocked function: ON	●			●	
	S02	APL interlocked WB: ON / APL interlocked γ : OFF	●			●	
	S03	APL interlocked WB: OFF / APL interlocked γ : ON	●			●	
B							
BCP		Copying the backup data in the EEPROM	●			●	
BHI	***	User white balance : BLUE highlight	●				UP*/DN* is not effective
BLW	***	User white balance : BLUE lowlight	●				UP*/DN* is not effective
BRT	***	User brightness	●				UP*/DN* is not effective
BSM	S00	After image/Burning safe mode: OFF	●				UP*/DN* is not effective
	S01	After image/Burning safe mode: ON	●				
C							
CBU		Clearing backup data of EEPROM	●			●	
CHM		Clearing data of the hour meter	●			●	
CHN	FWD	Changing tuner preset channel (1 step forward)		●			
	REV	Changing tuner preset channel (1 step reverse)		●			
CHR		Clearing data of the hour meter of MTB side		●		●	
CNT	***	User contrast	●				UP*/DN* is not effective
CMT		Clearing data of the maximum temperature	●			●	
CPC		Clearing power-on count data	●			●	
CPD		Clearing power-down history	●			●	
CPM		Clearing data of the pulse meter	●			●	
CSD		Clearing shutdown history	●			●	
CTM		Releasing the TRAP SW		●			
D							
DIZ	S00	Dither/L dither OFF & noise OFF	●			●	
	S01	Dither/L dither ON & noise ON	●			●	
	S02	Dither/L dither OFF & noise ON	●			●	
	S03	Dither/L dither ON & noise OFF	●			●	
DRV	S00	Panel drive-power OFF	●				
	S01	Panel drive-power ON	●				
DW*		To subtract *** to the adjustment value (*** = 000 to 999, designated by a function command)		●			

A

B

C

D

E

F

Command Name		Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
F							
FAJ		Determining the flag of the DIGITAL Assy adjustment in "adjustment is completed"	●			●	
FAN		Factory mode OFF	●	●		●	
FAY		Factory mode ON	●	●			
FST		Set each memory setting of MTB side to the shipment state.		●		●	
G							
GHI	***	User white balance : GREEN highlight	●				UP*/DN* is not effective
GLW	***	User white balance : GREEN low light	●				UP*/DN* is not effective
I							
INA	***	Switching the terrestrial analog signal (ANTENNA A) (***: channel number)		●	Main		
	**** ****	Switching the terrestrial digital signal (ANTENNA A) (*****: channel number)		●	Main		
		Switching to the ANTENNA A		●	Main		
INB	***	Switching the terrestrial analog signal (ANTENNA B) (***:channel number)		●	Main		
		Switching to the ANTENNA B		●	Main		
INH		Switching the HomeGallery (Home Media Gallery for the ELITE model)		●			
INP	S01	Input switch: INPUT 1		●	Main		
	S02	Input switch: INPUT 2		●	Main		
	S03	Input switch: INPUT 3		●	Main		
	S04	Input switch: INPUT 4		●	Main		
	S05	Input switch: INPUT 5		●	Main		
	S06	Input switch: INPUT 6		●	Main		
	S07	Input switch: INPUT 7		●	Main		
	S08	Input switch: INPUT 8 (PC)		●	Main		
M							
MIR	S00	Mirror mode: OFF (default)	●				
	S01	Mirror mode: Right and left inversion	●				
	S02	Mirror mode: Top and bottom inversion	●				
	S03	Mirror mode: Top and bottom and right and left inversion	●				
MKC	S00	Panel mask indication off	●		Mod		
	S01	H ramp (slant 1) M	●		Mod	●	
	S02	H ramp (slant 4) M	●		Mod	●	
	S03	Slanting ramp M	●		Mod	●	
	S04	30 for aging	●		Mod	●	
	S05	05 for aging	●		Mod	●	
	S06	Erasing afterimage 1	●		Mod	●	
	S07	Erasing afterimage 2	●		Mod	●	
	S08	White (change in luminance level)	●		Mod	●	
	S09	PEAK detection raster	●		Mod	●	
	S10	Address lack check	●		Mod	●	
	S11	Green vertical line scroll	●		Mod	●	
	S12	Green horizontal line scroll	●		Mod	●	
	S13	Vertical ramp vertical scroll (white)	●		Mod	●	
	S14	Vertical ramp vertical scroll (green)	●		Mod	●	
	S15	Horizontal ramp horizontal scroll (white)	●		Mod	●	
	S16	Horizontal ramp horizontal scroll (green)	●		Mod	●	
S17	Cross hatch + window	●		Mod	●		
MKS	S00	MASK OFF	●		Mod		
	S01	H ramp (slant 1)	●		Mod	●	
	S02	H ramp (slant 4)	●		Mod	●	

Command Name		Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
M							
MKS	S03	V ramp (slant 1)	●		Mod	●	
	S04	Slanting ramp	●		Mod	●	
	S05	Window (Hi= 870, Lo= 102)	●		Mod	●	
	S06	Window (Hi= 1023, Lo= 102)	●		Mod	●	
	S07	Window (Hi= 1023, Lo=000)	●		Mod	●	
	S08	Window (Hi= 1023) 4 %	●		Mod	●	
	S09	Window (Hi= 1023) 1.25 %	●		Mod	●	
	S10	Window (1/7 LINE)	●		Mod	●	
	S11	STRIPE (MGT/GRN)	●		Mod	●	
	S12	STRIPE (GRN/MGT)	●		Mod	●	
	S13	B & W, checker (1 line)	●		Mod	●	
	S14	B & W, checker (2 lines)	●		Mod	●	
	S15	B & W, checker (4 lines)	●		Mod	●	
	S16	B & W, checker (8 lines)	●		Mod	●	
	S17	COLOR BAR	●		Mod	●	
	S18	Slanting lines	●		Mod	●	
	S19	Red & black, checker (1 line)	●		Mod	●	
	S20	Red & black, checker (2 lines)	●		Mod	●	
	S21	Red & black, checker (4 lines)	●		Mod	●	
	S22	Red & black, checker (8 lines)	●		Mod	●	
	S23	Erasing afterimage (RGB: zigzag, V: reverse)	●		Mod	●	
	S24	SUS 2000 pulses (black raster)	●		Mod	●	
	S25	1 for perfect linear	●		Mod	●	
	S26	2 for perfect linear	●		Mod	●	
	S27	3 for perfect linear	●		Mod	●	
	S28	4 for perfect linear	●		Mod	●	
	S29	RGB checker 1	●		Mod	●	
	S30	RGB checker 2	●		Mod	●	
	S31	Window RED (RED=1023)	●		Mod	●	
	S32	Window GREEN (GREEN=1023)	●		Mod	●	
	S33	Window BLUE (BLUE=1023)	●		Mod	●	
	S34	Even line horizontal stripes	●		Mod	●	
	S35	Odd line horizontal stripes	●		Mod	●	
	S36	Afterimage check 1	●		Mod	●	
	S37	Afterimage check 2	●		Mod	●	
	S38	Afterimage check 3	●		Mod	●	
	S39	Afterimage check 4	●		Mod	●	
	S40	Red single-color slanting ramp	●		Mod	●	
	S41	GREEN single-color slanting ramp	●		Mod	●	
	S42	BLUE single-color slanting ramp	●		Mod	●	
	S43	For panel light check 1	●		Mod	●	
	S44	For panel light check 2	●		Mod	●	
	S45	5 for perfect linear	●		Mod	●	
	S46	6 for perfect linear	●		Mod	●	
	S47	7 for perfect linear	●		Mod	●	
	S48	8 for perfect linear	●		Mod	●	
	S49	Mask for ABL adjustment	●		Mod	●	
	S51	Raster - White	●		Mod	●	
	S52	Raster - Red	●		Mod	●	
	S53	Raster - Green	●		Mod	●	

Command Name	Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
		MDU	MTB			
MKS	S54	Raster - Blue	●		Mod	●
	S55	Raster - Black	●		Mod	●
	S56	Raster - Cyan	●		Mod	●
	S57	Raster - Magenta	●		Mod	●
	S58	Raster - Yellow	●		Mod	●
	S59	Raster - Pale purple	●		Mod	●
	S60	Raster - Pink	●		Mod	●
	S61	Raster - Yellow egg color	●		Mod	●
	S62	Raster - Light blue	●		Mod	●
	S63	Raster - Beige	●		Mod	●
	S64	Raster - Gray 535	●		Mod	●
	S65	Raster - Red 1023+	●		Mod	●
	S66	Raster - Green 1023+	●		Mod	●
	S67	Raster - Blue 1023+	●		Mod	●
	S68	Raster - Red 626	●		Mod	●
	S69	Raster - Green 626	●		Mod	●
	S70	Raster - Blue 626	●		Mod	●
	S71	Raster - Gray 2SF	●		Mod	●
	S72	Raster - Cyan 3SF	●		Mod	●
	S73	Raster - Magenta 3SF	●		Mod	●
	S74	Raster - Yellow 3SF	●		Mod	●
	S75	Raster - Gray 307	●		Mod	●
MST	S00	Display one screen		●		
	S01	PsideP (Main size: normal)		●		
	S02	PinP (Right down)		●		
	S03	PinP (Right up)		●		
	S04	PinP (Left up)		●		
	S05	PinP (Left down)		●		
	S08	SWAP (Exchanging sub-screen)		●		
N						
NGP	S00	Negative positive inversion: OFF (default)	●			
	S01	Negative positive inversion: ON	●			
O						
OSD	S00	Turning OSD setting to off		●	Main	
	S01	Turning OSD setting to on		●	Main	
P						
PAV	S00	Panel drive mode (FACTORY)	●			
	S01	Panel drive mode (STANDARD)	●			
	S02	Panel drive mode (DYNAMIC)	●			
	S03	Panel drive mode (MOVIE)	●			
	S04	Panel drive mode (GAME)	●			
	S05	Panel drive mode (SPORTS)	●			
	S06	Panel drive mode (PURE)	●			
	S07	Panel drive mode (USER)	●			
	S08	Panel drive mode (ISF-DAY)	●			
	S09	Panel drive mode (ISF-NIGHT)	●			
	S10	Panel drive mode (OPTIMUM)	●			

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
P							
PBH	***	Panel white balance adjustment - Blue highlight	●		Mod	●	UP*/DN* is not effective
PBL	***	Panel white balance adjustment - Blue low light	●		Mod	●	UP*/DN* is not effective
PDM	S00	Passing PD signals to the POWER SUPPLY Unit => Power-down	●				
	S01	Not passing PD signals to the POWER SUPPLY Unit => No power-down	●				
PES	S00	For general-purpose commonness: Standard	●				
	S01	For general-purpose commonness: Energy saving 1	●				
	S02	For general-purpose commonness: Energy saving 2	●				
	S10	For general-purpose Japan standard: Standard	●				
	S11	For general-purpose Japan standard: Standard	●				
	S12	For general-purpose Japan standard: Standard	●				
	PFL	S00	Peripheral luminance correction: OFF	●			●
S01		Peripheral luminance correction: ON fixed	●			●	
S02		Peripheral luminance correction: APL interlocked ON (default)	●			●	
PFM	S00	It does not return the hierarchy character of the panel factory	●			●	
	S01	It returns the hierarchy character of the panel factory	●			●	
PFN		Factory mode: OFF	●			During PFY	
PFS		Setup at shipment	●			●	
PFY		Factory mode: ON	●				
PGB	S00	Blue-independent gamma setting: Straight	●				
	S01	Blue-independent gamma setting: Fixed on 1.6	●				
	S02	Blue-independent gamma setting: Fixed on 1.7	●				
	S03	Blue-independent gamma setting: Fixed on 1.8	●				
	S04	Blue-independent gamma setting: Fixed on 1.9	●				
	S05	Blue-independent gamma setting: Fixed on 2.0	●				
	S06	Blue-independent gamma setting: Fixed on 2.1	●				
	S07	Blue-independent gamma setting: Fixed on 2.2 (default)	●				
	S08	Blue-independent gamma setting: Fixed on 2.3	●				
	S09	Blue-independent gamma setting: Fixed on 2.4	●				
	S10-31	Blue-independent gamma setting: Customize	●				
	PGG	S00	Green-independent gamma setting: Straight	●			
S01		Green-independent gamma setting: Fixed on 1.6	●				
S02		Green-independent gamma setting: Fixed on 1.7	●				
S03		Green-independent gamma setting: Fixed on 1.8	●				
S04		Green-independent gamma setting: Fixed on 1.9	●				
S05		Green-independent gamma setting: Fixed on 2.0	●				
S06		Green-independent gamma setting: Fixed on 2.1	●				
S07		Green-independent gamma setting: Fixed on 2.2 (default)	●				
S08		Green-independent gamma setting: Fixed on 2.3	●				
S09		Green-independent gamma setting: Fixed on 2.4	●				
S10-31		Green-independent gamma setting: Customize	●				
PGH		***	Panel white balance adjustment - Green highlight	●		Mod	●
PGL	***	Panel white balance adjustment - Green low light	●		Mod	●	

A

B

C

D

E

F

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
P							
PGR	S00	Red-independent gamma setting: Straight	●				
	S01	Red-independent gamma setting: Fixed on 1.6	●				
	S02	Red-independent gamma setting: Fixed on 1.7	●				
	S03	Red-independent gamma setting: Fixed on 1.8	●				
	S04	Red-independent gamma setting: Fixed on 1.9	●				
	S05	Red-independent gamma setting: Fixed on 2.0	●				
	S06	Red-independent gamma setting: Fixed on 2.1	●				
	S07	Red-independent gamma setting: Fixed on 2.2 (default)	●				
	S08	Red-independent gamma setting: Fixed on 2.3	●				
	S09	Red-independent gamma setting: Fixed on 2.4	●				
	S10-31	Red-independent gamma setting: Customize	●				
PKD	S00	Peak luminance detection: OFF	●			●	
	S01	Peak luminance detection: ON	●			●	
PKL	S00	Panel brightness setting No brightness limitation : 100 % (default)	●				
	S01	Panel brightness setting Brightness limitation 1 : 87 %	●				
	S02	Panel brightness setting Brightness limitation 2 : 73 %	●				
	S03	Panel brightness setting Brightness limitation 3 : 60 %	●				
	S04	Panel brightness setting Brightness limitation 4 : 52 %	●				
	S05	Panel brightness setting Brightness limitation 5 : 40 %	●				
	S06	Panel brightness setting Brightness limitation 6 : 27 %	●				
	S07	Panel brightness setting Brightness limitation 7 : 13 %	●				
PMT	S00	Canceling panel muting	●				
	S01	Panel muting	●				
POF		Power OFF	●	●	Main		
PON		Power ON	●	●	Main		
PPT	S00	Panel protection: OFF	●			●	
	S01	Panel protection: ON	●			●	
PRH	***	Panel white balance adjustment - Red highlight	●		Mod	●	UP*/DN* is not effective
PRL	***	Panel white balance adjustment - Red low light	●		Mod	●	UP*/DN* is not effective
PUC	S00	Pure cinema: off		●	Main	●	
	S01	Pure cinema: Standard		●	Main	●	
	S02	Pure cinema: Advance		●	Main	●	
	S03	Pure cinema: Smooth		●	Main	●	
Q							
QAJ		Acquiring various adjustment values	●				
QMT		Acquiring temperature of MTB side and Fan speed		●			
QNG		Acquiring shutdown information of MTB side		●			
QPD		Acquiring logs of power-down points	●				
QPM		Acquiring data of the pulse meter	●				
QPW		Acquiring panel white balance adjustment values	●				
QS1		Acquiring unit data, such as the software version common to all models, regardless of destination	●	●			
QS2		Acquiring data on the status of the unit, such as temperature	●				
QS3		Each information output for panel	●				
QSE		Acquiring unit data, such as the software version common to all models, regardless of destination		●			
QSD		Acquiring data on shutdown	●				
QSI		Acquiring data related with signals	●				
QSP		Acquiring the software sub-version of the microcomputer at panel side	●				

Command Name			Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
				MDU	MTB			
R								
R1K	***		First reset (wedge width)	●		Mod	●	UP*/DN* is not effective
R2K	***		Second reset (wedge width)	●		Mod	●	UP*/DN* is not effective
RBL	S00		BLUE setting for panel degradation correction: Lv0 (no correction)	●		Mod	●	
	S01		BLUE setting for panel degradation correction: LV1	●		Mod	●	
	S02		BLUE setting for panel degradation correction: LV2	●		Mod	●	
	S03		BLUE setting for panel degradation correction: LV3	●		Mod	●	
	S04		BLUE setting for panel degradation correction: LV4	●		Mod	●	
	S05		BLUE setting for panel degradation correction: LV5	●		Mod	●	
	S06		BLUE setting for panel degradation correction: LV6	●		Mod	●	
	S07		BLUE setting for panel degradation correction: LV7	●		Mod	●	
RGL	S00		GREEN setting for panel degradation correction: Lv0 (no correction)	●		Mod	●	
	S01		GREEN setting for panel degradation correction: LV1	●		Mod	●	
	S02		GREEN setting for panel degradation correction: LV2	●		Mod	●	
	S03		GREEN setting for panel degradation correction: LV3	●		Mod	●	
	S04		GREEN setting for panel degradation correction: LV4	●		Mod	●	
	S05		GREEN setting for panel degradation correction: LV5	●		Mod	●	
	S06		GREEN setting for panel degradation correction: LV6	●		Mod	●	
	S07		GREEN setting for panel degradation correction: LV7	●		Mod	●	
RHI	***		User white balance - Red highlight	●				UP*/DN* is not effective
RLS	S00		Room light sensor operation : OFF	●				
	S01		Room light sensor operation : 1	●				
	S02		Room light sensor operation : 2	●				
	S03		Room light sensor operation : 3	●				
	S04		Room light sensor operation : 4	●				
	S05		Room light sensor operation : 5	●				
RLW	***		User white balance - Red low light	●				UP*/DN* is not effective
RRL	S00		RED setting for panel degradation correction: Lv0 (no correction)	●		Mod	●	
	S01		RED setting for panel degradation correction: LV1	●		Mod	●	
	S02		RED setting for panel degradation correction: LV2	●		Mod	●	
	S03		RED setting for panel degradation correction: LV3	●		Mod	●	
	S04		RED setting for panel degradation correction: LV4	●		Mod	●	
	S05		RED setting for panel degradation correction: LV5	●		Mod	●	
	S06		RED setting for panel degradation correction: LV6	●		Mod	●	
	S07		RED setting for panel degradation correction: LV7	●		Mod	●	
S								
SDM	S00		Shutdown enabled	●			●	
	S01		Shutdown prohibited	●			●	
SFR	S01		Measures against AM radio noise - SUS FREQUENCY MODE 1	●		Mod	●	
	S02		Measures against AM radio noise - SUS FREQUENCY MODE 2	●		Mod	●	
	S03		Measures against AM radio noise - SUS FREQUENCY MODE 3	●		Mod	●	
	S04		Measures against AM radio noise - SUS FREQUENCY MODE 4	●		Mod	●	
	S05		Measures against AM radio noise - SUS FREQUENCY MODE 5	●		Mod	●	
	S06		Measures against AM radio noise - SUS FREQUENCY MODE 6	●		Mod	●	
	S07		Measures against AM radio noise - SUS FREQUENCY MODE 7	●		Mod	●	
	S08		Measures against AM radio noise - SUS FREQUENCY MODE 8	●		Mod	●	

A

B

C

D

E

F

Command Name		Function	Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
S							
SKM	S00	STREAKING correction mode OFF	●		Mod	●	
	S01	STREAKING correction mode 1	●		Mod	●	
	S02	STREAKING correction mode 2	●		Mod	●	
	S03	STREAKING correction mode 3	●		Mod	●	
	S04	STREAKING correction mode 4	●		Mod	●	
	S05	STREAKING correction mode 5	●		Mod	●	
	S06	STREAKING correction mode 6	●		Mod	●	
	S07	STREAKING correction mode 7	●		Mod	●	
	S08	STREAKING correction mode 8	●		Mod	●	
SMC	S01	Smooth clear drive OFF	●			●	
	S02	Smooth clear drive ON (default)	●			●	
SML	***	Adjustment of the side mask level		●	Main	●	
SMM	S00	Setting of the effective area during streaking correction: All screen detection (default)	●			●	
	S01	Setting of the effective area during streaking correction: 4:3 detection	●				
	S02	Setting of the effective area during streaking correction: 14:9 detection	●				
	S03	Setting of the effective area during streaking correction: D-BY-D detection VGA	●				
	S04	Setting of the effective area during streaking correction: D-BY-D detection SVGA	●				
SN0	***	Setting of the serial No. 0 (panel)	●		Mod	●	UP*/DN* is not effective
SN1	***	Setting of the serial No. 1 (panel)	●		Mod	●	UP*/DN* is not effective
SN2	***	Setting of the serial No. 2 (panel)	●		Mod	●	UP*/DN* is not effective
SN3	***	Setting of the serial No. 3 (panel)	●		Mod	●	UP*/DN* is not effective
SN4	***	Setting of the serial No. 4 (panel)	●		Mod	●	UP*/DN* is not effective
SQM	S01	Panel sequence mode: VIDEO sequence	●				
	S02	Panel sequence mode: PC sequence	●				
	S03	Panel sequence mode: FILM sequence	●				
SSM	S01	SSCG OFF	●			●	It is necessary to wait for one minute after drive OFF
	S02	SSCG ON	●			●	
SZM	S00	Setting the screen size to Dot by Dot		●	Main		
	S01	Setting the screen size to 4 :3		●	Main		
	S02	Setting the screen size to FULL		●	Main		
	S03	Setting the screen size to ZOOM		●	Main		
	S04	Setting the screen size to CINEMA		●	Main		
	S05	Setting the screen size to WIDE		●	Main		
T							
THS	S00	Theater port interlock operation OFF	●				
	S01	Theater port interlock operation ON	●				
U							
UAJ		Determining the flag for the DIGITAL Assy adjustment in "not adjusted"	●		Mod	●	
UP*		To add *** to the adjustment value (*** = 000 to 999, designated by a function command)		●			

Command Name	Function		Active U-com		Last Memory	Effective only in Factory mode	Remarks
			MDU	MTB			
V							
VFQ	S01	Setting the frequency in Mask mode to VD-48 Hz	●		Mod	●	
	S02	Setting the frequency in Mask mode to VD-50 Hz	●		Mod	●	
	S03	Setting the frequency in Mask mode to VD-60 Hz	●		Mod	●	
	S05	Setting the frequency in Mask mode to VD-72 Hz	●		Mod	●	
	S06	Setting the frequency in Mask mode to VD-75 Hz	●		Mod	●	
	S13	Setting the frequency in Mask mode to PC-60 Hz	●		Mod	●	
	S22	Setting the frequency in Mask mode to VD-50 Hz (nonstandard)	●		Mod	●	
	S23	Setting the frequency in Mask mode to VD-60 Hz (nonstandard)	●		Mod	●	
	S25	Setting the frequency in Mask mode to VD-72 Hz (nonstandard)	●		Mod	●	
	S26	Setting the frequency in Mask mode to VD-75 Hz (nonstandard)	●		Mod	●	
VOF	***	Adjustment of the reference value of Vysnofs voltage Vysnofs ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VOL	UP*, DW*, ***	To adjust the volume (to be used in combination with UP*/DW*)		●			
VRP	***	Adjustment of the reference value of Vyprst voltage Vyprst ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VSU	***	Adjustment of the reference value of Vsus voltage Vsus ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VX1	***	Adjustment of the reference value of Vxpofs1 voltage Vxpofs1 ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VX2	***	Adjustment of the reference value of Vxpofs2 voltage Vxpofs2 ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VY1	***	Adjustment of the reference value of Vyknofs1, 2 voltage Vyknofs1,2 ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VY3	***	Adjustment of the reference value of Vyknofs3 voltage Vyknofs3 ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
VY4	***	Adjustment of the reference value of Vyknofs4 voltage Vyknofs4 ADJUSTMENT	●		Mod	●	UP*/DN* is not effective
W							
WBI	S00	Panel WB standard output mode: OFF	●			●	
	S01	Panel WB standard output mode: ON	●			●	
X							
X1B	***	3SF and later-first XSUS (resonance up width)	●		Mod	●	UP*/DN* is not effective
X3B	***	2SF-third XSUS (resonance up width)	●		Mod	●	UP*/DN* is not effective
XSB	***	2SF-repeat XSUS (resonance up width)	●		Mod	●	UP*/DN* is not effective
Y							
Y1K	***	1SF-YSUS-Tail (wedge width)	●		Mod	●	UP*/DN* is not effective
Y1Z	***	1SF-YSUS-Tail (resonance down width)	●		Mod	●	UP*/DN* is not effective
Y2B	***	2SF-second YSUS (resonance up width)	●		Mod	●	UP*/DN* is not effective
Y2K	***	2SF-YSUS-Tail (wedge width)	●		Mod	●	UP*/DN* is not effective
Y2Z	***	2SF-YSUS-Tail (resonance down width)	●		Mod	●	UP*/DN* is not effective
YNK	***	3SF and later (SSF 2 pulses)-YSUS Tail (wedge width)	●		Mod	●	UP*/DN* is not effective
YNZ	***	3SF and later (SSF 2 pulses)-YSUS Tail (resonance down width)	●		Mod	●	UP*/DN* is not effective
YTK	***	3SF and later-YSUS Tail (wedge width)	●		Mod	●	UP*/DN* is not effective
YTZ	***	3SF and later-YSUS Tail (resonance down width)	●		Mod	●	UP*/DN* is not effective
YSB	***	2SF-repeat YSUS (resonance up width)	●		Mod	●	UP*/DN* is not effective
Z							
ZME		Initializing the video EEPROM data		●		●	
ZPR		Initializing the setting data to which no adjustment command is provided PANEL EEPROM REFRESH	●		Mod	●	

9.3 DETAILS OF EACH COMMANDS

9.3.1 QS1 (PANEL STATUS)

Model information and version information are returned.

Command Format	Effective Operation Modes	Function	Remarks
[QS1]	Every Time	Output of status	Return data: 3 (ECO) + 84 (DATA) + 2 (CS) = 89 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QS1 (Fixed)
1	Resolution/Size	1 byte	F
2	Panel Generation	1 byte	8
3	Destination	1 byte	*
4	Grade	1 byte	*
5	Panel Product Form	1 byte	B
6	Boot version of Module microcomputer	3 byte	05F
7	Program version of Module microcomputer	8 byte	-02F
8	Boot version of SQ_LSI	3 byte	04F
9	Program version of SQ_LSI	8 byte	-01Y
10	Panel information	8 byte	G8_50F
11	Reserved (panel section)	8 byte	*****
14	, (comma)	1 byte	,
15	MTB generation	1 byte	8
16	MTB destination	1 byte	A
17	MTB grade	1 byte	H
18	MTB product form	1 byte	B
19	Program version of IF microcomputer	8 byte	010AE
20	Boot version of IF microcomputer	4 byte	01A
21	Program version of Main microcomputer	8 byte	-01A
22	Boot version of Main microcomputer	4 byte	01A
23	Program version of ASIC	8 byte	-01A
24	Boot version of ASIC	4 byte	01A
25	CS (Check Sum)	2 byte	FF

15: MTB Generation	
6	G6
7	G7
8	G8
9	G9
0	G10

16: MTB Destination	
A	North America
C	China
E	Europe
G	General
J	Japan
U	Australia

17: MTB Grade	
H	Elite/XDA/Step-upD
T	Step-upA/XG/XC/Regular (US)
B	Not used
S	RegularD
R	RegularA

18: MTB Product Form	
S	System model
B	One body model

1: Resolution/Size	
3	1024*768/42
4	1024*768/43
5	1280*768/50
6	1365*768/50
7	1365*768/60
E	1920*1080/42
F	1920*1080/50
G	1920*1080/60

3: Destination	
*	Commonness
A	US (Reserved)
E	EU (Reserved)
J	Japan (Reserved)

4: Grade	
*	Commonness
Z	Evaluation

2: Panel Generation	
6	G6
7	G7
8	G8
9	G9
0	G10

5: Panel Product Form	
S	System model
B	All-in-one design TV
M	Monitor
D	Standard module
E	Simple module

10: Panel Information		
1 to 3rd byte	G8_	Generation information G8 + _(under bar) fixed
4 to 5th byte	42	42 inch
	50	50 inch
	60	60 inch
	*	PSIZE information and SQ_LSI version mismatching (version mismatching at SD)
6th byte	F	FHD model
	X	XGA model
	*	Model information and SQ_LSI version mismatching (version mismatching at SD)
7th byte	_	Under bar
8th byte	6	2nd PLANT (XGA 50 inch only)
	4	1st PLANT (XGA 50 inch only)
	*	PLANT information and SQ_LSI version mismatching (version mismatching at SD)
	'	Others

9.3.2 QS2 (PANEL OPERATION DATA)

The command QS2 is for acquiring data on the panel's operational information.

Command Format	Effective Operation Modes	Function	Remarks
[QS2]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO) + 34 (DATA) + 2 (CS) = 39 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QS2 (fixed)
1	Power supply status	1 byte	0
2	Adjustment flag of the main unit	1 byte	0
3	Adjustment-data backup flag	1 byte	0
4	"1st PD" data	1 byte	0
5	"2nd PD" data	1 byte	0
6	Reserved	3 byte	**
7	Temperature data (TEMP 1)	3 byte	063
8	SD main data	1 byte	0
9	SD sub data	1 byte	0
10	Operation status induced by SD	1 byte	0
11	Reserved	3 byte	0
12	HOUR METER	8 byte	00000437
13	MASK indication	1 byte	0
14	Still picture detection	1 byte	7C
15	SCAN protection detection	1 byte	
16	Panel crack detection	1 byte	
17	Address emergency detection	1 byte	
18	Reserved	4 byte	
19	CS	2 byte	

1: Power supply status

P	During power ON
0	Entering Passive mode failed during standby
1	Entering Passive mode succeeded during standby

2: Adjustment flag of the main unit

0	Adjustment completed
1	Adjustment not completed

3: Adjustment-data backup flag

0	With backup data
1	No backup data

4, 5: PD data

0	No PD data
1	Not used
2	POWER
3	SCAN
4	SCN-5V
5	Y-DRV
6	Y-DCDC
7	Y-SUS
8	ADRS
9	X-DRV
A	X-DCDC
B	X-SUS
C	DIG-DCDC
D	Not used
E	Not used
F	UNKNOWN

8: SD main data

0	No SD
1	SQ_LSI communication error
2	MDU-IIC communication error
3	Abnormally in RST2
4	TEMP

9-1: SD-Sub (SQ_LSI)

0	No SD-Sub data
1	Communication error
2	Drive stop
3	BUSY
4	Version mismatching (H/S)
5	Version mismatching (M/S)

9-2: SD-Sub (MDU-IIC)

0	No SD-Sub data
1	EEPROM
2	BACKUP
3	DAC1
4	DAC2

9-3: SD-Sub (TEMP)

0	No SD-Sub data
1	TEMP1 high temperature
2	TEMP1 low temperature

10: Operation status induced by SD

0	Normal
1	Relay-off completed
2	During warning indication

13: MASK indication

0	MASK-OFF
1	MASK-ON

14 to 17: Detection of Each Protection function

0	Normal operation
1	At detection of protection operation

1 2 3 4

9.3.3 QS3 (OTHER DATA ON THE PANEL)

A The command QS3 is for acquiring data on operational information of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QS3]	All operations	To acquire data on operations of the panel	Return data: 3 (ECO) + 58 (DATA) + 2 (CS) = 63 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QS3
1	SERIAL	15 byte	-----
2	HOURLY METER	8 byte	00000000
3	BACKUP HR METER	8 byte	00000000
4	PON COUNTER	8 byte	00000000
5	TEMP1 acquisition (Temperature value)	5 byte	+25.0 (*1)
6	TEMP0 acquisition (Temperature value)	5 byte	+25.0 (*1)
7	MaxTEMP acquisition (Temperature value)	5 byte	+75.0 (*1)
8	Reserved	4 byte	****
9	CS	2 byte	FB

Note
(*1) : Centigrade scale

9.3.4 QAJ (PANEL ADJUSTMENT DATA)

The command QAJ is for acquiring the panel's factory-preset data.

Command Format	Effective Operation Modes	Function	Remarks
[QAJ]	All operations	To acquire data on the setting value of drive voltage	Return data: 3 (ECO) + 84 (DATA) + 2 (CS) = 89 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QAJ
1	V-SUS adjustment value	3 byte	128
2	Vysnfs adjustment value	3 byte	128
3	Vyprst adjustment value	3 byte	128
4	Vxpofs1 adjustment value	3 byte	128
5	Vxpofs2 adjustment value	3 byte	128
6	Vyknofs1,2 adjustment value	3 byte	128
7	Vyknofs3 adjustment value	3 byte	128
8	Vyknofs4 adjustment value	3 byte	128
9	R1K adjustment value	3 byte	128
10	R2K adjustment value	3 byte	128
11	Y1K adjustment value	3 byte	128
12	Y1Z adjustment value	3 byte	128
13	X1B adjustment value	3 byte	128
14	Y2B adjustment value	3 byte	128
15	X3B adjustment value	3 byte	128
16	YSB adjustment value	3 byte	128
17	XSB adjustment value	3 byte	128
18	YTK adjustment value	3 byte	128
19	YTZ adjustment value	3 byte	128
20	Y2K adjustment value	3 byte	128
21	Y2Z adjustment value	3 byte	128
22	YNK adjustment value	3 byte	128
23	YNZ adjustment value	3 byte	128
24	R-REVISE setting value	1 byte	0
25	G-REVISE setting value	1 byte	0
26	B-REVISE setting value	1 byte	0
27	ADDRESS 1, 2 setting value	2 byte	01
28	ADDRESS 3, 4 setting value	2 byte	13
29	ADDRESS 5, 6 setting value	2 byte	32
30	ADDRESS 7, 8 setting value	2 byte	30
31	Streaking correction	1 byte	1
32	AM radio countermeasure	1 byte	1
33	Reserved	2 byte	**
34	CS	2 byte	B7

31: Streaking correction	
0	OFF
n	n: 1 to 8 (Mode n)

32: AM radio countermeasure	
n	n: 1 to 8 (SUS frequency n)

9.3.5 QPW (VIDEO ADJUSTMENT DATA OF THE PANEL)

The command QPW is for acquiring the factory-preset data about the video of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QPW]	All operations	To acquire data on the video setting value	Return data: 3 (ECO) + 40 (DATA) + 2 (CS) = 45 Byte

Data Arrangement	Data Length	Output Example	1: Drive sequence	3: Type of ABL/WB tables
ECO	3 byte	QPW (fixed)	48V Video 48 Hz	n n: 1 to 4
1 Drive sequence	3 byte	60V	50V Video 50 Hz	11, 12, 13: RGB Gamma setting
2 Standard/nonstandard	1 byte	S	60V Video 60 Hz	n 00 to 31
3 Type of ABL/WB tables	2 byte	T1	72V Video 72 Hz	15: Center luminance correction
4 ABL adjustment value	3 byte	128	75V Video 75 Hz	0 OFF
5 R-HIGH adjustment value	3 byte	256	60P PC 60 Hz	1 ON
6 G-HIGH adjustment value	3 byte	256	70P PC 70 Hz	2 ON (interlocked with APL)
7 B-HIGH adjustment value	3 byte	256	2: Standard/nonstandard	17: WB interlocked with APL
8 R-LOW adjustment value	3 byte	512	S Standard	0 OFF
9 G-LOW adjustment value	3 byte	512	N Nonstandard	1 ON
10 B-LOW adjustment value	3 byte	512	14: Streking correction	2 WB interlocked ON/ γ OFF
11 R gamma setting	2 byte	07	0 OFF	3 WB interlocked OFF/ γ ON
12 G gamma setting	2 byte	07	1 ON	18: Transition of brightness by protective operations
13 B gamma setting	2 byte	07		0 Upper limit state for brightness
14 Streking correction	1 byte	0		1 Brightness being reduced
15 Center luminance correction	1 byte	1		2 Lower limit state for brightness
16 Reserved	1 byte	*		3 Brightness being increased
17 WB interlocked with APL	1 byte	0		
18 Transition of protective operations	1 byte	0		
19 Reserved	2 byte	**		
20 CS	2 byte	39		

9.3.6 QPM (PULSE METER VALUE)

The command QPM is for acquiring the accumulated number of pulses of the panel.

Command Format	Effective Operation Modes	Function	Remarks
[QPM]	All operations	To acquire data on the accumulated number of pulses	Return data: 3 (ECO) + 40 (DATA) + 2 (CS) = 45 Byte

Data Arrangement	Data Length	Output Example
ECO	3 byte	QPM (fixed)
1 Pulse meter B 1	8 byte	00000000
2 Pulse meter B 2	8 byte	00000000
3 Pulse meter B 3	8 byte	00000000
4 Pulse meter B 4	8 byte	00000000
5 Pulse meter B 5	8 byte	00000000
6 CS	2 byte	6E

9.3.7 QPD (PD LOGS)

The command QPD is for acquiring data from the 8 latest power-down (PD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QPD]	All operations	To acquire data on the power-down logs	Return data: 3 (ECO) + 80 (DATA) + 2 (CS) = 85 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QPD (fixed)
1	Latest "1st PD" data	1 byte	A
2	Latest "2nd PD" data	1 byte	2
3	Data from the hour meter for the latest PD	8 byte	00010020
4	Second latest "1st PD" data	1 byte	E
5	Second latest "2nd PD" data	1 byte	9
6	Data from the hour meter for the second latest PD	8 byte	00008523
7	Third latest "1st PD" data	1 byte	4
8	Third latest "2nd PD" data	1 byte	3
9	Data from the hour meter for the third latest PD	8 byte	00004335
10	Fourth latest "1st PD" data	1 byte	2
11	Fourth latest "2nd PD" data	1 byte	0
12	Data from the hour meter for the fourth latest PD	8 byte	00000945
13	Fifth latest "1st PD" data	1 byte	4
14	Fifth latest "2nd PD" data	1 byte	0
15	Data from the hour meter for the fifth latest PD	8 byte	00000715
16	Sixth latest "1st PD" data	1 byte	A
17	Sixth latest "2nd PD" data	1 byte	2
18	Data from the hour meter for the sixth latest PD	8 byte	00000552
19	Seventh latest "1st PD" data	1 byte	A
20	Seventh latest "2nd PD" data	1 byte	0
21	Data from the hour meter for the seventh latest PD	8 byte	00000213
22	Eighth latest "1st PD" data	1 byte	D
23	Eighth latest "2nd PD" data	1 byte	0
24	Data from the hour meter for the eighth latest PD	8 byte	00000123
25	CS	2 byte	27

1, 2, 4, 5: PD data	
0	No PD
1	Not used
2	P-POWER
3	SCAN
4	SCN-5V
5	Y-DRIVE
6	Y-DCDC
7	Y-SUS
8	Address
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	DIGITAL-DC/DC
D	Not used
E	Not used
F	UNKNOWN

A The command QSD is for acquiring the data from the 8 latest shutdown (SD) logs.

Command Format	Effective Operation Modes	Function	Remarks
[QSD]	All operations	To acquire data on the shutdown logs	Return data: 3 (ECO) + 80 (DATA) + 2 (CS) = 85 Byte

Data Arrangement		Data Length	Output Example
ECO		3 byte	QSD (fixed)
1	Latest SD data	1 byte	1
2	Latest SD subcategory data	1 byte	0
3	Data from the hour meter for the latest SD	8 byte	00752013
4	Second latest SD data	1 byte	5
5	Second latest SD subcategory data	1 byte	0
6	Data from the hour meter for the second latest SD	8 byte	00456378
7	Third latest SD data	1 byte	2
8	Third latest SD subcategory data	1 byte	3
9	Data from the hour meter for the third latest SD	8 byte	00347845
10	Fourth latest SD data	1 byte	2
11	Fourth latest SD subcategory data	1 byte	4
12	Data from the hour meter for the fourth latest SD	8 byte	00175635
13	Fifth latest SD data	1 byte	1
14	Fifth latest SD subcategory data	1 byte	0
15	Data from the hour meter for the fifth latest SD	8 byte	00083450
16	Sixth latest SD data	1 byte	2
17	Sixth latest SD subcategory data	1 byte	2
18	Data from the hour meter for the sixth latest SD	8 byte	00045662
19	Seventh latest SD data	1 byte	0
20	Seventh latest SD subcategory data	1 byte	0
21	Data from the hour meter for the seventh latest SD	8 byte	00000000
22	Eighth latest SD data	1 byte	0
23	Eighth latest SD subcategory data	1 byte	0
24	Data from the hour meter for the eighth latest SD	8 byte	00000000
25	CS	2 Byte	7D

• SD data (Main)	
0	No SD (Main)
1	SQ_LSI communication error
2	MDU-IIC communication error
3	Abnormally in RST2
4	TEMP

• SD subcategory (SQ_LSI)	
0	No SD-Sub data
1	Communication error
2	Drive stop
3	BUSY
4	Version mismatching (H/S)
5	Version mismatching (M/S)

• SD subcategory (Main: MDU-IIC)	
0	No SD-Sub data
1	Main-EEPROM
2	Backup-EEPROM
3	DAC1
4	DAC2

• SD subcategory (Main: TEMP)	
0	No SD-Sub data
1	TEMP1 (high temperature)
2	TEMP1 (low temperature)

E

F

9.3.9 QSE (DESTINATION PECULIAR INFORMATION)

Induce it peculiar, individual information is acquired.

Command Format	Effective Operation Modes	Function	Remarks
[QSE]	Every time	Output of status	

Order	Part	Data Arrangement	Data Length	Output Example
0	–	Received Command name	3 byte	QSE
1		DTV Hardware Version	8 byte	07080200
2		DTV Hardware Serial	8 byte	16777215
3		DTV RUNTIME Version	8 byte	= 00K.22p
4		CFE Version	8 byte	07.00d
5		KERNEL Version	8 byte	2.4.2527
6		ROOTS Version	8 byte	04.13d
7		FLAGS Information 1	1 byte	Y
8		FLAGS Information 2	1 byte	*
9		FLAGS Information 3	1 byte	N
10		FLAGS Information 4	1 byte	Y
11		FLAGS Information 5	1 byte	N
12		FLAGS Information 6	1 byte	N
13		HMG/HG Model Version	10 byte	1.0.126
14		User Password	4 byte	1234
15	–	Check Sum	2 byte	13

9.3.10 QMT (TEMPERATURE / FAN ROTATION / ROOM LIGHT SENSOR)

Temperature information / FAN rotation state / Room light sensor information on the MTB side is returned.

Command Format	Effective Operation Modes	Function	Remarks
[QMT]	Every time	Output of status	A/D value of MTB-side's temperature/FAN rotating status

Order	Part	Data Arrangement	Data Length	Output Example
0	–	Received Command name	3 byte	QMT
1	MTB	A/D value of MTB-side Temperature	3 byte	267
2		MTB-side FAN rotating speed (0: STOP, 1: LOW, 2: HIGH)	1 byte	1
3		A/D value of room light sensor	3 byte	009
4		Level of room light sensor (Value: 1 to 5)	1 byte	5

9.3.11 QNG (SHUTDOWN INFORMATION OF MTB)

MTB side's shutdown information is acquired.

Command Format	Effective Operation Modes	Function	Remarks
[QNG]	Every time	Output of status	

Order	Part	Data Arrangement	Data Length	Output Example
0	—	Received Command name	3 byte	QNG
1	MTB	1st latest NG No.	1 byte	0
2		Subcategory No. for the 1st latest NG.	1 byte	0
3		MTB hour meter for the 1st latest NG.	7 byte	0000000
4		Reserved	3 byte	fixed on 000
5		2nd latest NG No.	1 byte	0
6		Subcategory No. for the 2nd latest NG.	1 byte	0
7		MTB hour meter for the 2nd latest NG.	7 byte	0000000
8		Reserved	3 byte	fixed on 000
9		3rd latest NG No.	1 byte	0
10		Subcategory No. for the 3rd latest NG.	1 byte	0
11		MTB hour meter for the 3rd latest NG.	7 byte	0000000
12		Reserved	3 byte	fixed on 000
:		:	:	
29		8th latest NG No.	1 byte	0
30		Subcategory No. for the 8th latest NG.	1 byte	0
31		MTB hour meter for the 8th latest NG.	7 byte	0000000
32		Reserved	3 byte	fixed on 000
33	—	Check Sum	2 byte	00

< SD Information No. >

Frequency *	Part	Part	Remarks (Operation)
5	MTB part	Shutdown signal from audio amp. / short-circuit of speaker terminal	Shutdown after 30 seconds warning
6		Failure of communication with Module microcomputer	Immediately Shutdown
7		3-wire serial communication of Main microcomputer	Go to No. 7 Subcategory Information
8		IIC communication failure of MTB side	Go to No. 8 Subcategory Information
9		Communication failure of Main microcomputer	Immediately Shutdown
10(A)		Failure of FAN	Go to No. 10 Subcategory Information
11(B)		Abnormally in high temperature	Shutdown after 30 seconds warning
12(C)		Failure of Digital Tuner	Go to No. 12 Subcategory Information
13(D)		Failure of Power Supply at MTB side	Go to No. 13 Subcategory Information
14(E)		Startup failure of Home Media Gallery	-
15(F)		Failure of Main EEPROM	Immediately Shutdown

*: Indicates the frequency of Blue LED flashing when the shutdown is occurred.

< No. 7 Subcategory Information on "Failure in 3-wire serial communication of Main microcomputer" >

Value	Shutdown Factor	Remarks (Operation)
1	Communication error of IF microcomputer	Shutdown
2	Communication error of sequence processor	Shutdown

< No. 8 Subcategory Information on "Failure in IIC communication of MTB side" >

Value	Shutdown Factor	Remarks (Operation)
1	Tuner 1	Shutdown
2	MSP/MAP	Shutdown
3	AV Switch	Shutdown
4	RGB Switch	Shutdown
5	VDEC	Shutdown
6	VDEC-SDRAM	Shutdown
7	AD/PLL	Shutdown
8	HDMI	Shutdown
A	Tuner 2	Shutdown
B	US-MSP	Shutdown

< No. 10 Subcategory Information on "Abnormally in FAN" >

Value	Shutdown Factor	Remarks (Operation)
1	FAN 1	Shutdown
2	FAN 2 (FHD only)	Shutdown

< No. 12 Subcategory Information on "Failure in Digital Tuner" >

Value	Shutdown Factor	Remarks (Operation)
1	DTV starting failure	Turn off the screen, then reset the device.
2	DTV communication error	
4	Abnormmaly in BCM7038	
7	Tuner 1 or 2	
8	Card I/F IC	
9	VBI Slicer	
C	EEPROM	
E	TV Guide	
G	Home Gallery	
H	Middleware	
I	Application	

< No. 13 Subcategory Information on "Failure in Power supply at MTB side" >

Value	Shutdown Factor	Remarks (Operation)
1	RST 2	Shutdown
2	RST 4	Shutdown

9.3.12 QSI (INPUT SIGNAL DATA)

The command QSI is for acquiring all data on input video signals.

Command Format	Effective Operation Modes	Function	Remarks
[QSI]	All operations	To acquire all data on input video signals	Return data: 3 (ECO) + 66 (DATA) + 2 (CS) = 71 Byte

Data Arrangement		Data Length	Output Example
ECO		3 Byte	QSI (fixed)
1	Type of drive sequence	3 Byte	60V
2	Standard/nonstandard	1 Byte	S
3	Type of ABL/WB tables	2 Byte	T1
4	Total value of PCN	4 Byte	0256
5	Total value of PRH	4 Byte	0256
6	Total value of PGH	4 Byte	0256
7	Total value of PBH	4 Byte	0256
8	Total value of PBR	4 Byte	0512
9	Total value of PRL	4 Byte	0512
10	Total value of PGL	4 Byte	0512
11	Total value of PBL	4 Byte	0512
12	Total value of ABL	3 Byte	128
13	V frequency distinction	4 Byte	6002
14	Reserved	1 Byte	*
15	Reserved	4 Byte	****
16	APL acquiring data	4 Byte	1023
17	Number of SUS pulses	4 Byte	0457
18	Result of detection of still picture	1 Byte	1
19	Result of detection of cracking in the panel	1 Byte	1
20	Result of detection for scanning protection	1 Byte	1
21	Result of detection for external protection	1 Byte	1
22	Transition of protection operation	1 Byte	1
23	Reserved	4 Byte	****
24	CS	2 Byte	27

1: Type of Drive sequence	
50V	Video 50 Hz
60V	Video 60 Hz
72V	Video 72 Hz
75V	Video 75 Hz
60P	PC 60 Hz
70P	PC 70 Hz

2: Standard/nonstandard	
S	Standard
N	Nonstandard

3: Type of ABL/WB tables	
Tn	n: 1 to 4

13: V frequency distinction	
Reading value *100	

16: APL acquiring data	
Output with 10 bit 0 to 1023	

17: Number of SUS pulses	
0174 to 2752	

18 to 21: Each protection function	
0	Setting: OFF
1	Setting: ON (during wait)
2	Setting: ON (during operation)

22: Transition of protection operations	
0	Upper limit state for brightness
1	Brightness being reduced
2	Lower limit state for brightness
3	Brightness being increased

9.3.13 DRV (PANEL DRIVE-POWER ON / OFF)

Drive ON/OFF: ON/OFF control of panel drive-power system

Command Format	Effective Operation Modes	Function	Remarks
[DRV+S00]	Every time	DRIVE OFF	
[DRV+S01]	Every time	DRIVE ON (default)	

Once the DRIVE OFF command is accepted, DRIVE OFF cannot be canceled by pressing the DRIVE OFF key again or by turning the unit off then back on with the STANDBY OFF/ON key.

To cancel DRIVE OFF, restart the unit by unplugging then again plugging in the power cord.

9.3.14 FAY / FAN (ADJ. COMMANDS PERMISSION / PROHIBITION)

The commands FAY/FAN are for prohibiting/permitting panel/MTB-adjustment commands.


Command Format	Operation		Remarks
	Effective Operation Modes	Control	
[FAY]	Normal operation mode while the power is on	Adjustment command is valid.	For details, refer to the section "6.1.3 FUNCTIONS WHEN ENTERING THE SERVICE FACTORY MODE".
[FAN]	During FAY	Adjustment command is invalid.	

9.3.15 FAJ / UAJ / CBU / BCP (BACKUP FUNCTION FOR ADJUSTMENT VALUE)


When the DIGITAL Assy is to be replaced, adjustment values can be copied from the backup EEPROM to the EEPROM of the Assy for service.

Command Format	Operation		Remarks
	Effective Operation Modes	Control	
[FAJ]	During FAY	To make the flag setting that indicating that adjustment of the panel unit has been completed	This takes at least 350 mS.
[UAJ]		To make the flag setting that indicating that adjustment of the main unit has not been completed	
[CBU]		To make the flag setting that indicating that backup data have not been copied	The backup ROM is initialized.
[BCP]		To copy Digital backup data to EEPROM	

10. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 ● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 ● Screws adjacent to ▼ mark on product are used for disassembly.
 ● For the applying amount of lubricants or glue, follow the instructions in this manual.
 (In the case of no amount instructions, apply as you think it appropriate.)


10.1 PACKING SECTION

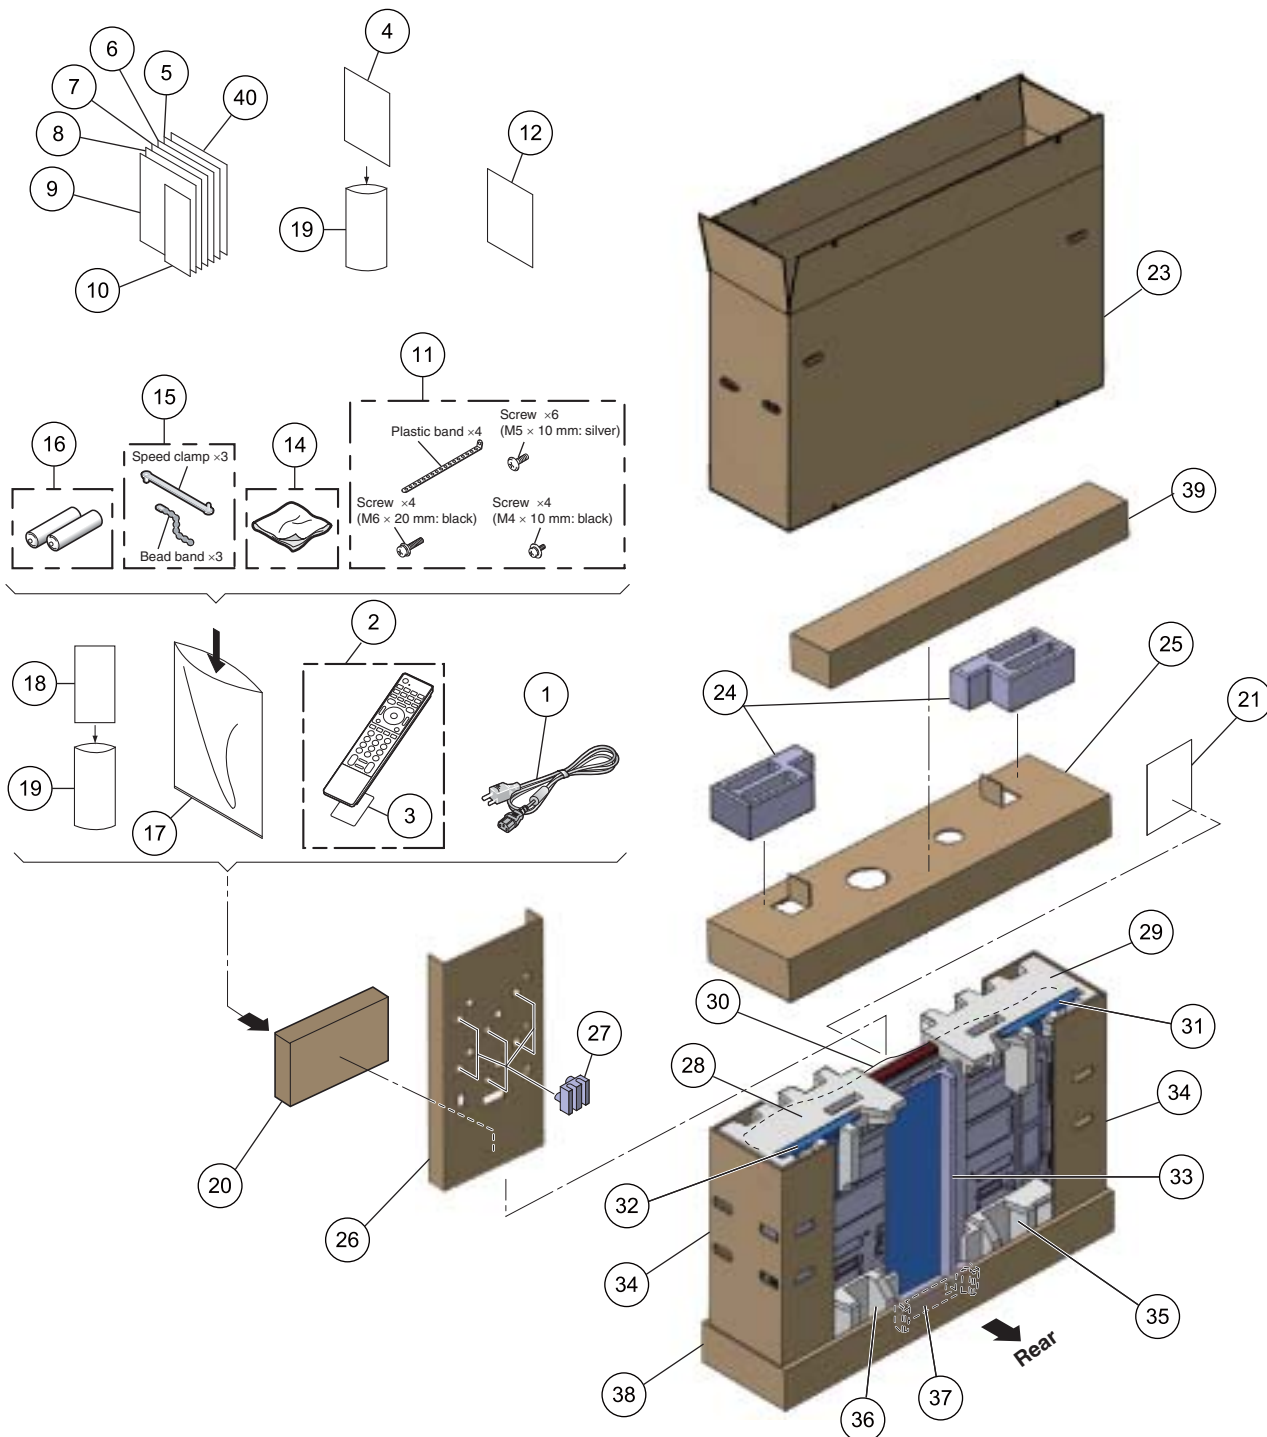


PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
1	Power Cord (2 m)	ADG1215
2	Remote Control Unit	AXD1550
3	Battery Cover	AZN2681 ¹
4	Operating Instructions (English, French, Spanish)	ARE1472
5	Parental Caution	ARM1371
6	HDMI Caution	ARM1373
7	After Image Caution	ARM1351
8	Power Button Caution	ARM1360
NSP 9	Card (Register)	ARY1156
10	Cleaning Caution (U)	ARM1303
11	Stand Accessory Assy	AXY1193
12	Label C (U)	AAX3501
13	•••••	
14	Cleaning Cloth	AED1285
15	Binder Assy	AEC1908
NSP 16	Alkaline Dry Cell Battery (LR6, AA)	VEM1023
17	Polyethylene Bag	AHG1394
NSP 18	Warranty Card	ARY1196
19	Vinyl Bag	AHG1347
20	Accessory Box	AHC1091
21	Caution Card	ARM1239
22	•••••	
23	Upper Carton (608U)	AHD3580
24	Option Pad	AHA2689
25	Top Carton (608U)	AHD3638
26	Reinforce Carton (608)	AHC1105
27	Center Pad	AHA2695
28	Pad (608 T-R)	AHA2691
29	Pad (608 T-L)	AHA2690
30	Mirror Mat	AHG1397
31	Stand Pipe L Assy	AXY1186
32	Stand Pipe R Assy	AXY1187
33	Base Cover Assy	AXY1198
34	Reinforce Carton LR	AHC1097
35	Pad (608 B-L)	AHA2692
36	Pad (608 B-R)	AHA2693
37	Pad (608 B-C)	AHA2694
38	Under Carton (607)	AHD3548
39	Speaket System	SMW1986
40	DCF Cleaning Caution	ARM1377

10.2 REAR SECTION

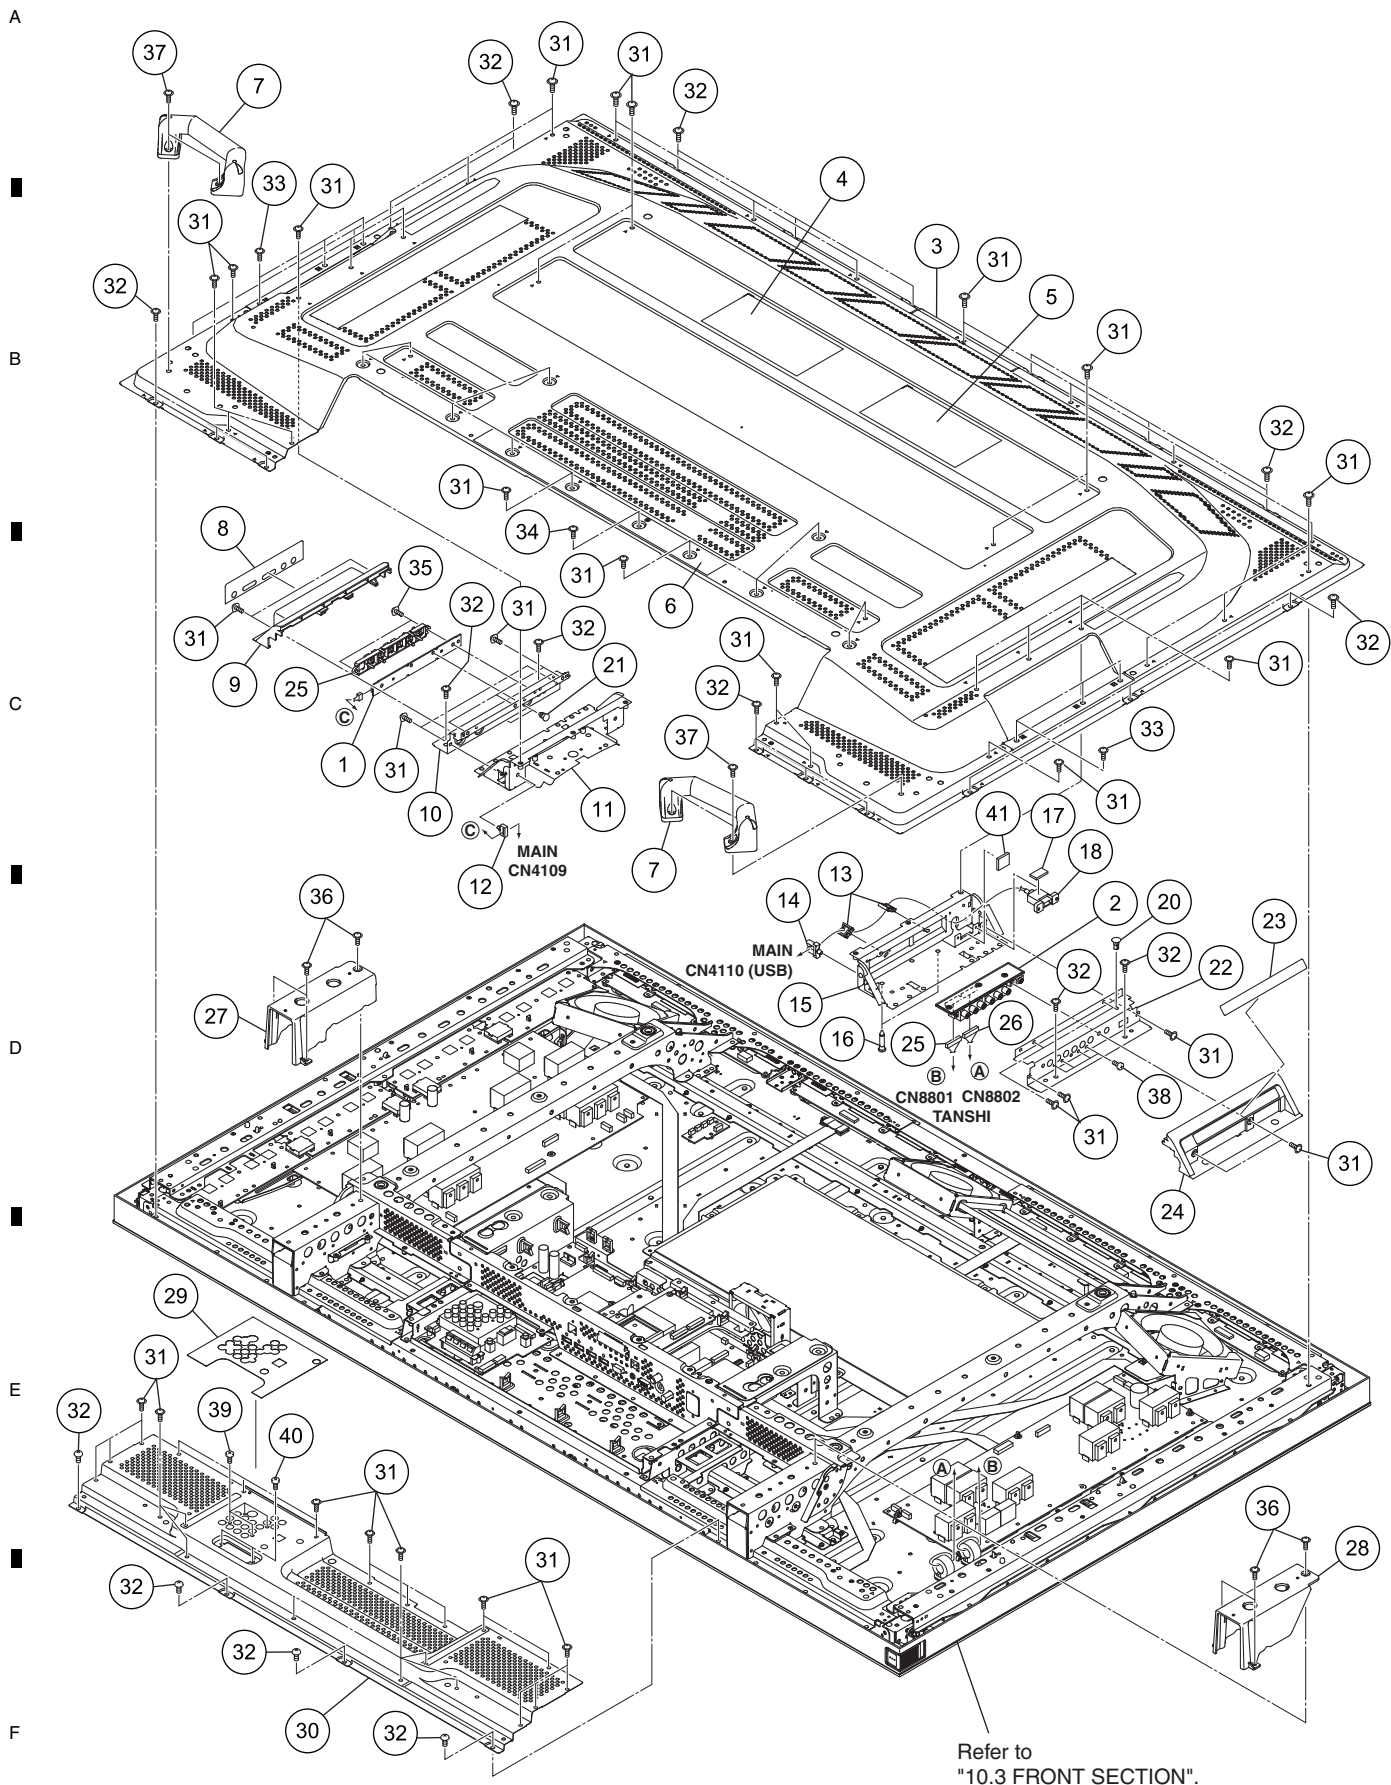

REAR SECTION PARTS LIST

Mark No.	Description	Part No.
1	SIDE KEY Assy	AWW1275
2	SIDE IO Assy	AWW1274
3	Rear Case (608)	ANE1664
NSP 4	Name Label (608REG)	AAL2931
5	Caution Label (U)	AAX3545
6	Label A (U)	AAX3478
7	Handle	AMR3564
8	Function Button Sheet (8U)	AAK2919
9	Function Button Panel	AMB2906
10	Function Button Base	ANG3066
11	Function Button Shield	ANK1939
12	Wire Clip	AEC1948
13	Reuse Wire Saddle	AEC1945
14	Reuse Wire Saddle	AEC2118
15	Side Input Shield	ANK1938
16	Spacer	AEC1288
17	USB Spacer A	AED1317
18	USB Cable (J301)	ADF1034
19	•••••	
20	PCB Spacer	AEC1570
21	Locking Card Spacer	AEC2019
22	Side Input Panel (8U)	ANC2457
23	Input Cover Label 8U	AAX3509
24	Side Input Cover	AMB2911
25	Function Button	AAC1562
26	•••••	
27	Sub Frame Cover L	AMR3586
28	Sub Frame Cover R	AMR3587
29	Label B50 (U)	AAX3540
30	Under Cover (60U)	ANC2434
31	Screw	AMZ30P060FTB
32	Screw	APZ30P100FTB
33	Screw	APZ40P100FTB
34	Screw	ABA1341
35	Screw	AMZ30P080FTC
36	Screw	PMB30P100FTB
37	Screw	PMB40P140FTB
38	Screw	BPZ30P080FTB
39	Screw	BBZ30P060FTB
40	Screw	BPZ30P100FTB
 41	Gasket (J-type)	ANK1956

10.3 FRONT SECTION

A


B

C

D

E

F

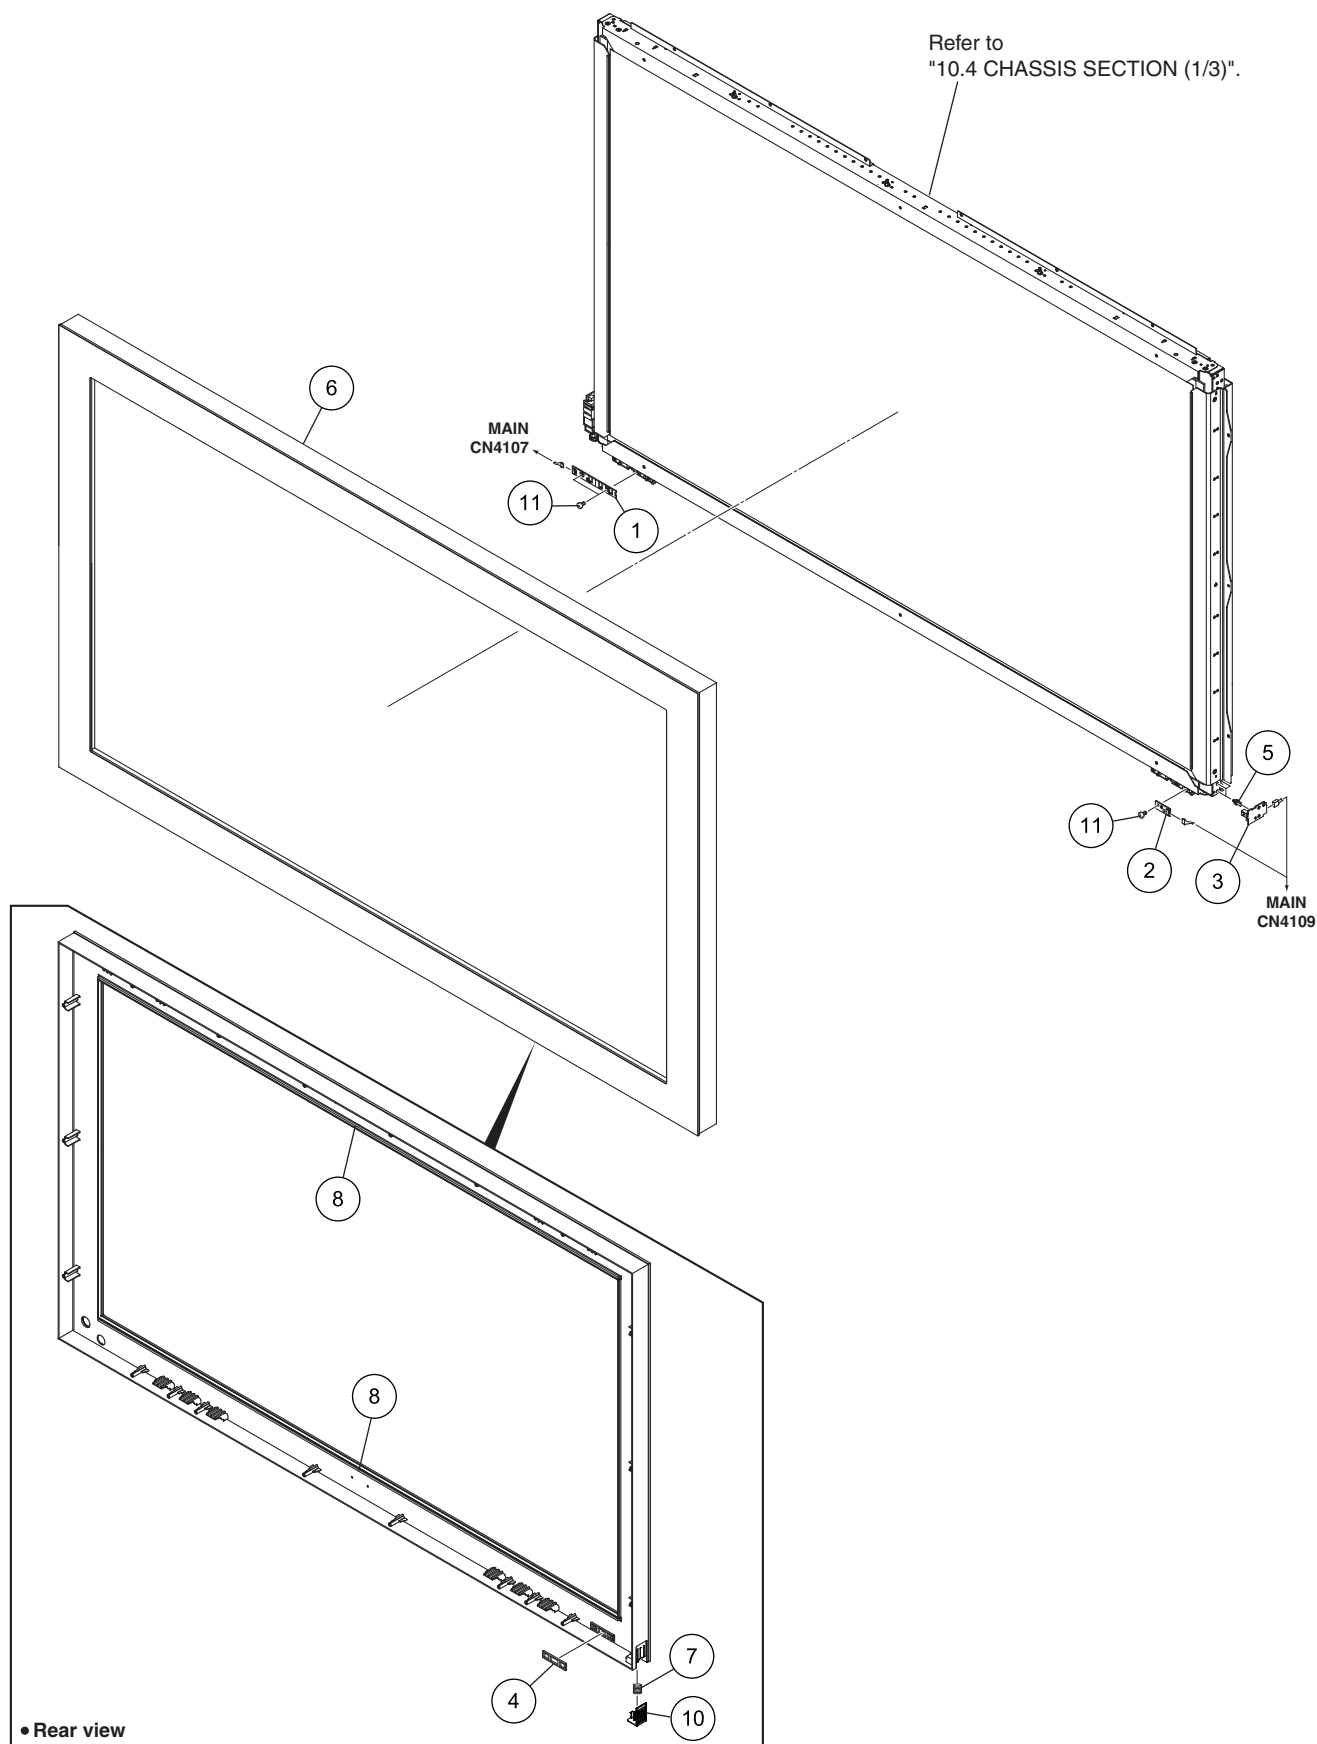

FRONT SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	42/60LED Assy	AWW1276	
	2	FHD RLS Assy	AWW1292	A
	3	FHD IR Assy	AWW1289	
	4	Blind Cushion	AEB1449	
	5	PCB Spacer	AEC1947	
	6	1..Front Case Assy (608U)	AMB3035	
	7	2..Coil Spring	ABH1126	
NSP	8	2..Panel Cushion H	AED1318	
	9	• • • • •		
	10	2..Power Button	AAD4157	
	11	Screw	BPZ30P080FTB	B

10.4 CHASSIS SECTION (1/3)

A


B

C

D

E

F

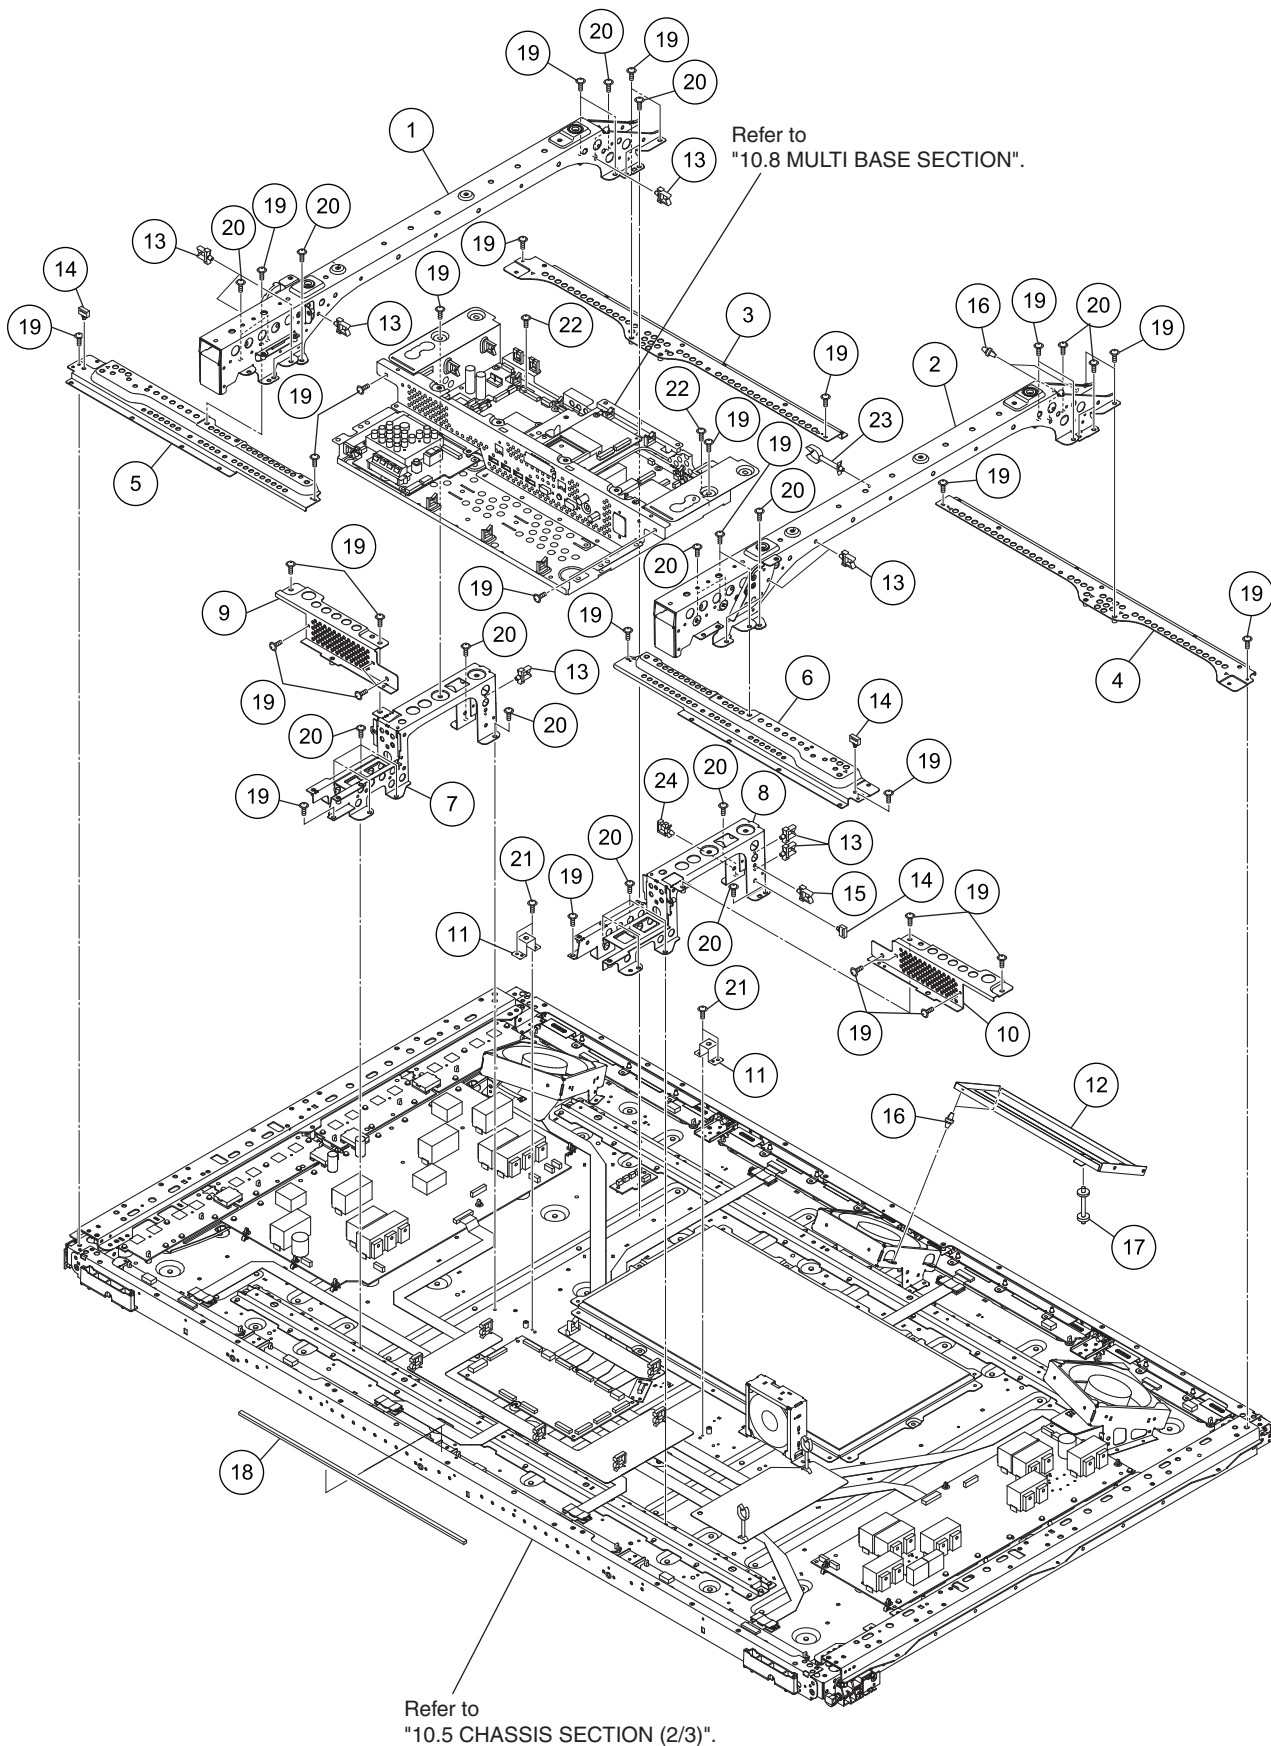


CHASSIS SECTION (1/3) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Sub Frame L Assy 607	ANA1966
2	Sub Frame R Assy 607	ANA1965
3	Upper Support L	ANG3052
4	Upper Support R	ANG3053
5	Under Support Assy L	ANA2123
6	Under Support Assy R	ANA2124
7	Multi Base Frame L	ANA1970
8	Multi Base Frame R	ANA1969
9	Terminal Panel L 60	ANC2420
10	Terminal Panel R 60	ANC2421
11	Multi Base Holder	ANG2937
12	Protector Sheet	AMR3713
13	Reuse Wire Saddle	AEC2118
14	Wire Clip	AEC1948
15	Wire Saddle	AEC1745
16	PCB Spacer	AEC1947
17	PCB Spacer (44.8)	AEC2121
⚠ 18	Gasket MTB	ANK1879
19	Screw	AMZ30P060FTB
20	Screw	TBZ40P080FTB
21	Screw	ABA1313
22	Screw	ABA1364
23	Reuse HL 28	AEC2119
24	Reuse Clamp	AEC2129

10.5 CHASSIS SECTION (2/3)



Cleaning liquid : GEM1004
Cleaning paper : GED-008

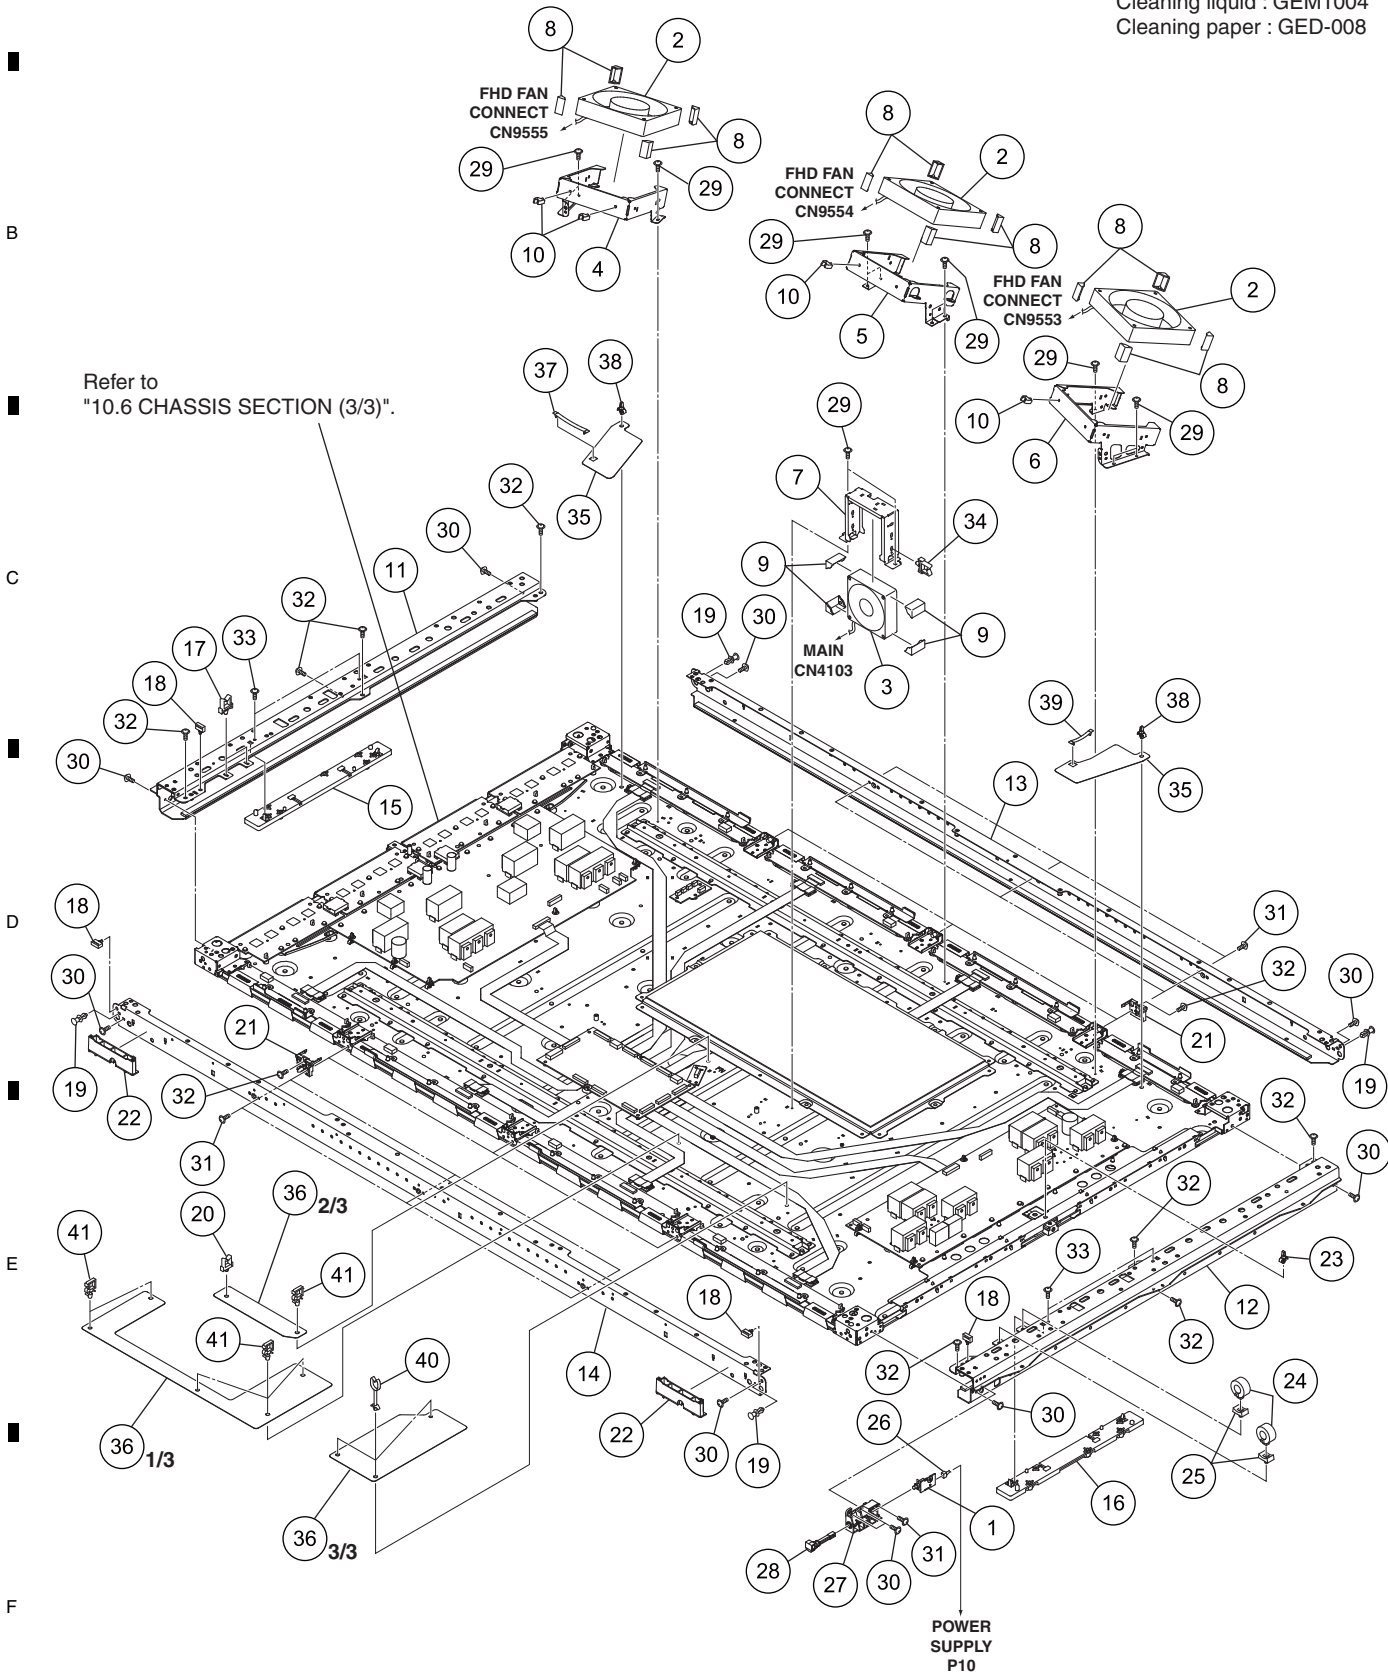

CHASSIS SECTION (2/3) PARTS LIST

Mark	No.	Description	Part No.
	1	FHD POWER SW Assy	AWW1293
⚠	2	DC Fan Motor 120 x 25L	AXM1063
⚠	3	Fan Motor 80 x 25L	AXM1058
	4	Fan Holder 120L	ANG3059
	5	Fan Holder 120C	ANG3072
	6	Fan Holder 120R	ANG3073
	7	Fan Holder	ANG2833
	8	Floating Rubber 120	AEB1459
	9	Floating Rubber 80	AEB1427
	10	Mini Clamp	AEC1967
	11	Front Chassis VL Assy 60	ANA2065
	12	Front Chassis VR Assy 60	ANA2066
	13	Front Chassis H Assy T	ANA2063
	14	Front Chassis H Assy B	ANA2064
	15	Function Button Holder	AMR3561
	16	Side Input Holder	AMR3562
	17	Reuse Wire Saddle	AEC2100
	18	Wire Clip	AEC1948
	19	Rivet	AMR1066
	20	Reuse Wire Saddle	AEC2118
	21	Front Chassis H Guide	AMR3684
	22	Front Case Support	AMR3745
	23	PCB Spacer	AEC1819
	24	Ferrite Core (L1, L2)	ATX1044
	25	Ferrite Core Holder	AEC1818
	26	Housing Wire (J103)	ADX3570
	27	Switch Holder	AMR3692
	28	Switch Pin	AMR3691
	29	Screw	ABA1313
	30	Screw	AMZ30P080FTC
	31	Screw	APZ30P100FTB
	32	Screw	AMZ30P060FTB
	33	Screw	BPZ30P080FTB
	34	Reuse Wire Saddle	AEC1945
	35	Fan Cover Sheet	AMR3739
	36	Digital Cover Sheet	AMR3736
	37	Flat Clamp 60	AEC2104
	38	PCB Spacer (Reuse)	AEC2087
	39	Flat Clamp	AEC1879
	40	Reuse HL 28	AEC2119
	41	Reuse Clamp	AEC2129

10.6 CHASSIS SECTION (3/3)

A


B

C

D

E

F

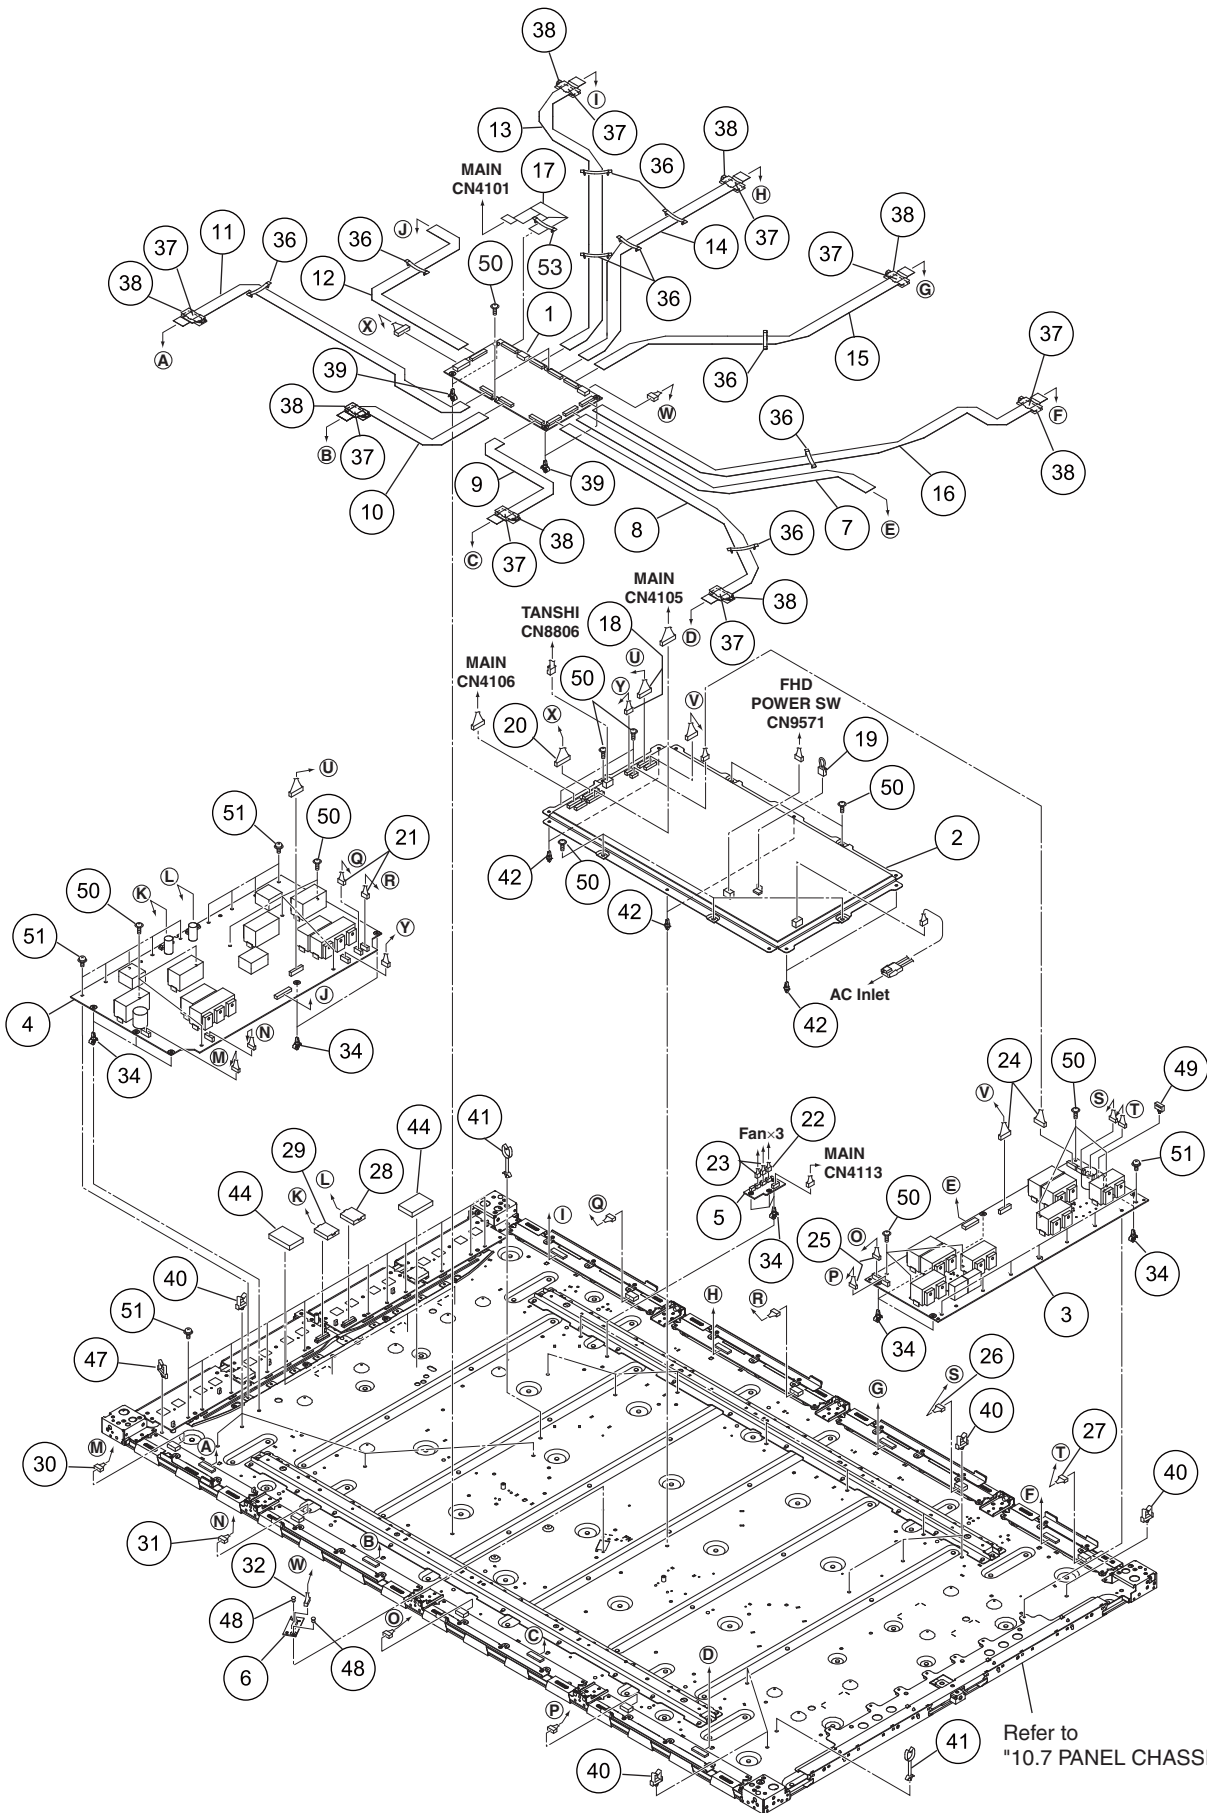


CHASSIS SECTION (3/3) PARTS LIST

Mark No.	Description	Part No.
1	60F DIGITAL Assy	AWW1308
2	POWER SUPPLY Unit	AXY1169
3	60F X DRIVE Assy	AWV2505
4	60F Y DRIVE Assy	AWV2506
5	FHD FAN CONNECT Assy	AWW1290
6	PANEL SENSOR Assy	AWW1309
7	Flexible Cable (J201)	ADD1509
8	Flexible Cable (J202)	ADD1510
9	Flexible Cable (J203)	ADD1511
10	Flexible Cable (J204)	ADD1512
11	Flexible Cable (J205)	ADD1513
12	Flexible Cable (J206)	ADD1514
13	Flexible Cable (J207)	ADD1515
14	Flexible Cable (J208)	ADD1516
15	Flexible Cable (J209)	ADD1517
16	Flexible Cable (J210)	ADD1518
17	Flexible Cable (J211)	ADD1508
18	9P&7P Housing Wire (J101)	ADX3568
19	Housing Wire (J126)	ADX3545
20	14P Housing Wire (J104)	ADX3571
21	6P&6P Housing Wire (J111)	ADX3578
22	3P Housing Wire (J123)	ADX3585
23	3P&3P Housing Wire (J124)	ADX3586
24	8P&8P Housing Wire (J102)	ADX3569
25	6P&6P Housing Wire (J108)	ADX3575
26	6P Housing Wire (J112)	ADX3579
27	6P Housing Wire (J113)	ADX3580
28	3 Piece Connector 40P (CN103)AKM1384	
29	3 Piece Connector 40P (CN104)AKM1384	
30	6P Housing Wire (J110)	ADX3577
31	6P Housing Wire (J109)	ADX3576
32	5P Housing Wire (J105)	ADX3572
33	•••••	
34	PCB Spacer (Reuse)	AEC2087
35	•••••	
36	Flat Clamp	AEC1879
37	Ferrite Core (F1 - F8)	ATX1048
38	Ferrite Clamp	AEC1986
39	PCB Spacer (4.5)	AEC2115
40	Reuse Wire Saddle	AEC2118
41	Reuse HL 28	AEC2119
42	•••••	
43	•••••	
44	Drive Silicone	AEH1139
45	•••••	

Mark No.	Description	Part No.
46	•••••	
47	Reuse Space Clamp	AEC2131
48	Nylon Rivet	AEC1671
49	Wire Clip	AEC1948
50	Screw	ABA1313
51	Screw	ABA1364
52	•••••	
53	Flat Clamp	AEC1858

10.7 PANEL CHASSIS SECTION

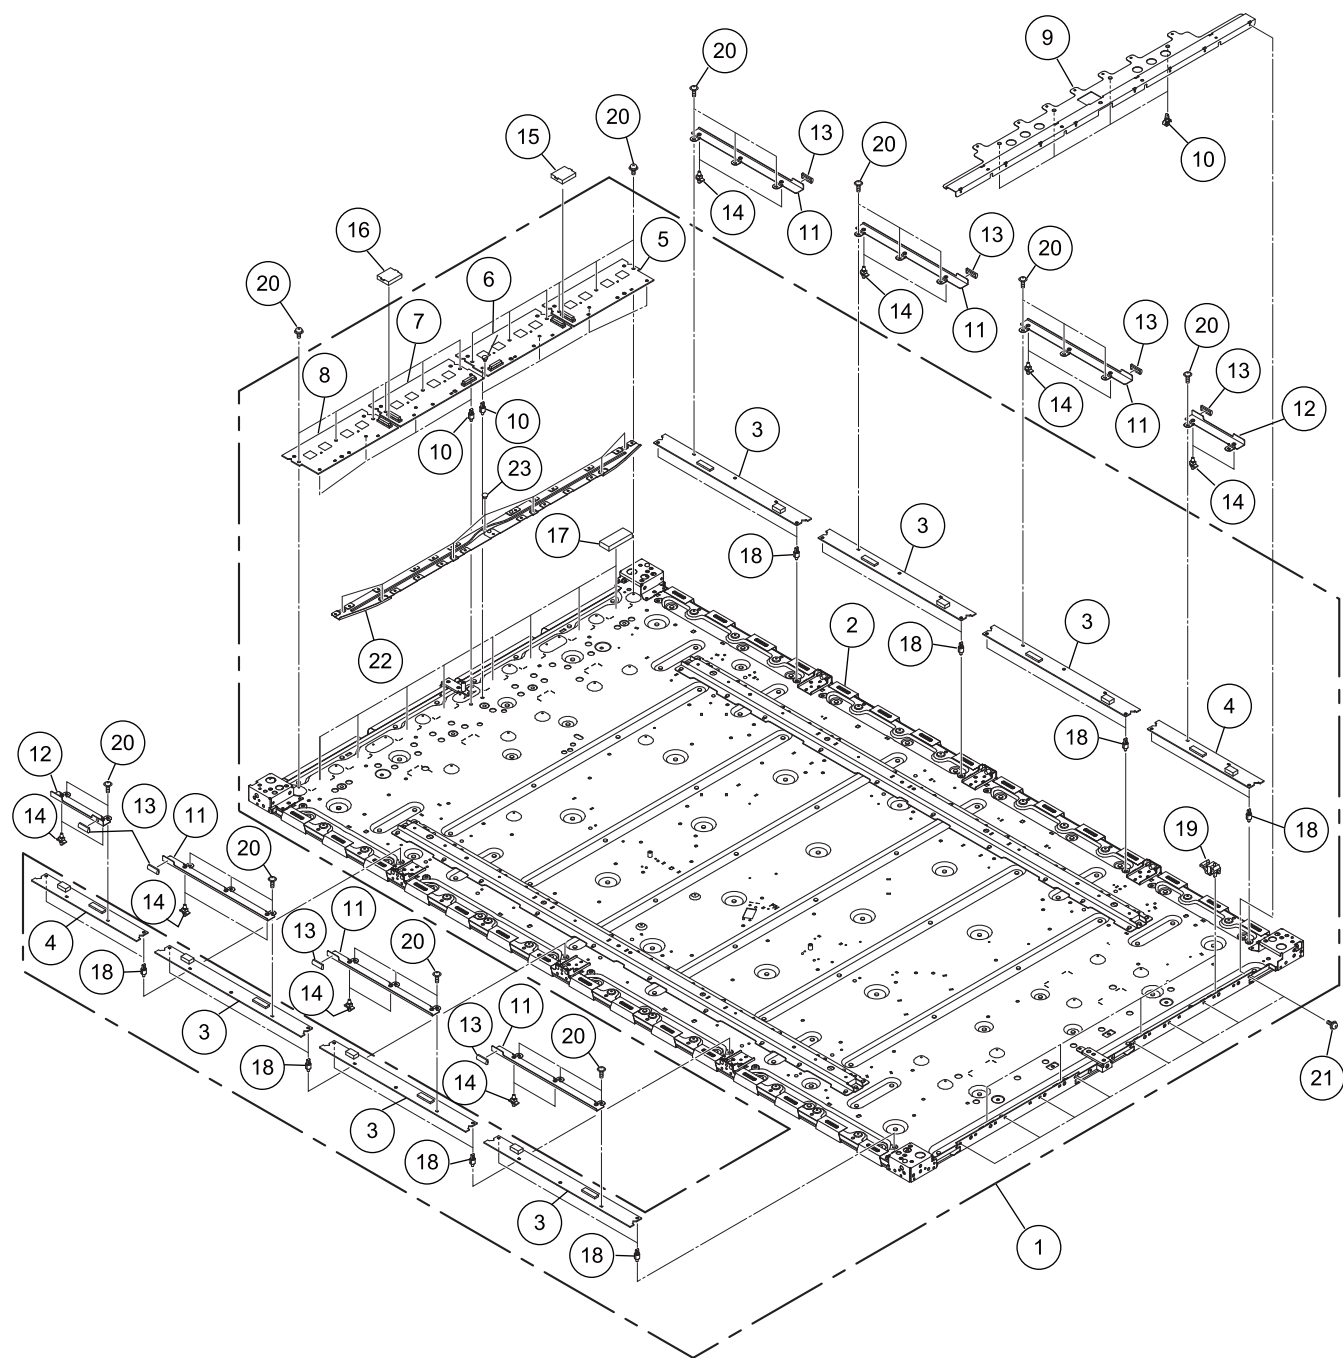

PANEL CHASSIS SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP 1	Panel Chassis (608F) Assy	AWU1238
NSP 2	Plasma Panel (60F) Assy	AWU1236
NSP 3	60F ADDRESS L Assy	AWW1317
NSP 4	60F ADDRESS S Assy	AWW1318
NSP 5	60F SCAN A Assy	AWW1319
NSP 6	60F SCAN B Assy	AWW1320
NSP 7	60F SCAN C Assy	AWW1321
NSP 8	60F SCAN D Assy	AWW1322
9	Conductive Plate X	ANG3057
10	PCB Spacer (Reuse)	AEC2087
⚠ NSP 11	Address Plate A	ANG3076
⚠ NSP 12	Address Plate B	ANG3077
⚠ 13	Address Gasket	ANK1947
14	PCB Spacer (Reuse)	AEC2122
15	3 Piece Connector 40P (CN101)	AKM1384
16	3 Piece Connector 40P (CN102)	AKM1384
17	Scan Silicone	AEH1135
18	PCB Spacer	AEC1947
19	Conductive Plate Holder	AMR3446
20	Screw	ABA1351
21	Screw (M3x6)	ABA1366
22	Conductive Plate Y	ANG3058
23	Spacer (4.5)	AEC2116

10.8 MULTI BASE SECTION

A


B

C

D

E

F

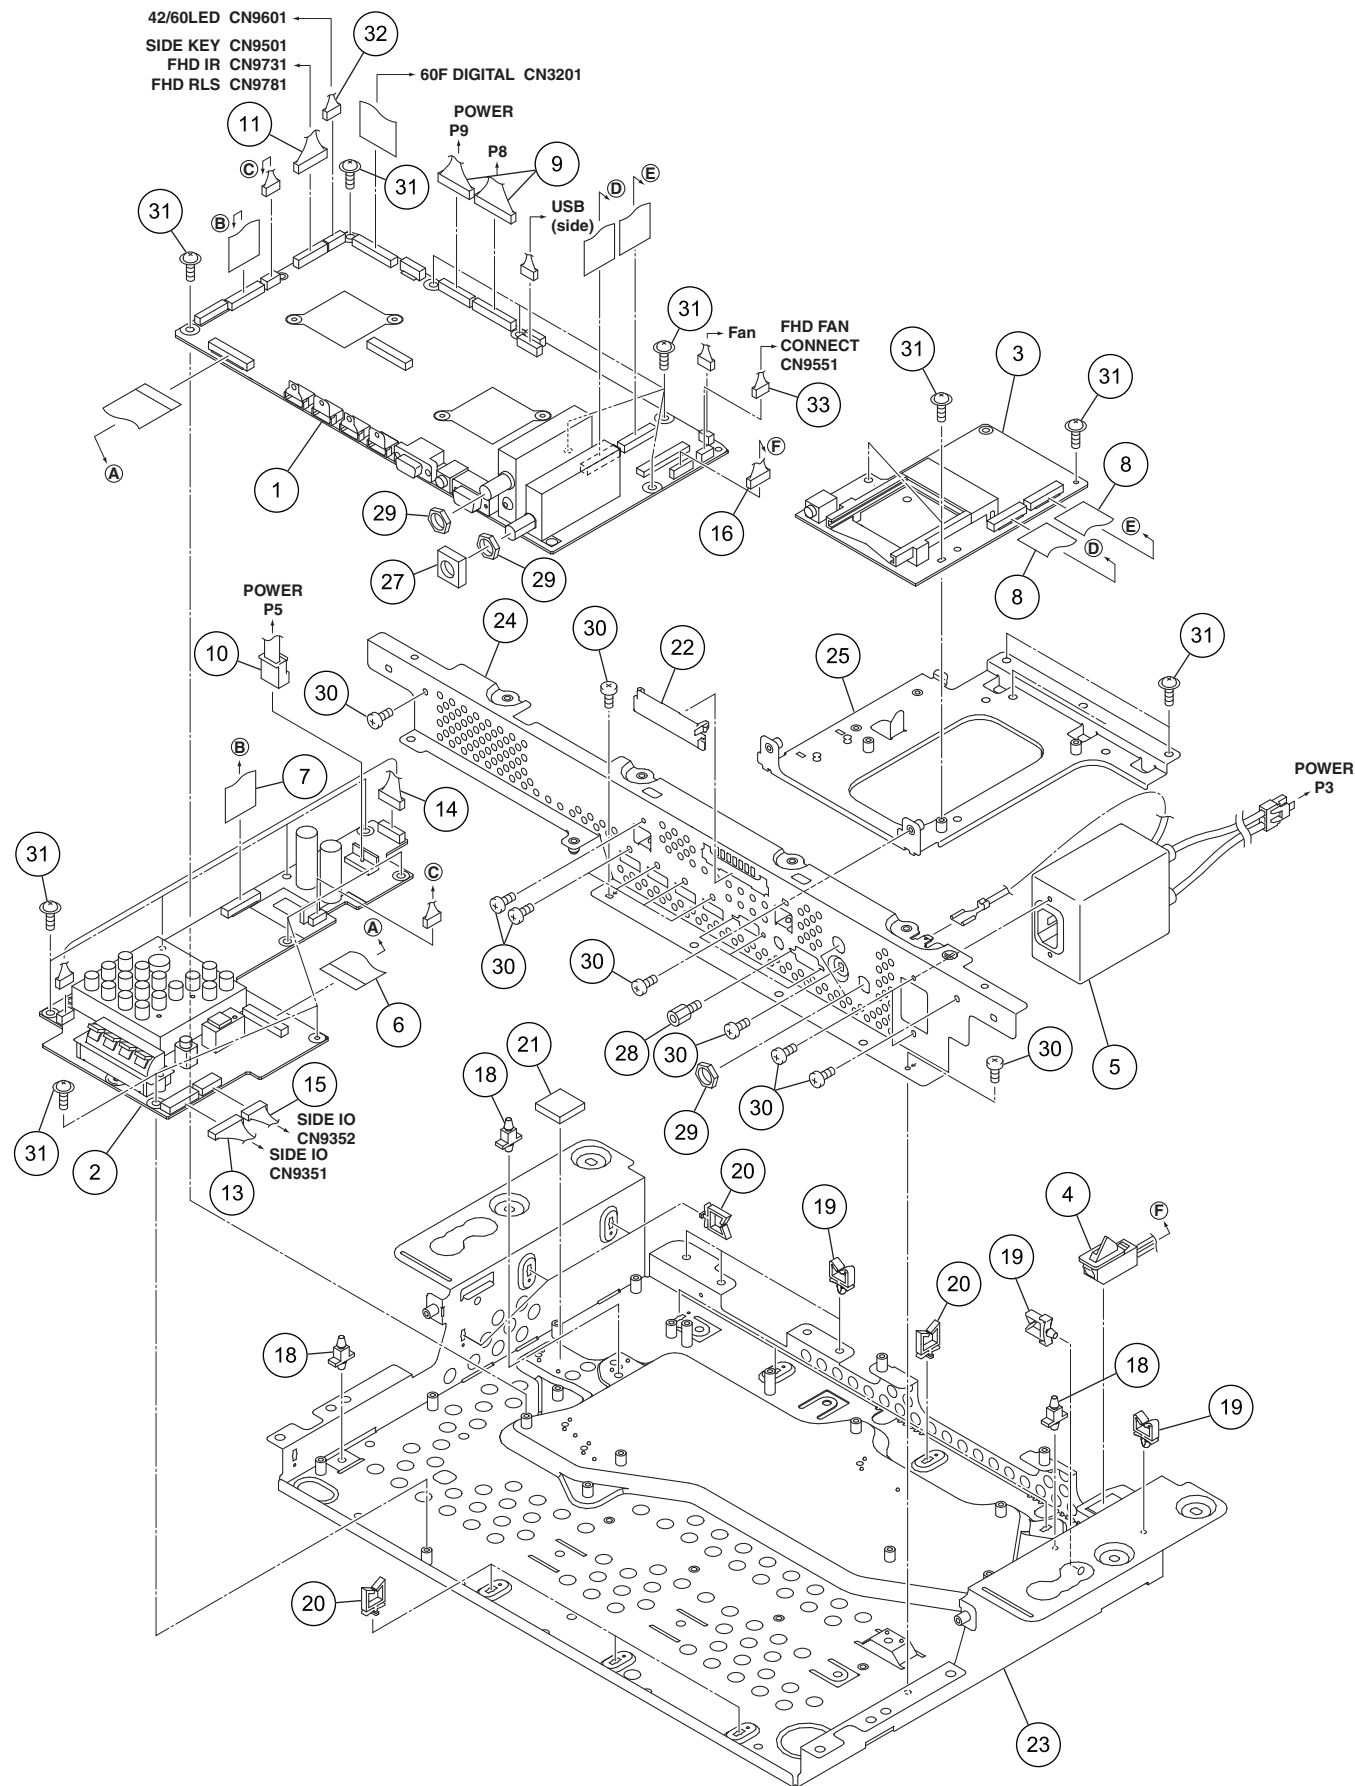


MULTI BASE SECTION PARTS LIST

Mark No.	Description	Part No.
⚠ 1	MAIN Assy	AWV2457
2	TANSHI Assy	AWW1334
3	POD Assy	AWW1295
⚠ 4	Power Switch (S2 : TRAP)	ASG1089
⚠ 5	AC Inlet (CN1)	AKP1323
6	Flexible Cable (J212)	ADD1441
7	Flexible Cable (J213)	ADD1491
8	Flexible Cable (J214, J215)	ADD1519
9	12P&15P Housing Wire (J106)	ADX3573
10	5P Housing Wire (J107)	ADX3574
11	11/6/3/4P Housing Wire (J114)	ADX3581
12	•••••	
13	11P Housing Wire (J118)	ADX3601
14	8P/4P Housing Wire (J119)	ADX3531
15	7P Housing Wire (J125)	ADX3602
16	3P Housing Wire (J127)	ADX3546
17	•••••	
18	Locking Card Spacer	AEC1429
19	Wire Saddle	AEC1745
20	Reuse Wire Saddle	AEC1945
21	Silicone Sheet Audio	AEH1143
22	POD Cover	AMR3542
23	Multi Base Assy (U)	ANA2102
24	Terminal Panel A (U)	ANC2440
25	POD Stay A	ANG2933
26	•••••	
27	Gasket UD	ANK1883
28	Hex. Head Screw	BBA1051
29	Washer Faced Nut	BBN1005
30	Screw	BMZ30P060FTB
31	Screw	PMB30P080FNI
32	6P Housing Wire (J115)	ADX3582
33	4P Housing Wire (J122)	ADX3584

10.9 PDP SERVICE ASSY 608F (AWU1274)

● Exterior Section

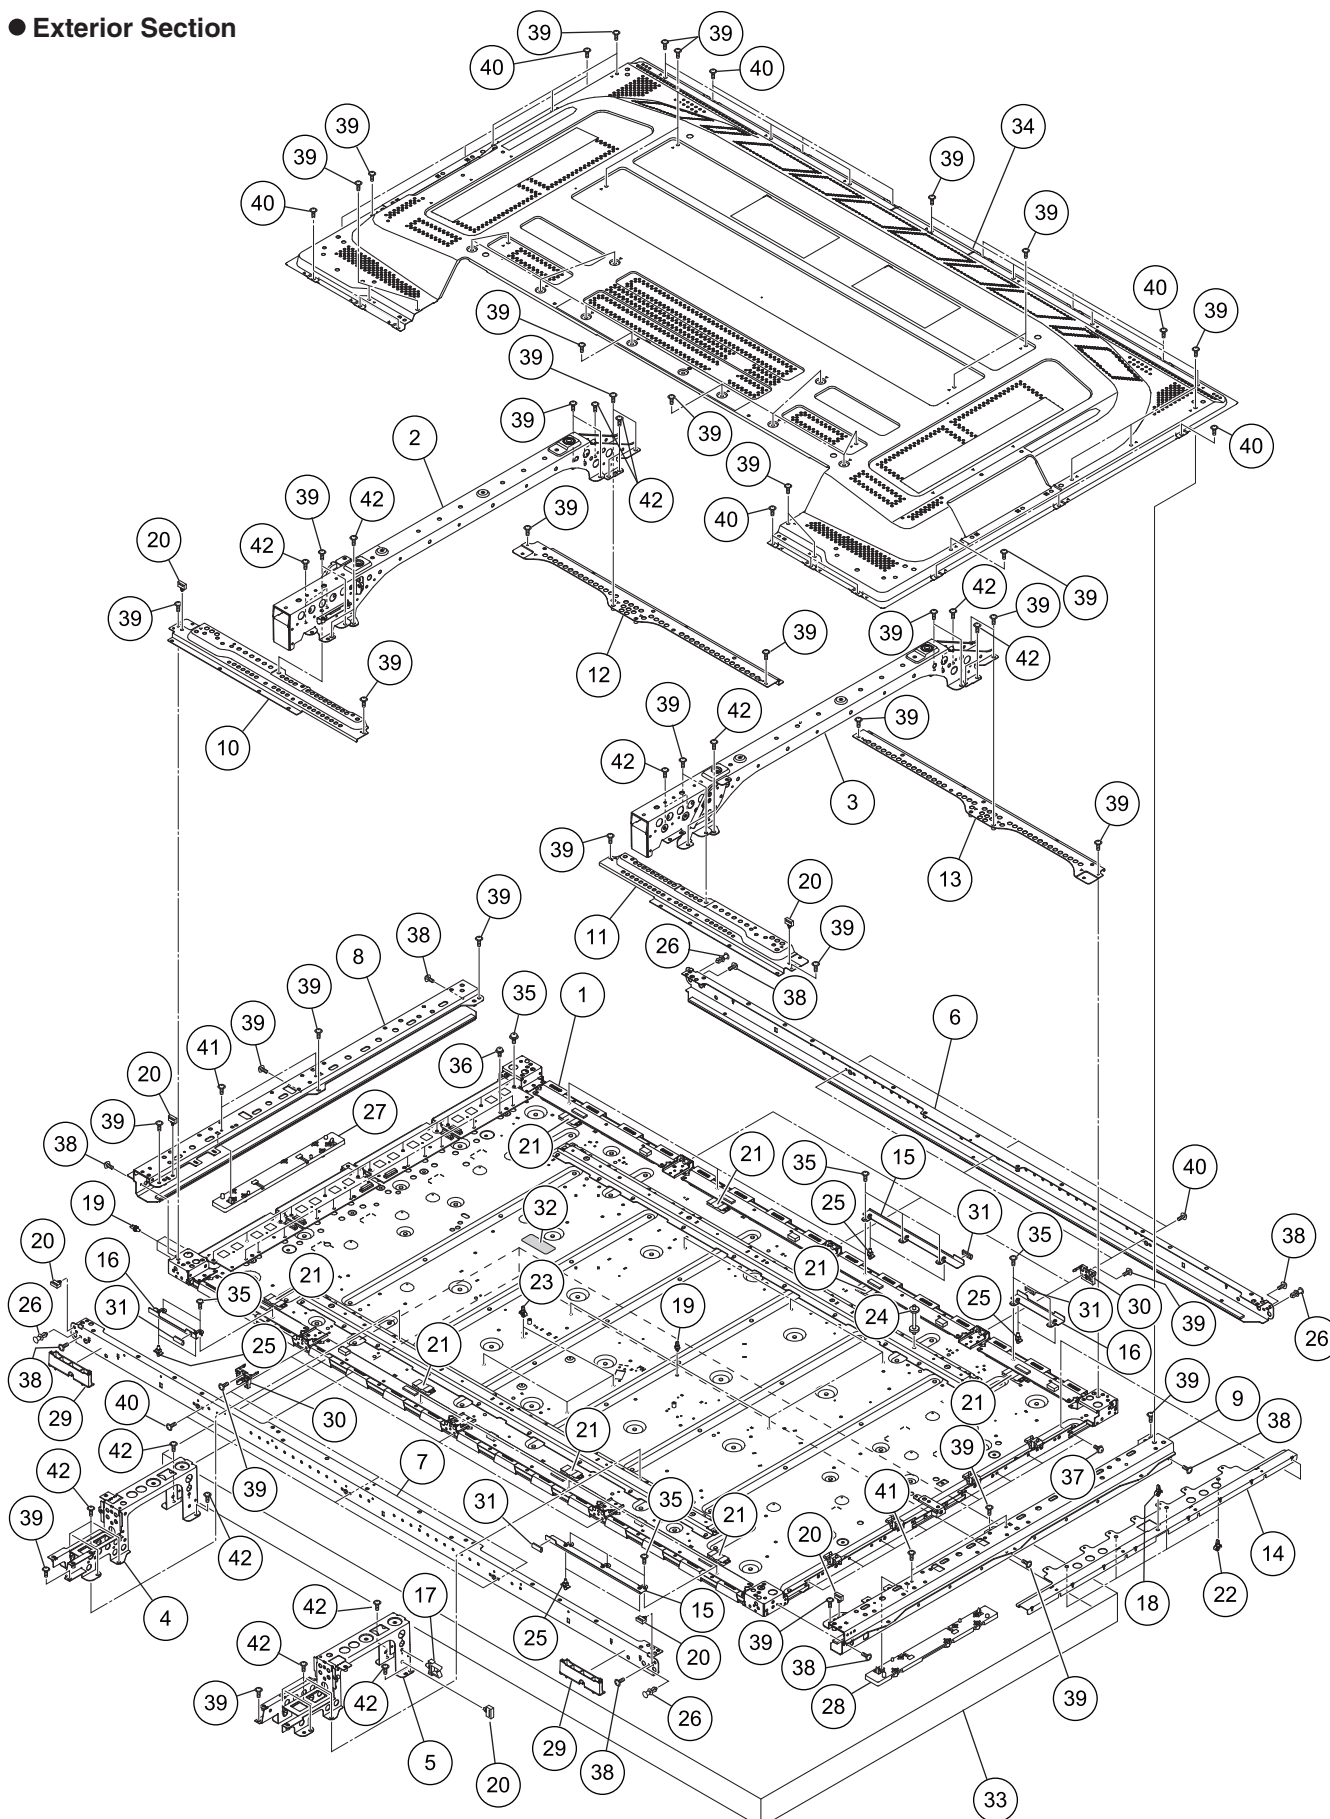


● Packing Section

Refer to the "• Exterior Section" for the mounting position.

(19) ×13 (20) ×6 (21) ×8


(23) ×4 (24) ×1

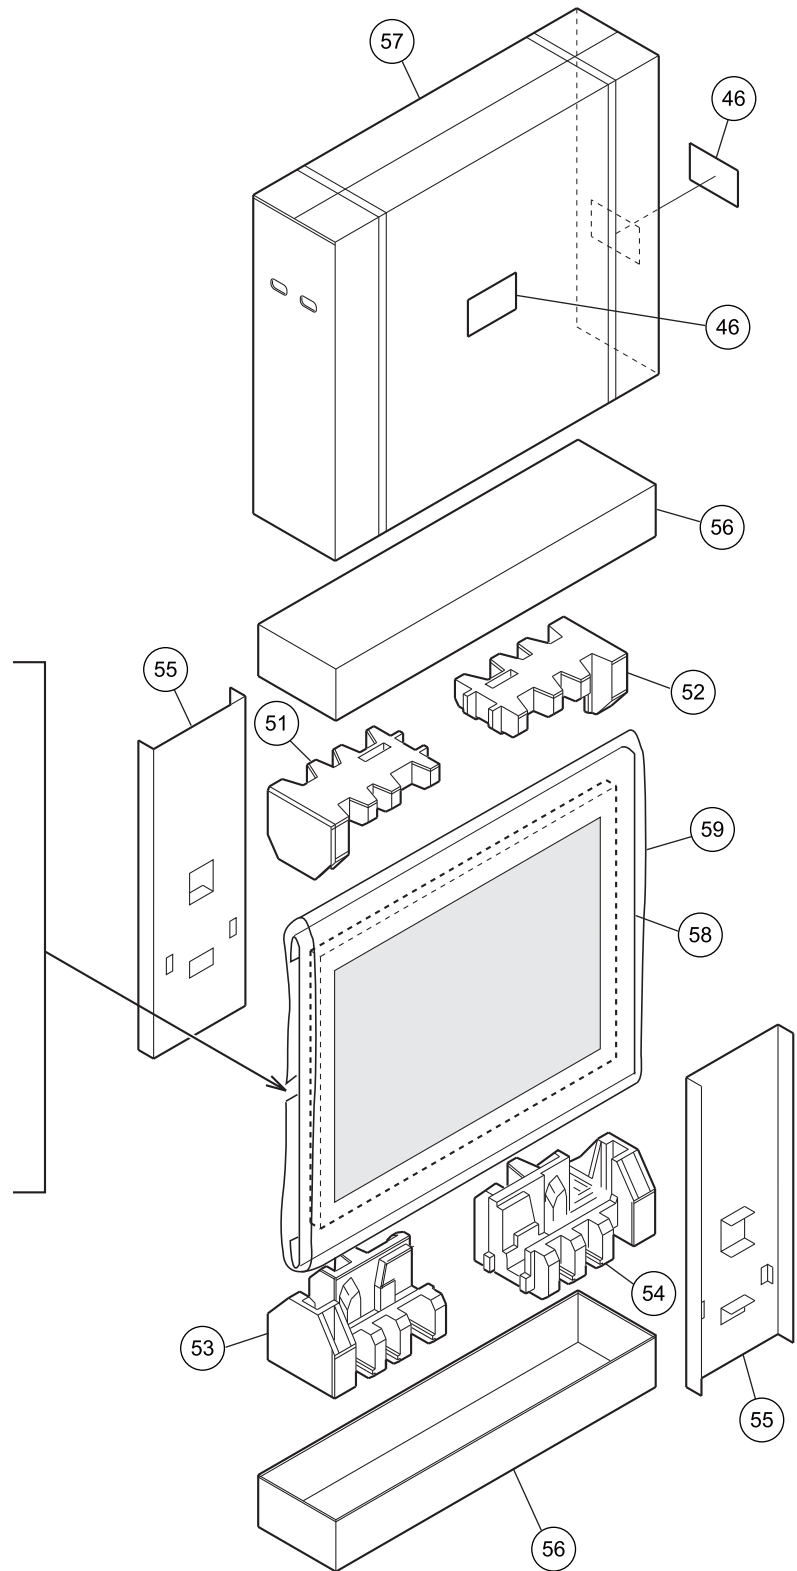

PDP SERVICE ASSY 608F PARTS LIST

	Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	NSP 1	Panel Chassis (608F) Assy	AWU1238	46	Caution Label	AAX3031
	2	Sub Frame L Assy 607	ANA1966	47	•••••	
	3	Sub Frame R Assy 607	ANA1965	48	•••••	
	4	Multi Base Frame L	ANA1970	49	Vinyl Bag S	AHG1338
	5	Multi Base Frame R	ANA1969	50	•••••	
B	6	Front Chassis H Assy T	ANA2063	51	Pad (607 T-L)	AHA2562
	7	Front Chassis H Assy B	ANA2064	52	Pad (607 T-R)	AHA2563
	8	Front Chassis VL Assy 60	ANA2065	53	Pad (607 B-L)	AHA2564
	9	Front Chassis VR Assy 60	ANA2066	54	Pad (607 B-R)	AHA2565
	10	Under Support Assy L	ANA2123	55	Reinforce Carton (607)	AHC1084
C	11	Under Support Assy R	ANA2124	56	Under Carton (607)	AHD3486
	12	Upper Support L	ANG3052	57	Upper Carton (607 service)	AHD3564
	13	Upper Support R	ANG3053	58	Protect Sheet	AHG1401
	14	Conductive Plate X	ANG3057	59	Mirror Mat	AHG1402
	NSP 15	Address Plate A	ANG3076			
D	NSP 16	Address Plate B	ANG3077			
	17	Wire Saddle	AEC1745			
	18	PCB Spacer	AEC1819			
	19	PCB Spacer	AEC1947			
	20	Wire Clip	AEC1948			
E	21	Ferrite Clamp	AEC1986			
	22	PCB Spacer (reuse)	AEC2087			
	23	PCB Spacer (4.5)	AEC2115			
	24	PCB Spacer (44.8)	AEC2121			
	25	PCB Spacer (reuse)	AEC2122			
F	26	Rivet	AMR1066			
	27	Function Button Holder	AMR3561			
	28	Side Input Holder	AMR3562			
	29	Front Case Support	AMR3745			
	30	Front Chassis H Guide	AMR3684			
G	31	Address Gasket	ANK1947			
	NSP 32	Drive Voltage Label	ARW1097			
	NSP 33	Front Case Assy (608 service)	AMB3057			
	34	Rear Case (608)	ANE1664			
	35	Screw	ABA1351			
H	36	Screw	ABA1364			
	37	Screw (M3 x 6)	ABA1366			
	38	Screw	ABZ30P080FTC			
	39	Screw	AMZ30P060FTB			
	40	Screw	APZ30P100FTB			
I	41	Screw	BPZ30P080FTB			
	42	Screw	TBZ40P080FTB			
	43	•••••				
	44	•••••				
	45	•••••				


10.10 SPEAKER SYSTEM (PACKING)

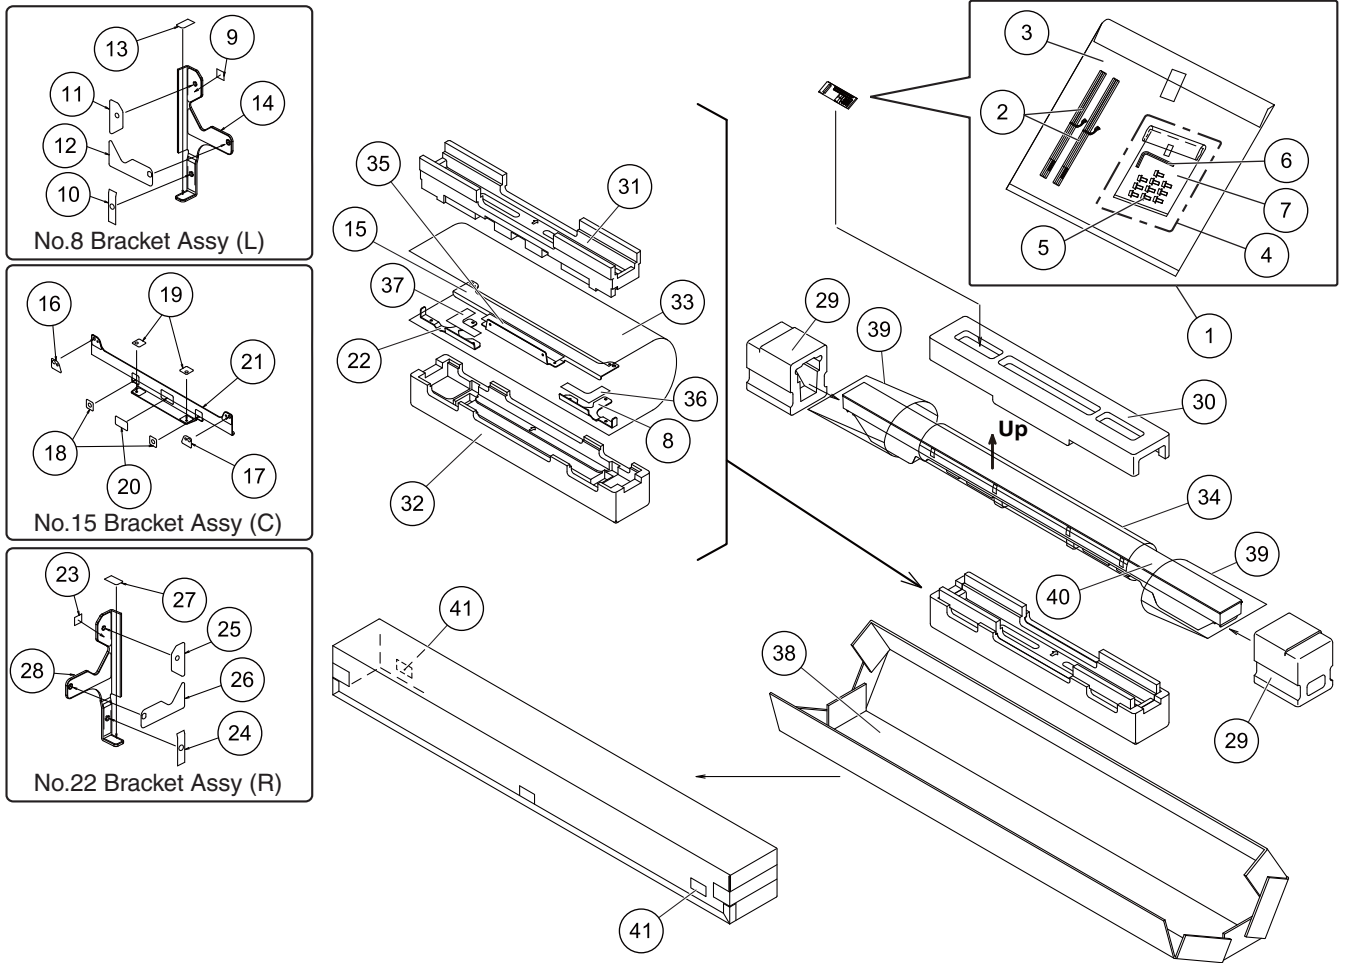

SPEAKER SYSTEM (PACKING) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	1..Accessory Set	SME3781	22	1..Bracket Assy (R)	SXG1132
2	2..Speaker Wire	SDS1202	NSP 23	2..Label (R)	SAK1025
3	2..Polyethylene Bag S1	SHL1439	24	2..Gasket	SED1138
NSP 4	2..Screw Set	SME3807	25	2..Gasket	SED1149
5	3..Screw	SBA1269	26	2..Gasket	SED1150
6	3..Hexagon Lench	SEX1028	27	2..Gasket	SED1157
7	3..Polyethylene Bag S0	SHL1438	NSP 28	2..Bracket R	SNA1479
8	1..Bracket Assy (L)	SXG1130	29	Protector (Side)	SHA2581
NSP 9	2..Label (L)	SAK1024	30	Protector (C-T)	SHA2582
10	2..Gasket	SED1138	31	Protector (C-M)	SHA2583
11	2..Gasket	SED1147	32	Protector (C-B)	SHA2584
12	2..Gasket	SED1148	33	Protection Sheet S5	SHC1850
13	2..Gasket	SED1157	34	Protection Sheet S3	SHC1851
NSP 14	2..Bracket L	SNA1478	35	Protection Sheet (C)	SHC1859
15	1..Bracket Assy (C)	SXG1131	36	Protection Sheet (L)	SHC1860
16	2..Gasket	SED1160	37	Protection Sheet (R)	SHC1861
17	2..Gasket	SED1161	38	Packing Case	SHG2781
18	2..Gasket	SED1162	39	Packing Bag S2	SHL1450
19	2..Gasket	SED1163	NSP 40	CS Assy	SMW1988
20	2..Gasket	SED1164	NSP 41	Serial Label	SRW1112
NSP 21	2..Bracket C	SNA1480			

10.11 CS ASSY

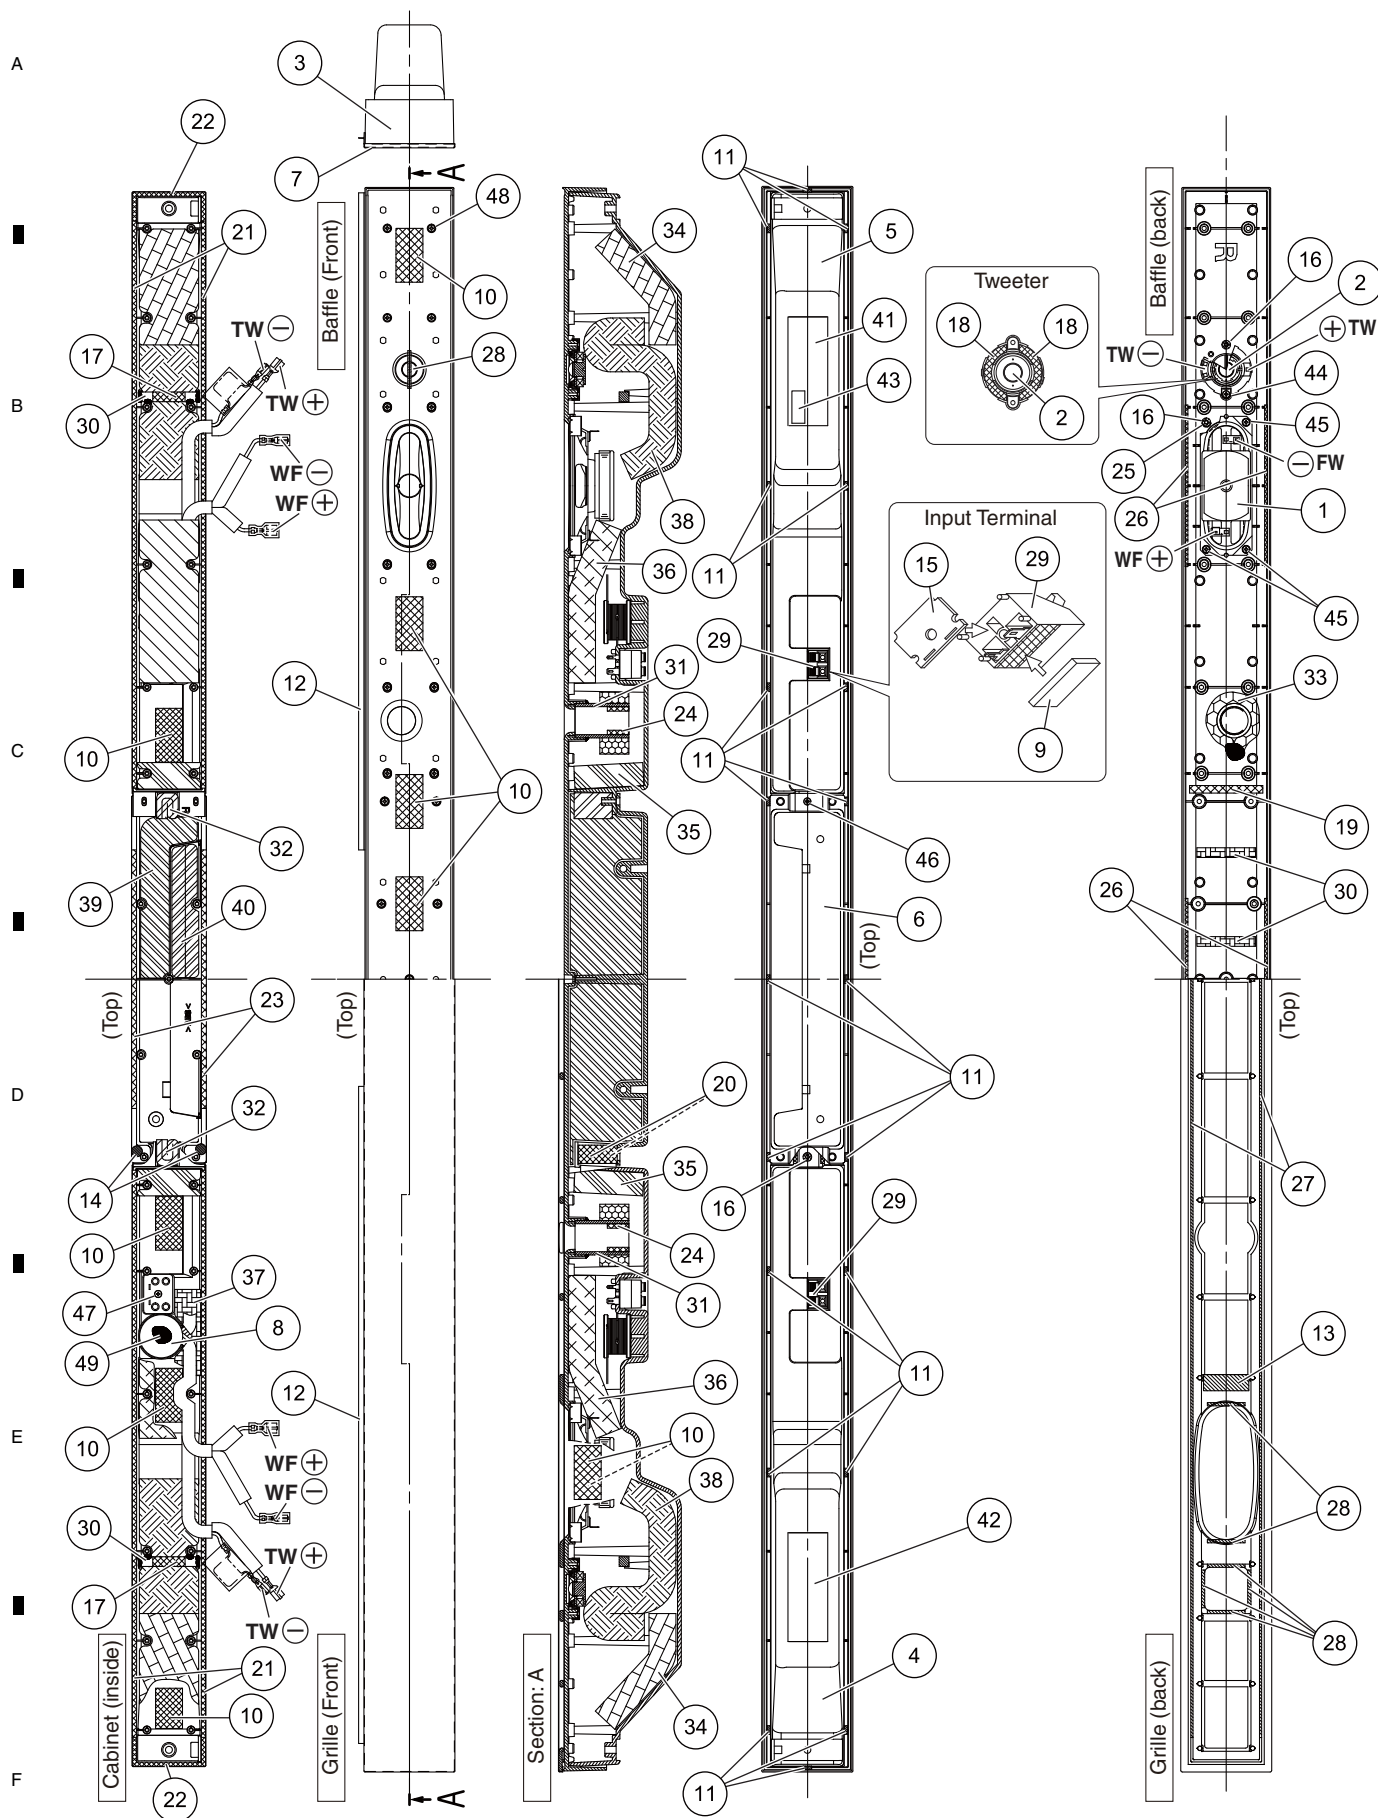

CS ASSY PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Speaker	H132DC65-51D	44	Screw	BPZ30P080FTC
2	Speaker	FK26AP32-55H	45	Screw	BPZ35P080FTC
NSP 3	Baffle	SNK2981	46	Screw	BPZ35P120FTB
NSP 4	Cabinet Assy L	SXG1123	47	Screw	BPZ35P120FTC
NSP 5	Cabinet Assy R	SXG1124	48	Screw	BPZ35P140FTB
NSP 6	Cabinet Assy C	SXG1129	49	Screw	BPZ40P350FTC
7	Grille	SMG1887			
8	1..Network Assy	SWN1787			
	2..Capacitor 1.5	SCE1034			
	2..Choke Coil 0.68	STH1266			
NSP 9	Gasket	SEB1299			
NSP 10	Gasket	SEB1300			
11	Packing	SEB1302			
NSP 12	Blinder	SEB1304			
NSP 13	Gasket	SEB1320			
NSP 14	Packing	SEB1321			
NSP 15	Gasket	SEC2074			
16	Gasket	SEC2076			
NSP 17	Gasket	SEC2078			
18	Gasket	SEC2083			
NSP 19	Gasket	SEC2092			
NSP 20	Gasket	SEC2093			
NSP 21	Gasket	SEC2113			
NSP 22	Gasket	SEC2114			
NSP 23	Gasket	SEC2154			
NSP 24	Felt	SED1127			
NSP 25	Felt	SED1130			
NSP 26	Gasket	SED1156			
27	Tape	SEH1095			
28	Tape	SEH1099			
29	Input Terminal	SKX1098			
NSP 30	MDF Bar	SLX1165			
NSP 31	Paper Tube 26	SMR1403			
NSP 32	Acoustic Absorbent	SMT1328			
NSP 33	Acoustic Absorbent	SMT1331			
NSP 34	Acoustic Absorbent	SMT1333			
NSP 35	Acoustic Absorbent	SMT1335			
NSP 36	Acoustic Absorbent	SMT1357			
NSP 37	Acoustic Absorbent	SMT1358			
NSP 38	Acoustic Absorbent	SMT1359			
NSP 39	Acoustic Absorbent	SMT1360			
NSP 40	Acoustic Absorbent	SMT1361			
NSP 41	Model Label	SAN3956			
NSP 42	Caution Label	SRR1024			
NSP 43	Serial Label	SRW1111			

- 1 - 2 - 3 - 4 -

A

■

B

■

C

■

D

■

E

■

F

Changed contents

Mark	Date	Rev. No.	SM Correction No.	Revision	Page
1	20-Jan-09	002	SCH08025	Correct numbers of the following parts. EXPLODED VIEWS/PACKING SECTION/3 Battery Cover	167